

INSTALLATION INSTRUCTIONS

FT52 Ring & Lid for Floating Floors Installation Instructions

Component / Configuration Reference

MODEL NUMBER

Hurricane Triumph-FL; Tempest
Triumph-FL

GUIDE LEVEL

Component / Configuration

DOCUMENT STATUS

Customer Reference Copy



Helpful Installation Note

This guide is provided for information and planning purposes. Product designs and installation requirements may change over time. Before beginning installation, please review the instructions included with your product and confirm that you are using the most current product-specific instructions. If there is any difference, follow the current instructions supplied with the product.

Need help confirming the correct guide? Contact Rubber Mulch Outlet.

Ring & Lid for Floating Floors

Installation Instructions

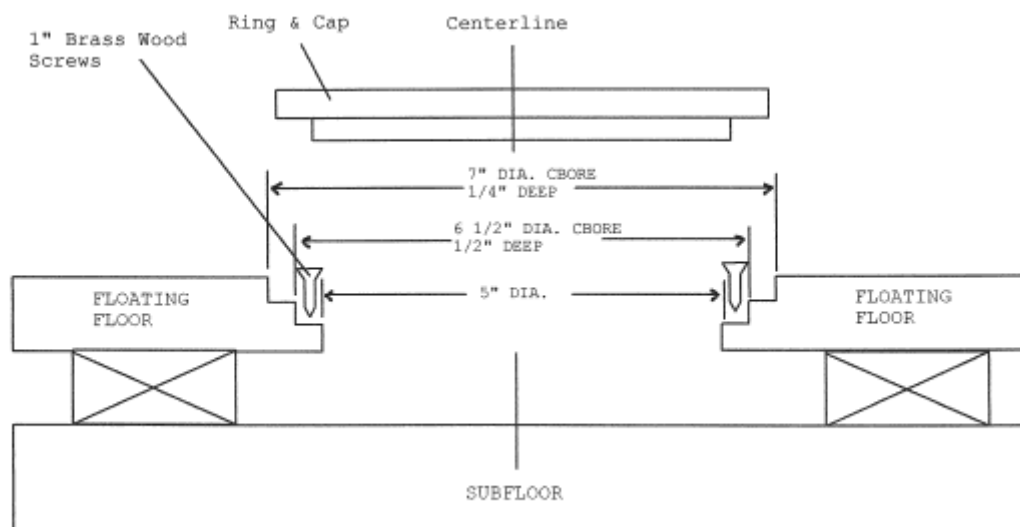


FIGURE A

Bill of Materials

- A (1) 7" Brass Ring
- B (1) 6" Brass Cap
- C (4) 1" Brass Wood Screw

NOTE: Immediately unpack all components and cross check against bill of materials.

RING AND CAP INSTALLATION ON TYPICAL GROUND LEVEL FLOATING WOOD FLOORS

Locate Cap centerlines on floor based upon your equipment and application.

Drill 5" diameter hole through floating floor. Counterbore a 6 1/2" diameter hole 1/2" deep and a 7" diameter hole 1/4" deep.

Using the (4) 1" brass wood screws provided, install top ring and cap as shown in Figure .

