

Casa Grande

Installation Guide

PKP321P / PKP321N | Quick Ship

Manufacturer model reference: 260831-GB-2-CR001

Product-specific technical document

Before installation

This guide is provided for information and planning purposes. Product designs and installation requirements may change over time. Before beginning installation, please review the instructions included with your product and confirm that you are using the most current product-specific instructions. If there is any difference, follow the current instructions supplied with the product.

White-label edition prepared September 12, 2026.


Source technical instructions and source dates retained on the following pages.

Inground Post/Mount Installation

STEP:1


**DO NOT CEMENT POSTS/MOUNTS
INTO PLACE UNTIL THE ENTIRE
STRUCTURE IS ASSEMBLED.**

Refer to the General Installation
guide footing size installation and
digging proper holes for the
support posts/mounts.

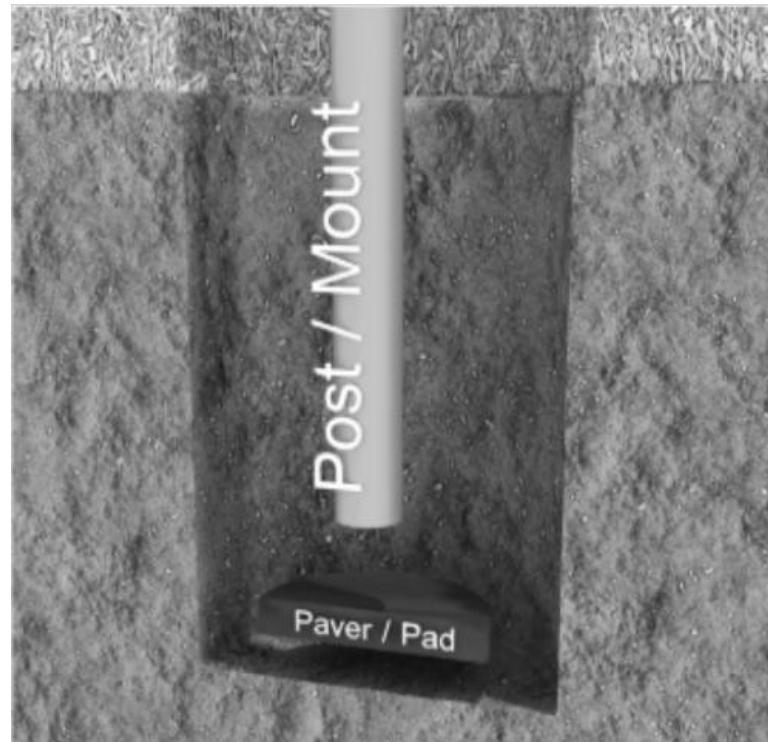


Square Deck Installation - (3.5" Post)

Item Name	ID	Quantity
Square Deck	Cmpnt	1
M10*35 Bolt	1	4
M10 Washer	2	8
M10 Lock Nut	3	4

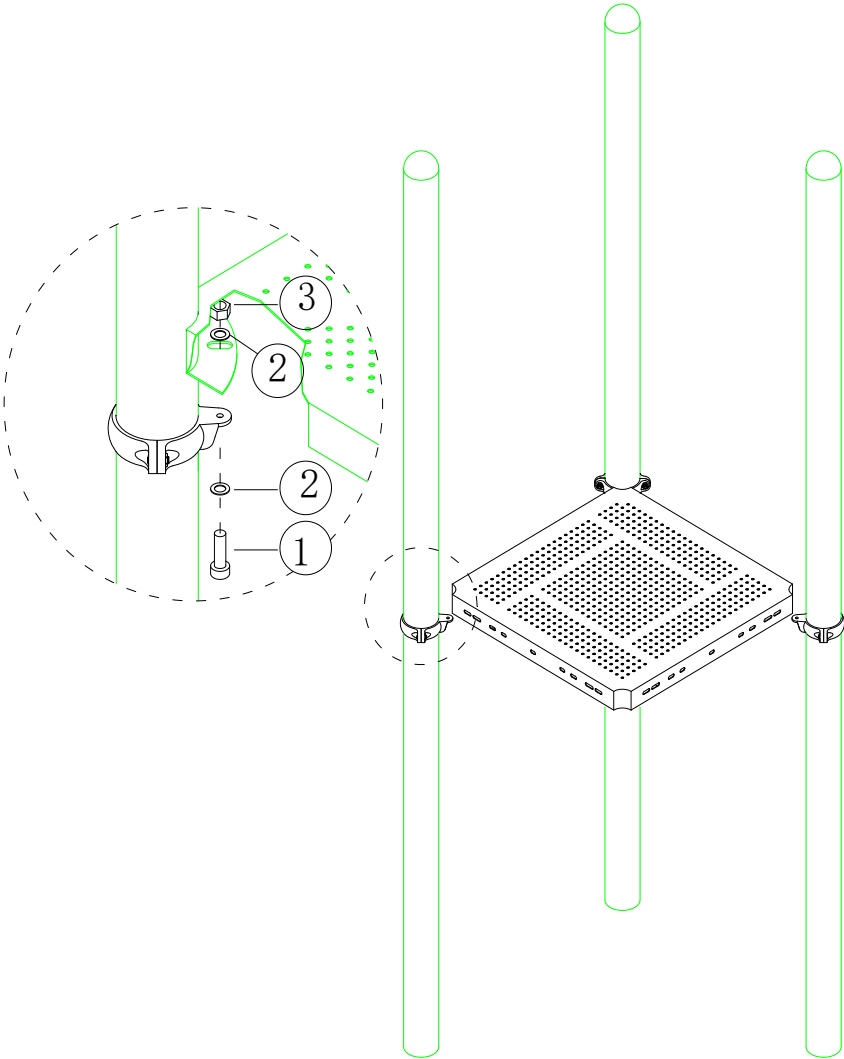


Half Hex Deck Installation - (3.5" Post)

Item Name	ID	Quantity
Half Hex Deck	Cmpnt	1
M10*35 Bolt	1	4
M10 Washer	2	8
M10 Lock Nut	3	4

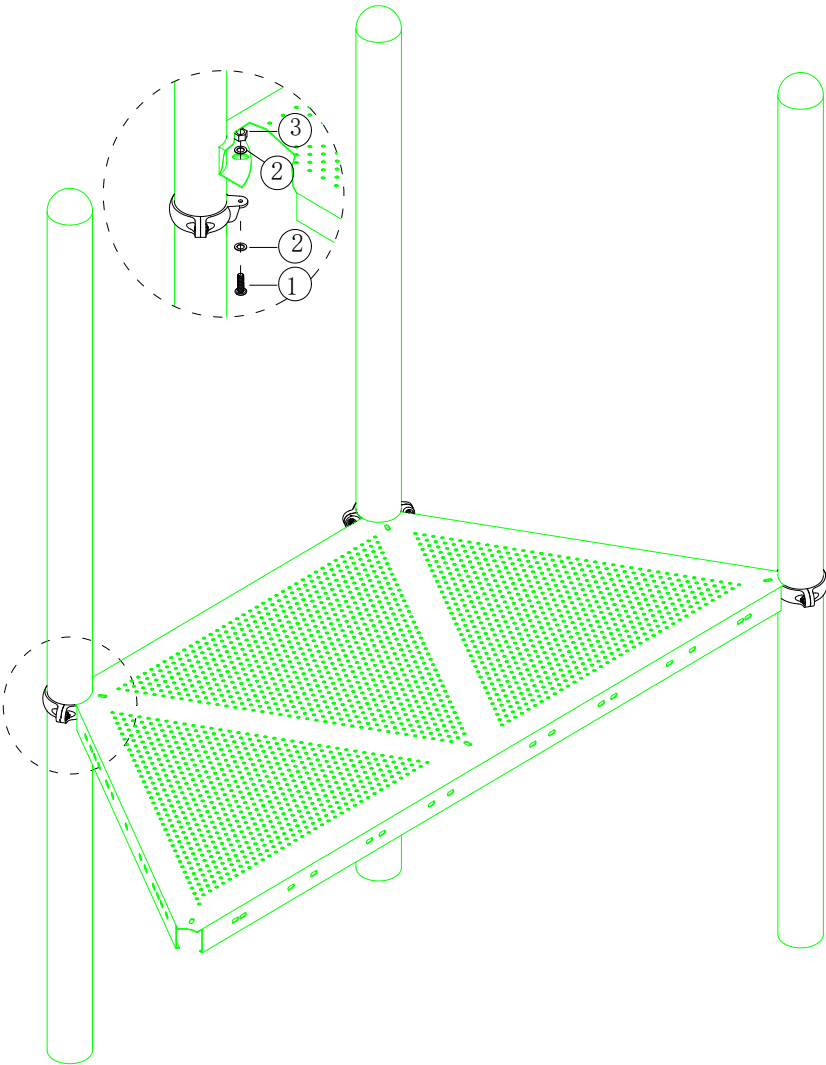


Transfer Stair Rail Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Stair Rail	Cmpnt	1
Tube Clamp	1	2
M8*25 Bolt	2	2
M10*30 Bolt	3	6
M10 Washer	4	12
M10 Lock Nut	5	6

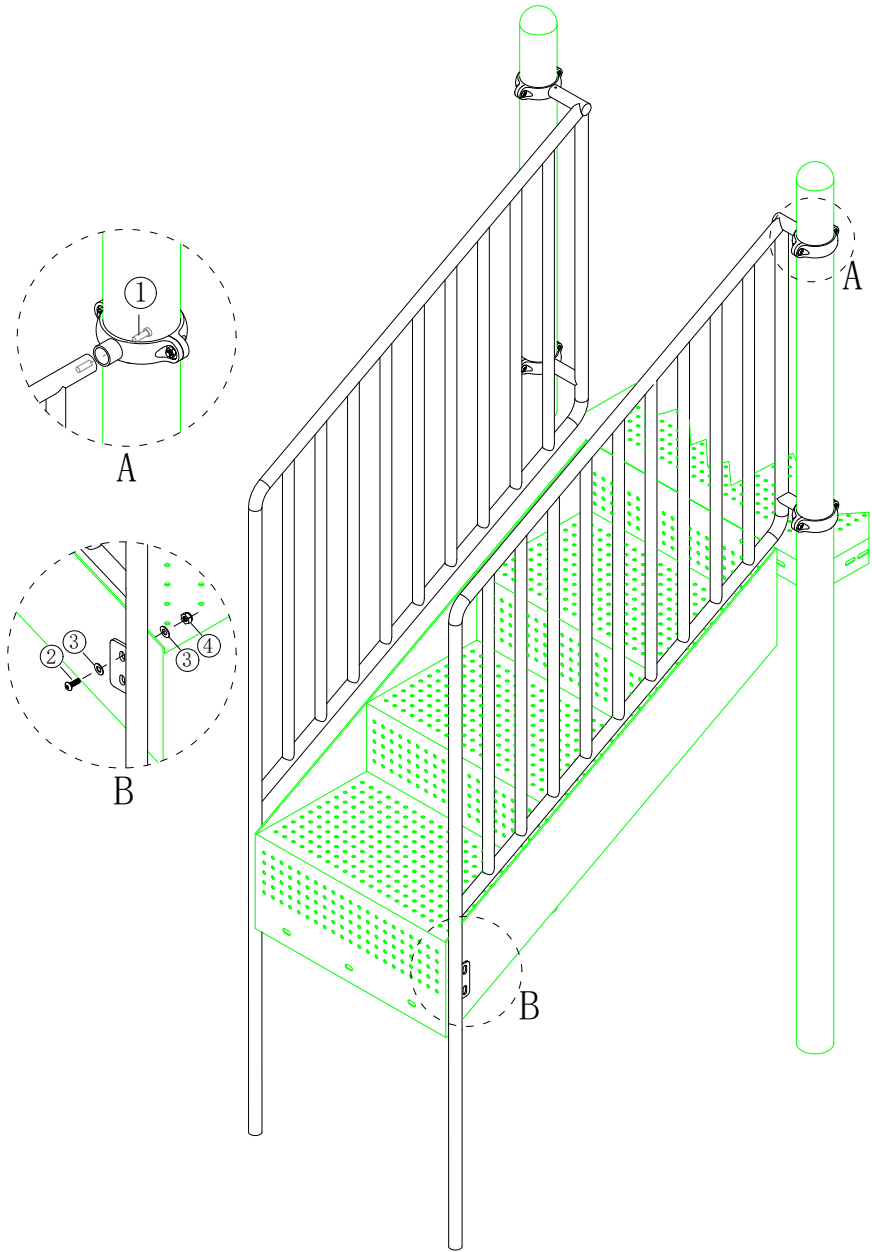


Transfer Deck Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Deck	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

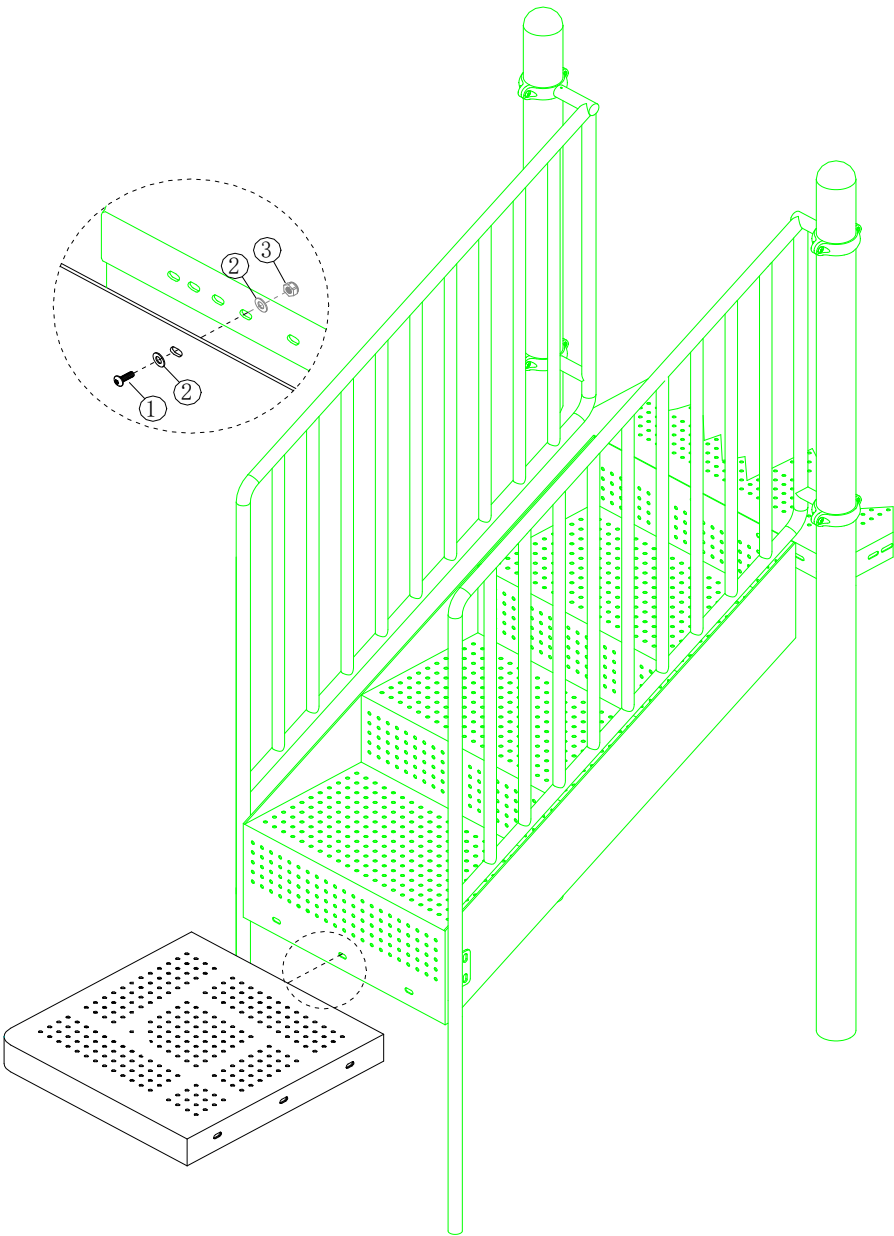


Transfer Deck Rail Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Deck Rail	Cmpnt	1
M10*70 Bolt	1	2
M10*25 Bolt	2	2
M10 Washer	3	6
M10 Lock Nut	4	4

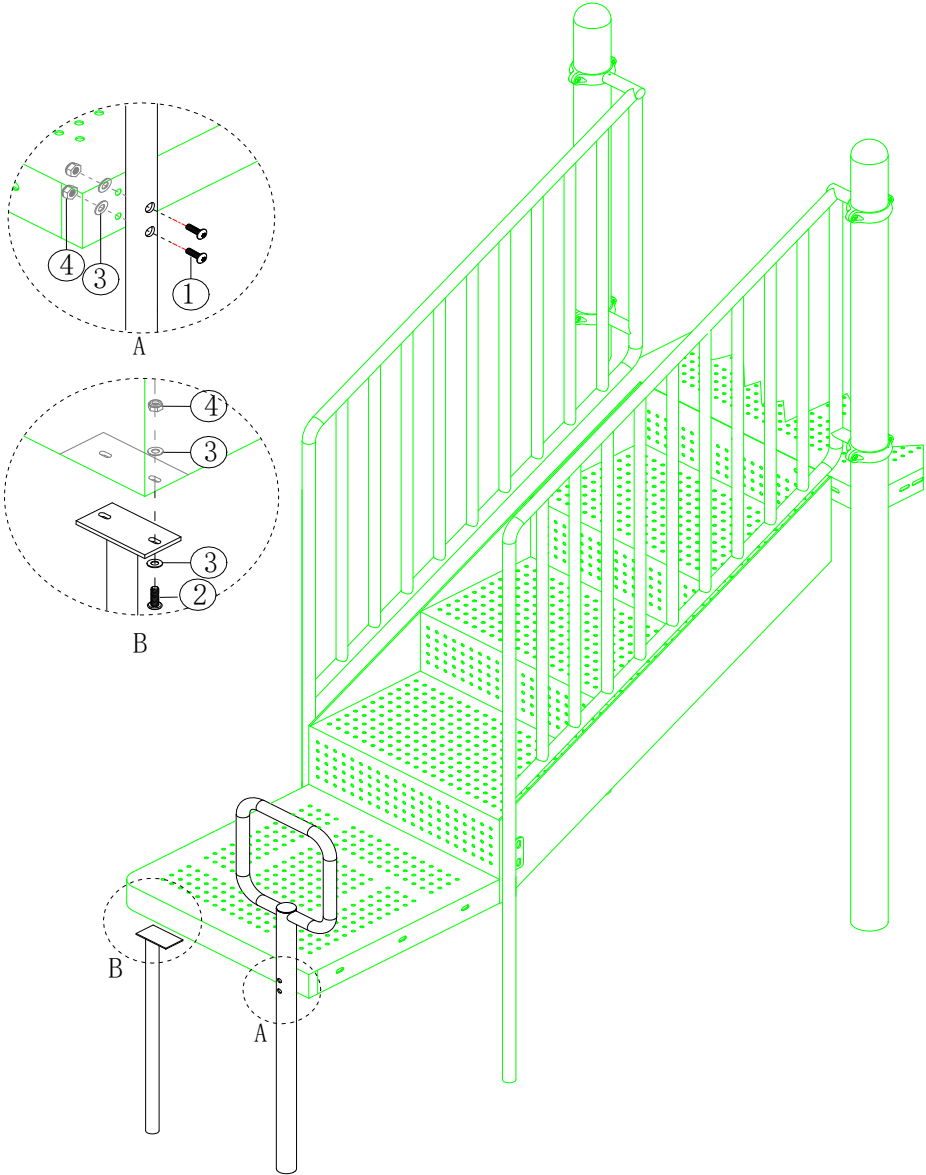


Transfer Step Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Step	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

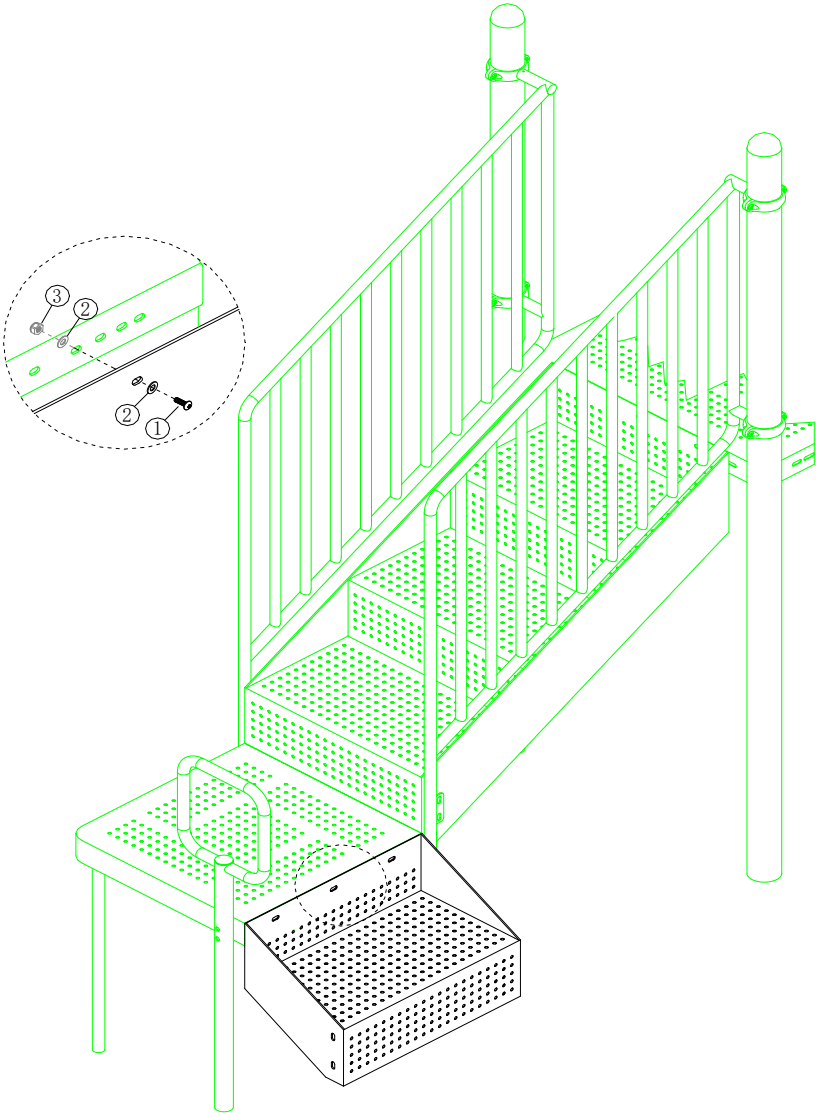


Transfer Step Infoot Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Step Infoot	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

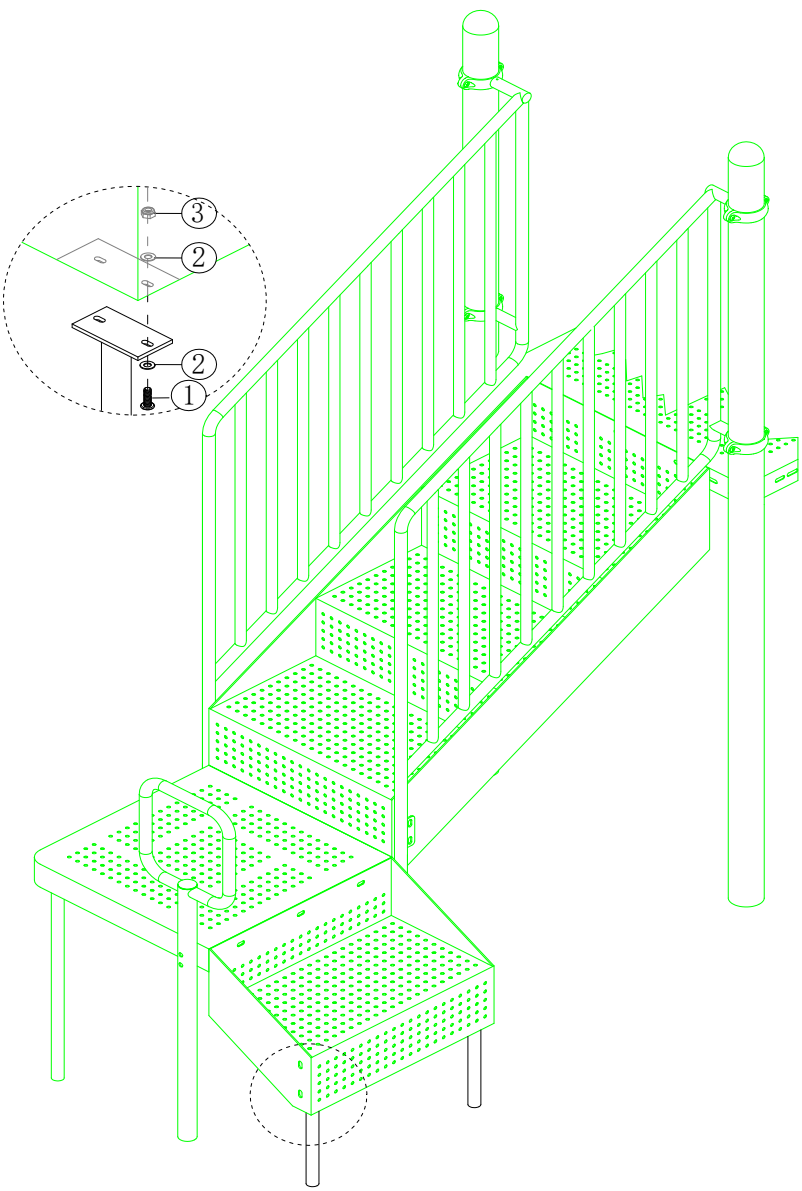


Hole Panel Installation - (3.5" Post)

Item Name	ID	Quantity
Hole Panel	Cmpnt	1
Flat Clamp	1	2
M8*45 Bolt	2	2
M8 Washer	3	2
M8 Lock Nut	4	2
M10*50 Bolt	5	2
M10 Washer	6	4
M10 Lock Nut	7	2

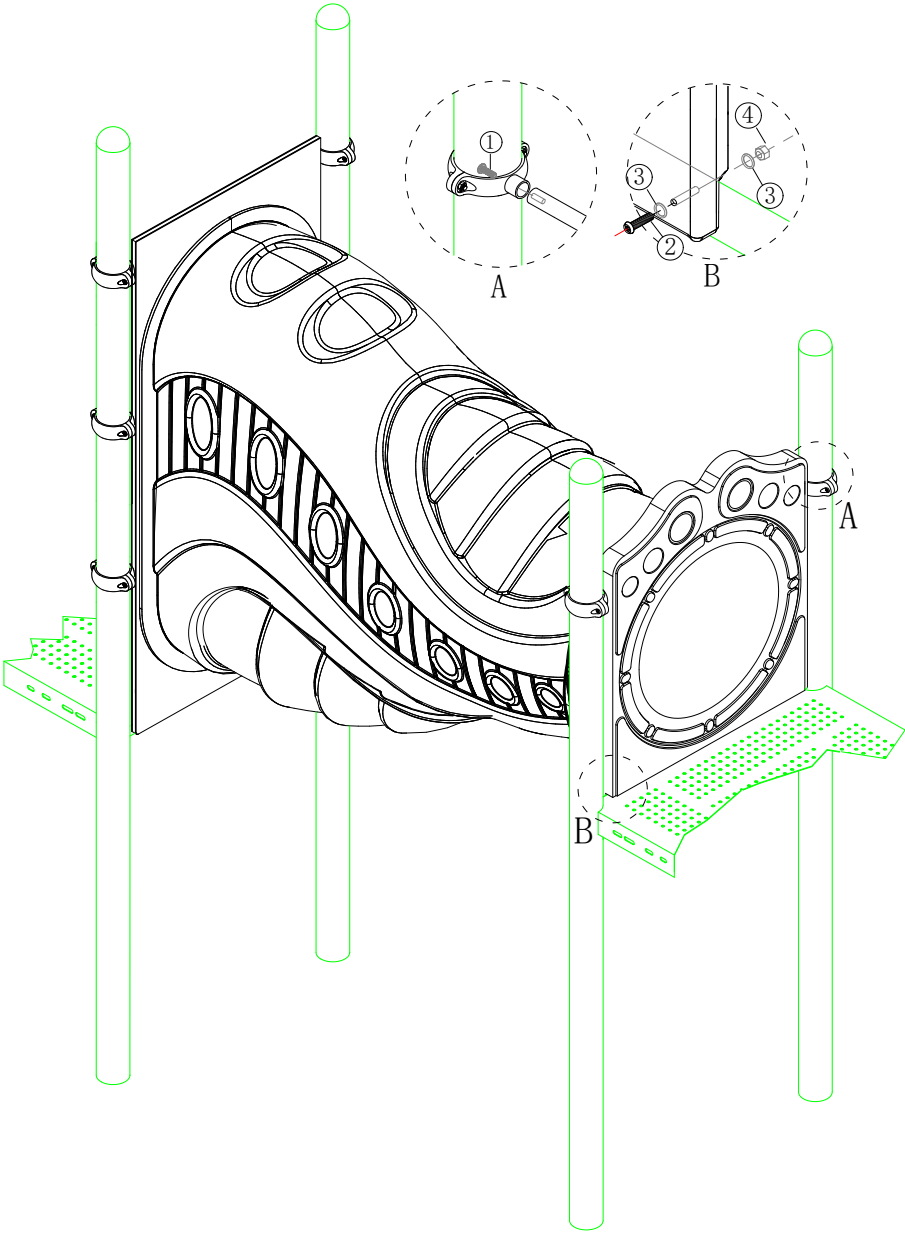


PE Hole Panel Installation - (3.5" Post)

Item Name	ID	Quantity
PE Hole Panel	Cmpnt	1
Flat Clamp	1	6
M8*45 Bolt	2	6
M8 Washer	3	6
M8 Lock Nut	4	6
M10*40 Bolt	5	3
M10 Washer	6	6
M10 Lock Nut	7	3

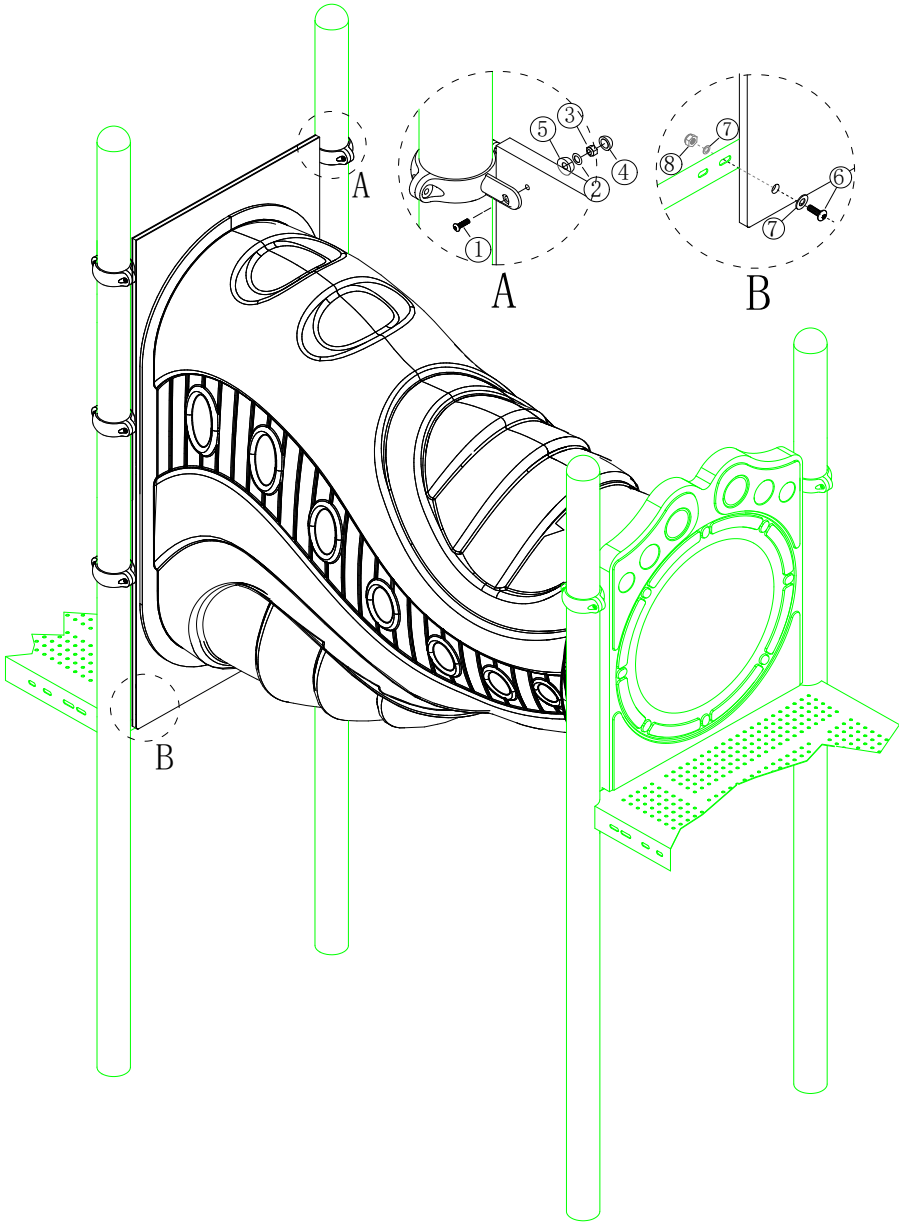


Pipe Wall Installation - (3.5" Post)

Item Name	ID	Quantity
Pipe Wall	Cmpnt	1
Tube Clamp	1	2
M8*25 Bolt	2	2
M10*25 Bolt	3	2
M10 Washer	4	4
M10 Lock Nut	5	2

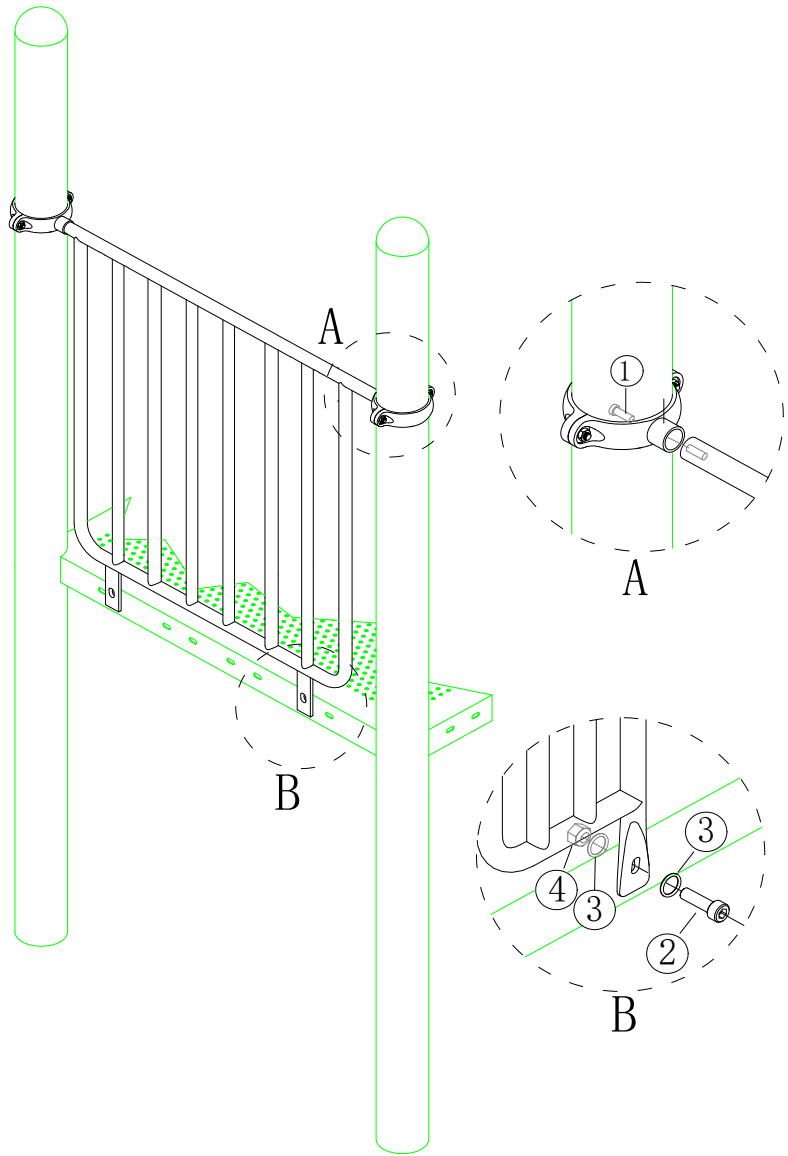


Single Exit Panel Installation - (3.5" Post)

Item Name	ID	Quantity
Single Exit	Cmpnt	1
Flat Clamp	1	2
M8*40 Bolt	2	2
M8 Washer	3	2
M8 Lock Nut	4	2

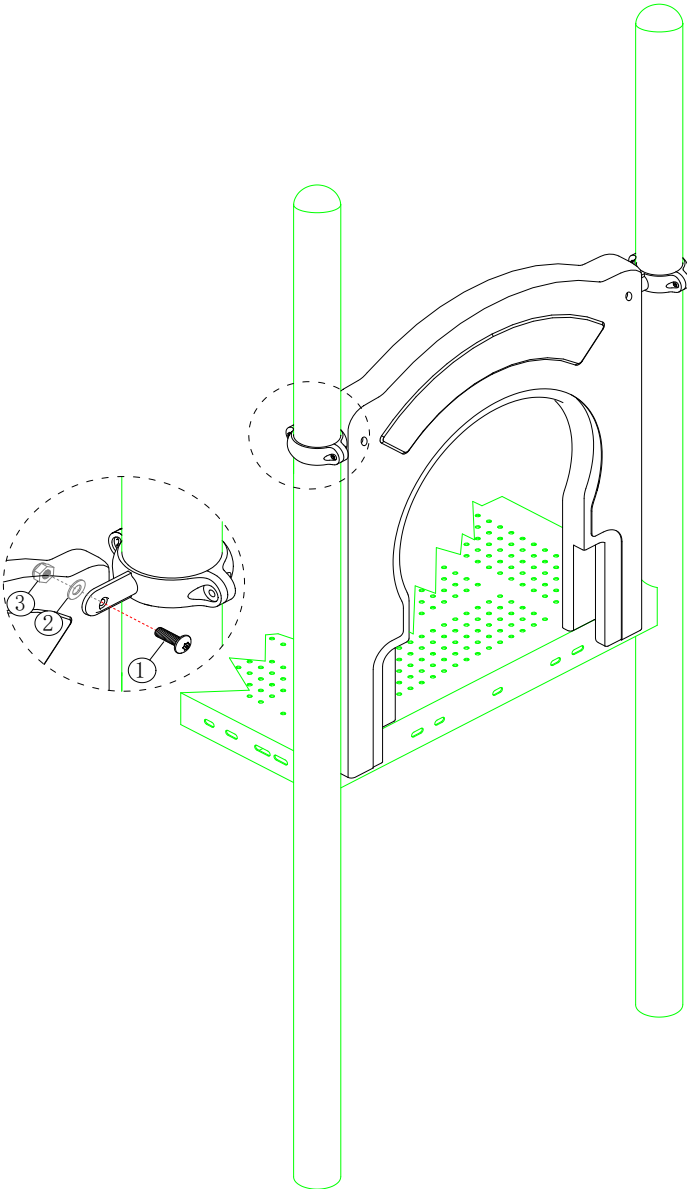


Single Left Turn Slide Installation - (3.5" Post)

Item Name	ID	Quantity
Single Right Turn Slide	Cmpnt	1
M10*45 Bolt	1	2
M10 Washer	2	4
M10 Lock Nut	3	2
M8*45 Bolt	4	2
M8 Washer	5	2
M12 Washer	6	2
M12 Barrel Nut	7	2

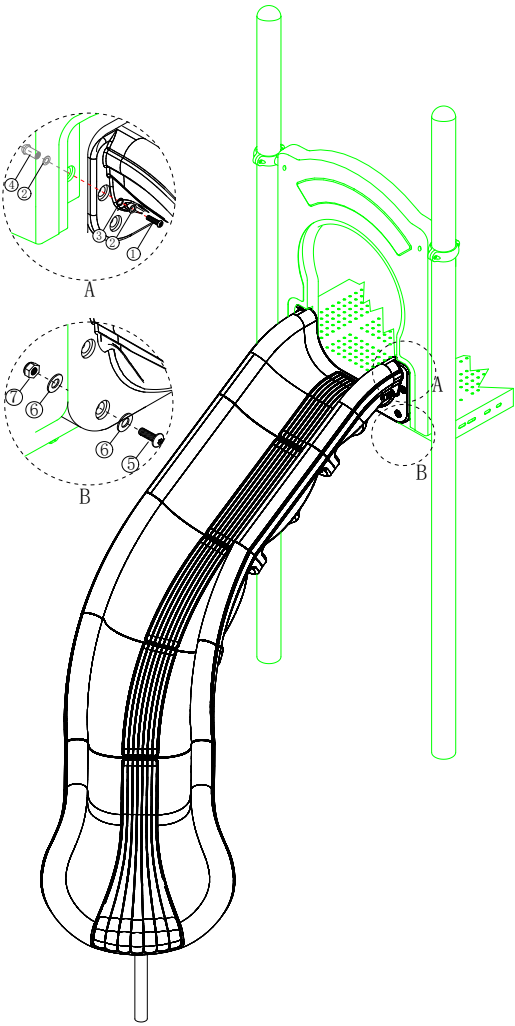


Single Left Turn Slide Installation - (3.5" Post)

Item Name	ID	Quantity
Turn Slide Support	Cmpnt	1
M4*37 Bolt	1	2

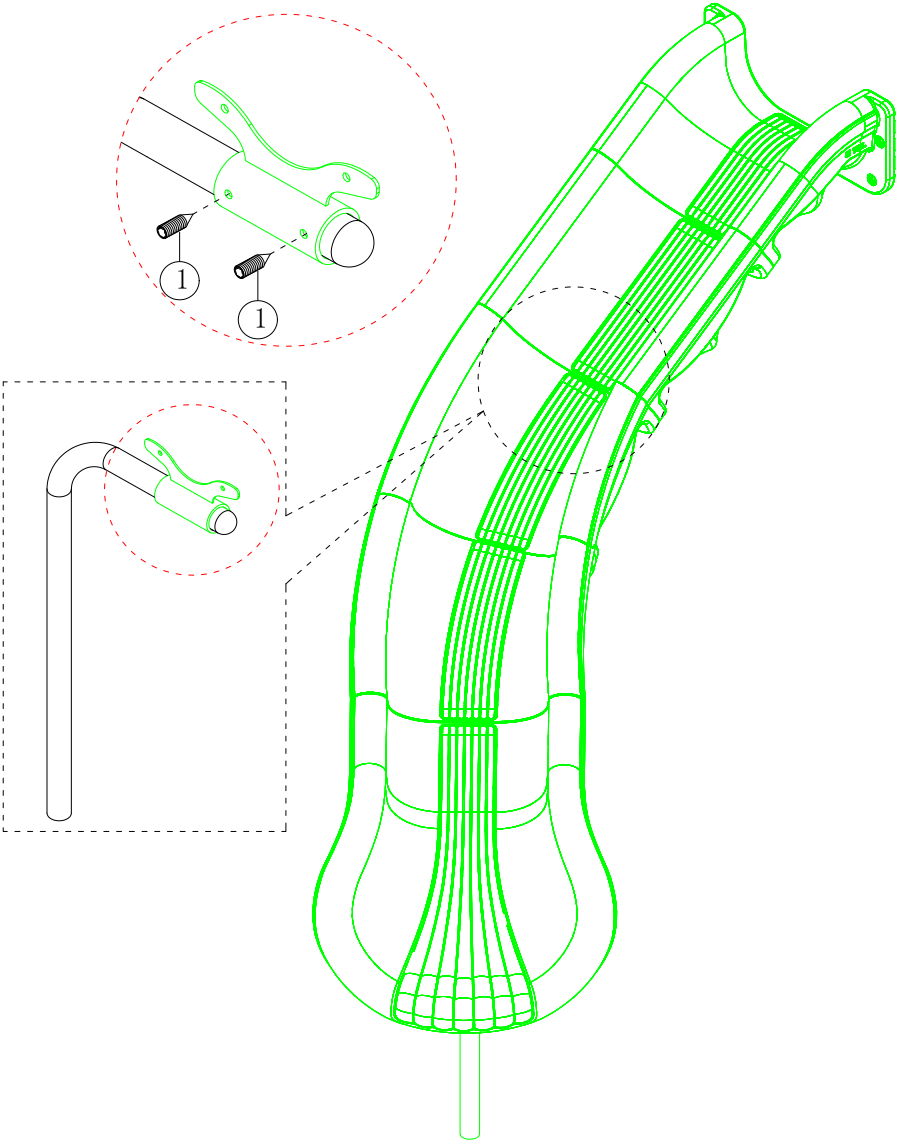


Single Left Turn Slide Installation - (3.5" Post)

Item Name	ID	Quantity
Single Slide Infoot	Cmpnt	1
M8*20 Bolt	1	2
M8 Spring Washer	2	2
M8 Washer	3	2

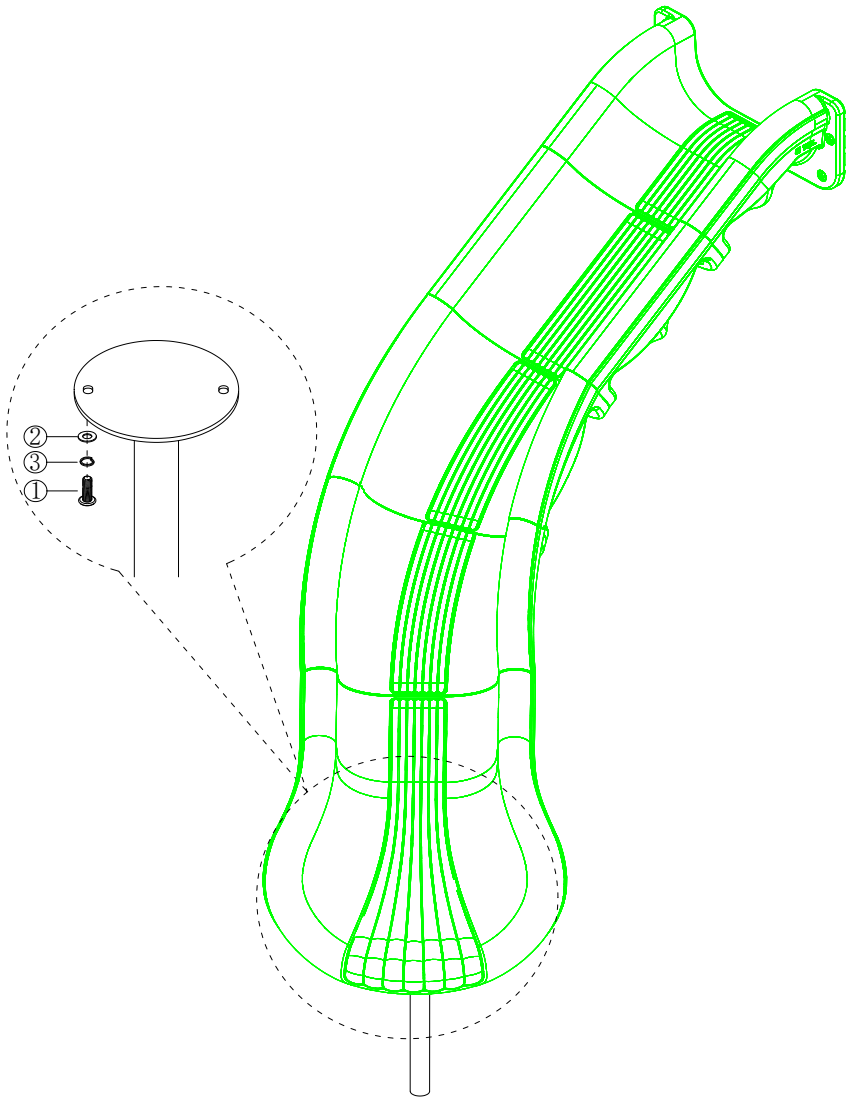


Triple Slide Exit Installation - (3.5" Post)

Item Name	ID	Quantity
Triple Slide Exit	Cmpnt	1
Flat Clamp	1	2
M8*37 Bolt	2	2
M8 Washer	3	2
M8 Lock Nut	4	2

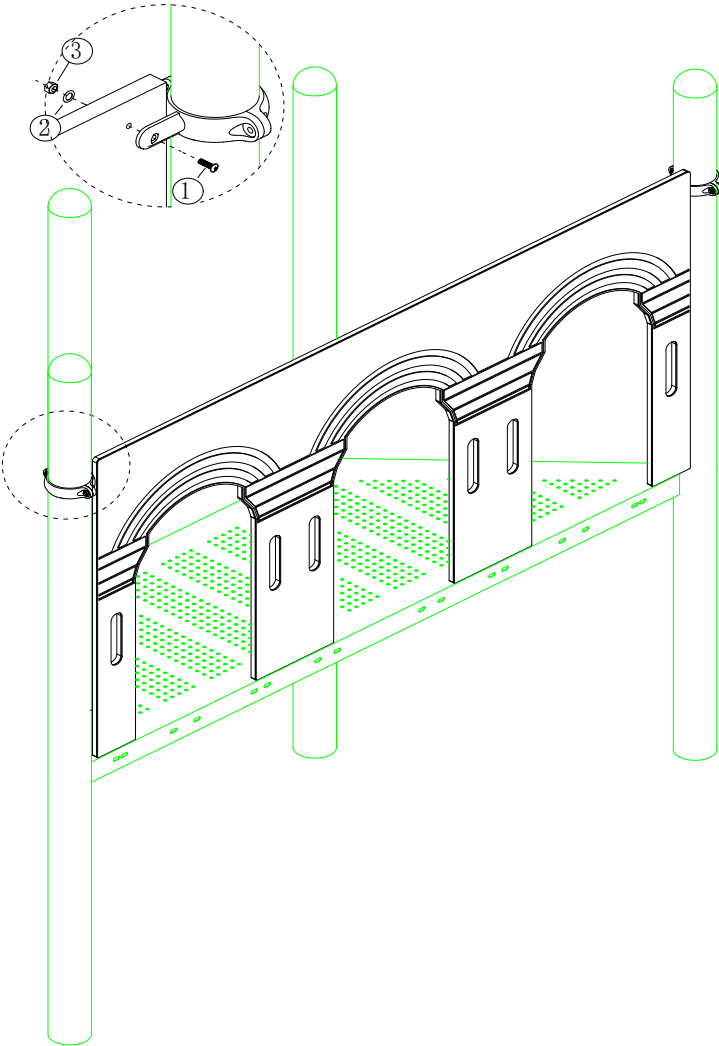


Sectional Left Turn Slide Installation - (3.5" Post)

Item Name	ID	Quantity
Single Left Turn Slide	Cmpnt	1
M10*45 Bolt	1	2
M10 Washer	2	4
M10 Lock Nut	3	2
M8*45 Bolt	4	2
M8 Washer	5	2
M12 Washer	6	2
M12 Barrel Nut	7	2
M8*20 Bolt	8	2
M8 Spring Washer	9	2
M8 Washer	10	2

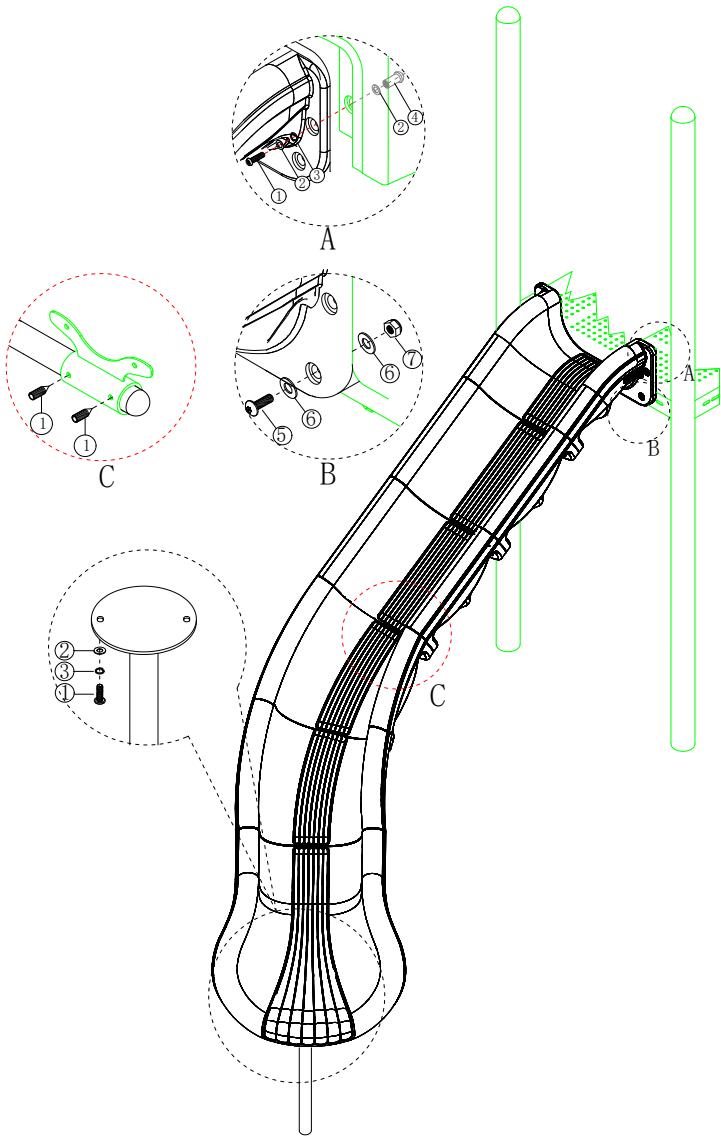


Sectional Right Turn Slide Installation - (3.5" Post)

Item Name	ID	Quantity
Single Right Turn Slide	Cmpnt	1
M10*45 Bolt	1	2
M10 Washer	2	4
M10 Lock Nut	3	2
M8*45 Bolt	4	2
M8 Washer	5	2
M12 Washer	6	2
M12 Barrel Nut	7	2
M8*20 Bolt	8	2
M8 Spring Washer	9	2
M8 Washer	10	2

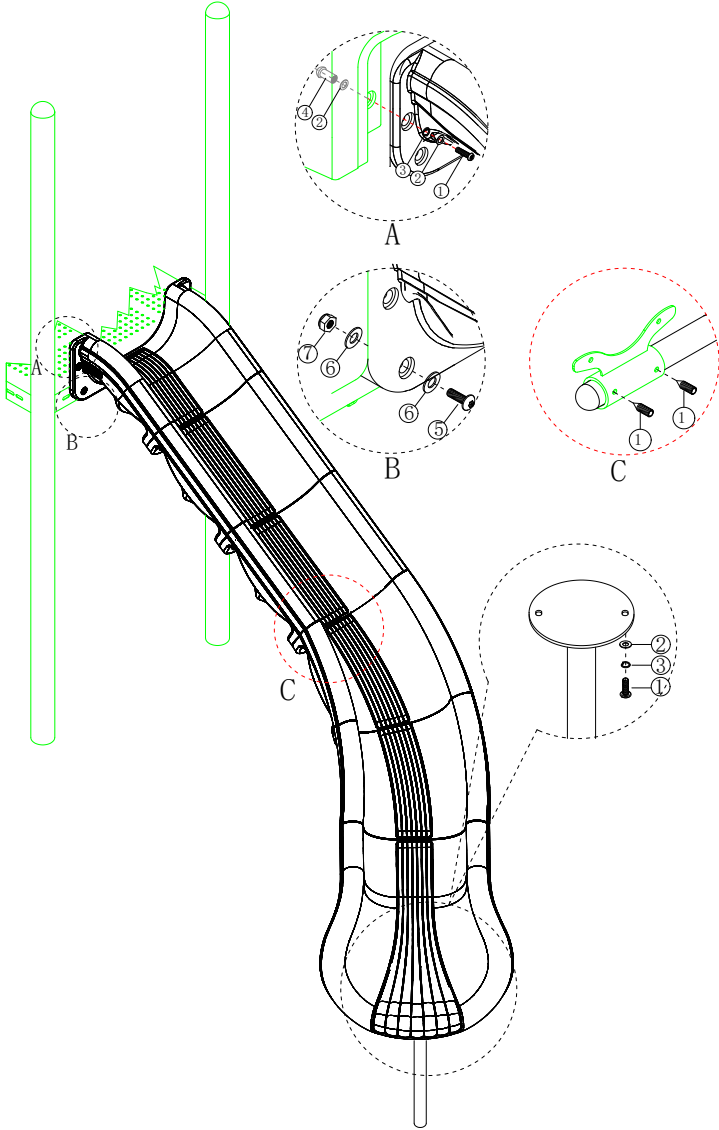


Sectional Straight Slide Installation - (3.5" Post)

Item Name	ID	Quantity
Single Right Turn Slide	Cmpnt	1
M10*45 Bolt	1	2
M10 Washer	2	4
M10 Lock Nut	3	2
M8*45 Bolt	4	2
M8 Washer	5	2
M12 Washer	6	2
M12 Barrel Nut	7	2
M8*20 Bolt	8	2
M8 Spring Washer	9	2
M8 Washer	10	2

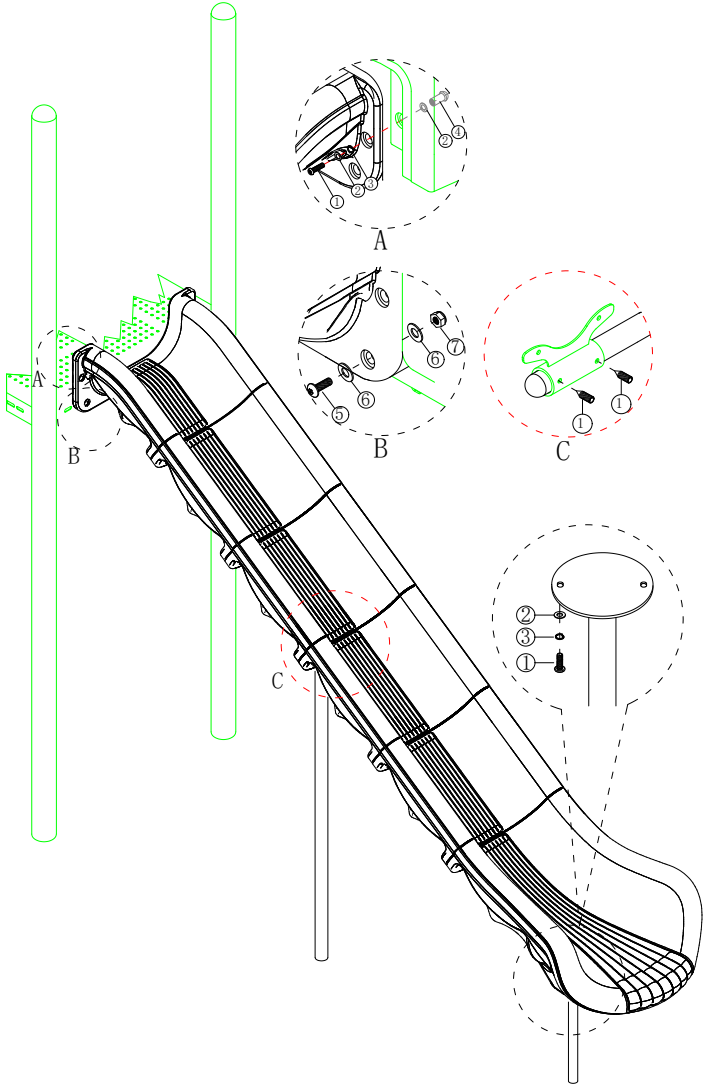


Map Panel Installation - (3.5" Post)

Item Name	ID	Quantity
Map Panel	Cmpnt	1
Flat Clamp	1	2
M8*45 Bolt	2	2
M8 Washer	3	2
M8 Lock Nut	4	2
M10*50 Bolt	2	2
M10 Washer	3	4
M10 Lock Nut	4	2

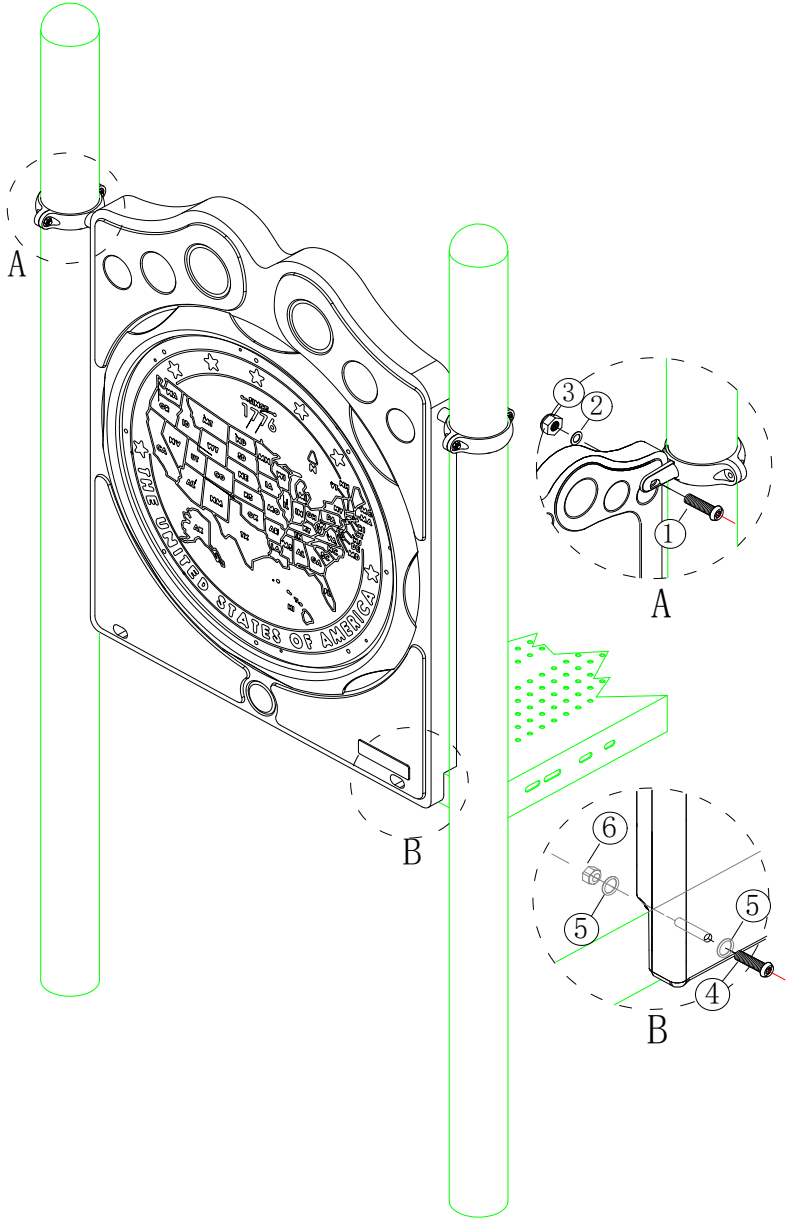


Bench Panel Installation - (3.5" Post)

Item Name	ID	Quantity
Bench Panel	Cmpnt	1
Flat Clamp	1	4
M8*25 Bolt	2	4

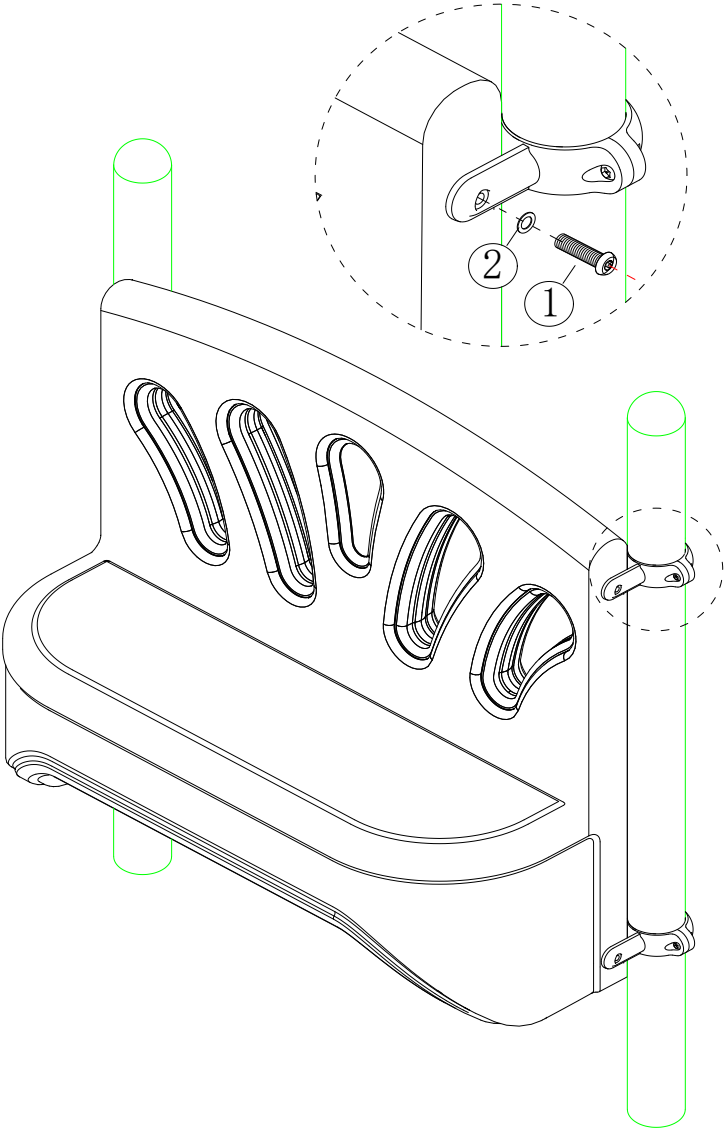


Bench Panel Infoot Installation - (3.5" Post)

Item Name	ID	Quantity
Bench Panel Infoot	Cmpnt	1
M10*20 Bolt	1	2
M10 Spring Washer	2	2
M10 Washer	3	2

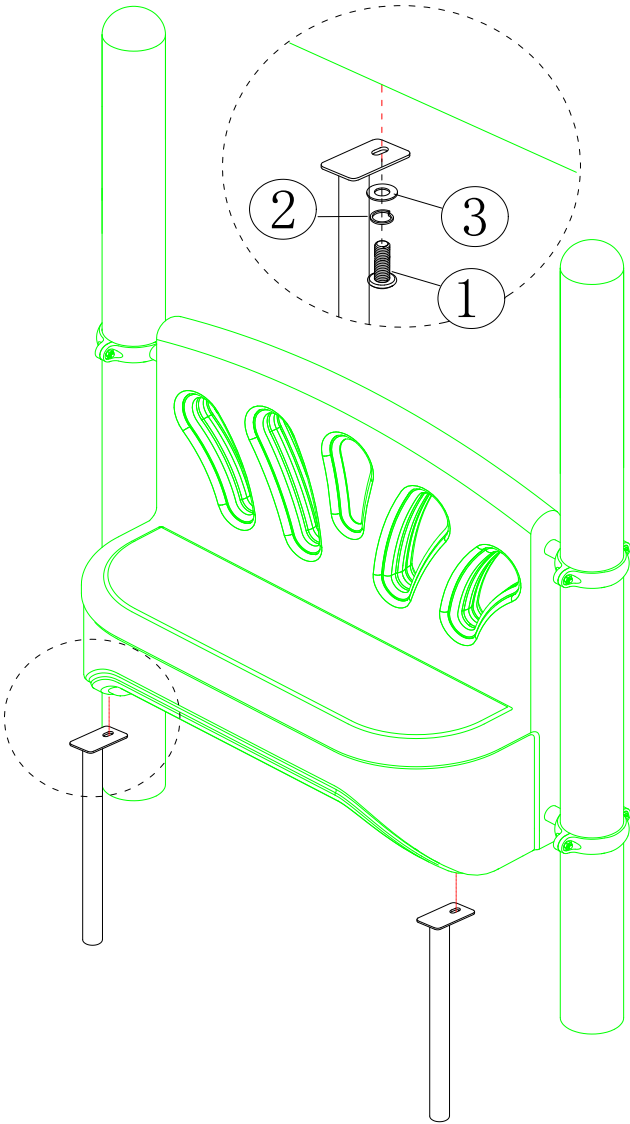


Store Panel Installation - (3.5" Post)

Item Name	ID	Quantity
Store Panel	Cmpnt	1
Flat Clamp	1	4
M8*25 Bolt	2	4

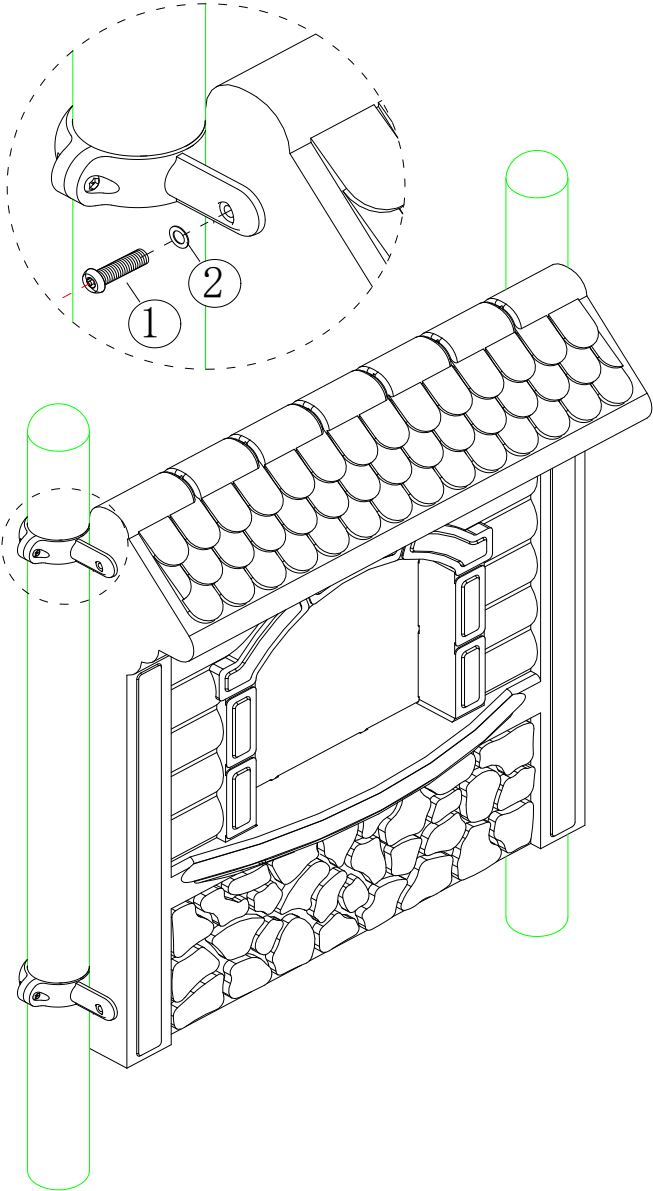


Ship Wheel Installation - (3.5" Post)

Item Name	ID	Quantity
Ship Wheel	Cmpnt	1
Wheel Clamp	1	1

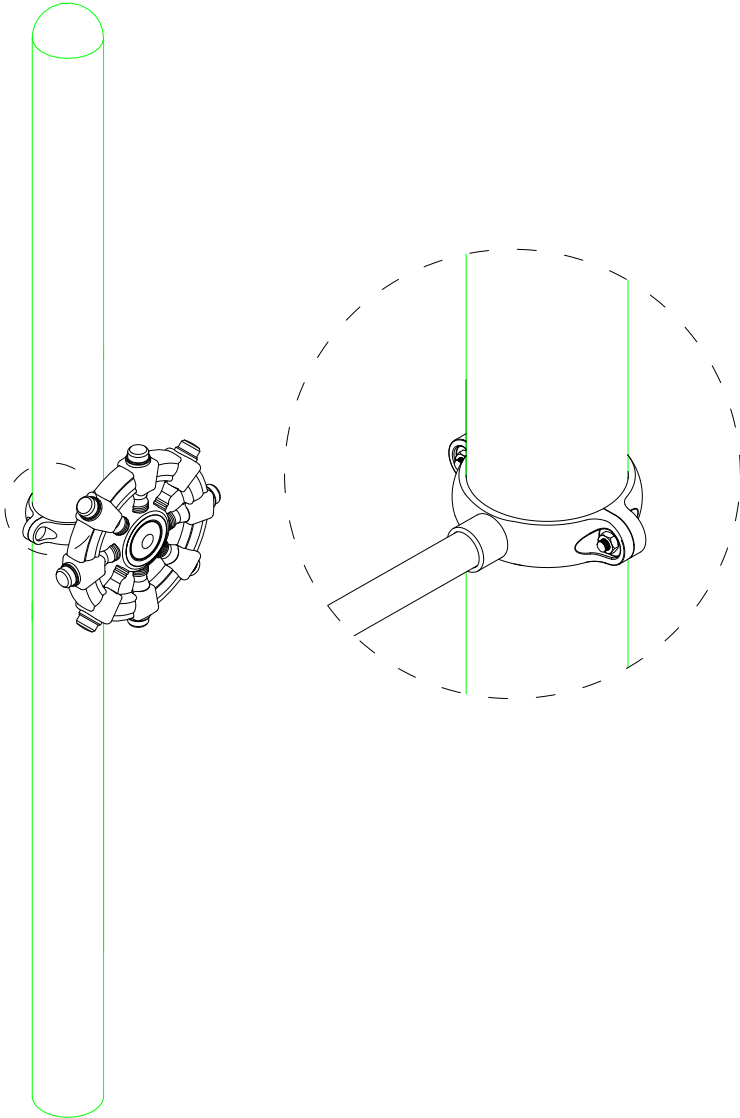

Double Drum Installation - (3.5" Post)

Item Name	ID	Quantity
Double Drum	Cmpnt	1
Drum Clamp	1	2

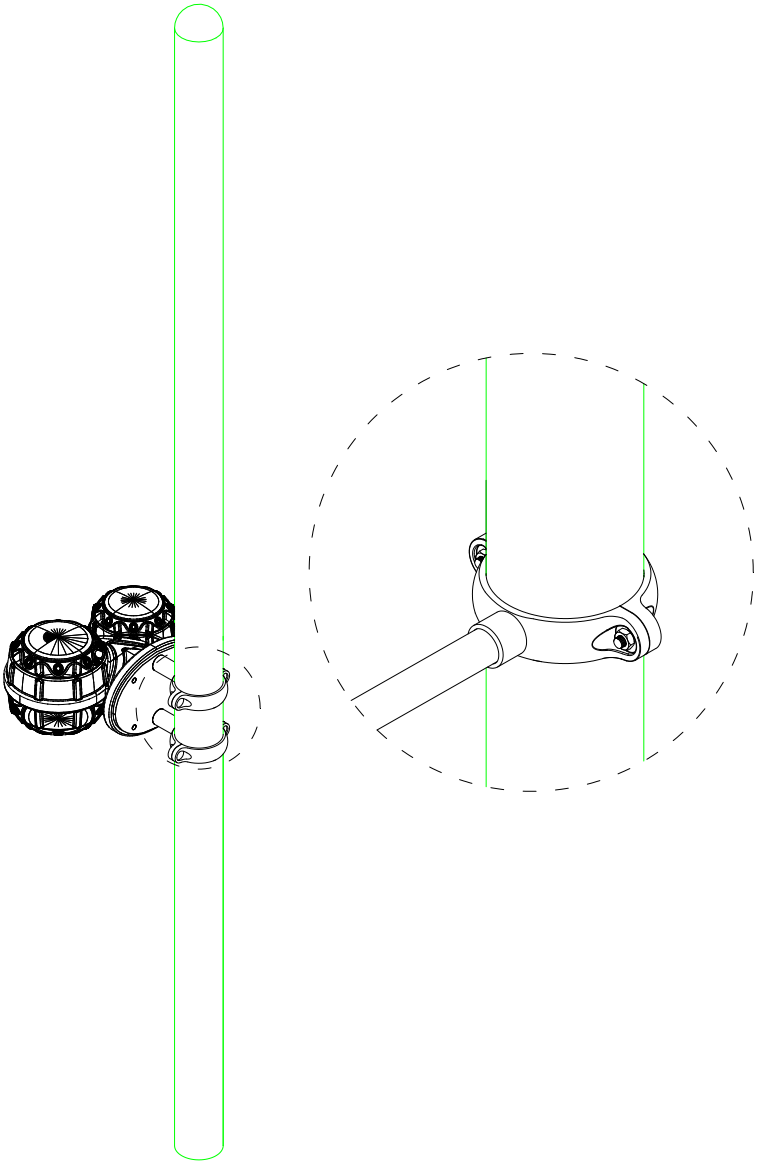

Line Roof Installation - (3.5" Post)

Item Name	ID	Quantity
Line Roof	Cmpnt	1
M4*75 Bolt	1	4
M8 Washer	2	4
M8 Plastic Cap	3	4

