

Mustang Island

Installation Guide

PKP326P / PKP326N | Quick Ship

Manufacturer model reference: 260908-GB-1-CR001

Product-specific technical document

Before installation

This guide is provided for information and planning purposes. Product designs and installation requirements may change over time. Before beginning installation, please review the instructions included with your product and confirm that you are using the most current product-specific instructions. If there is any difference, follow the current instructions supplied with the product.

White-label edition prepared September 12, 2026.


Source technical instructions and source dates retained on the following pages.

Inground Post/Mount Installation

STEP:1


**DO NOT CEMENT POSTS/MOUNTS
INTO PLACE UNTIL THE ENTIRE
STRUCTURE IS ASSEMBLED.**

Refer to the General Installation
guide footing size installation and
digging proper holes for the
support posts/mounts.

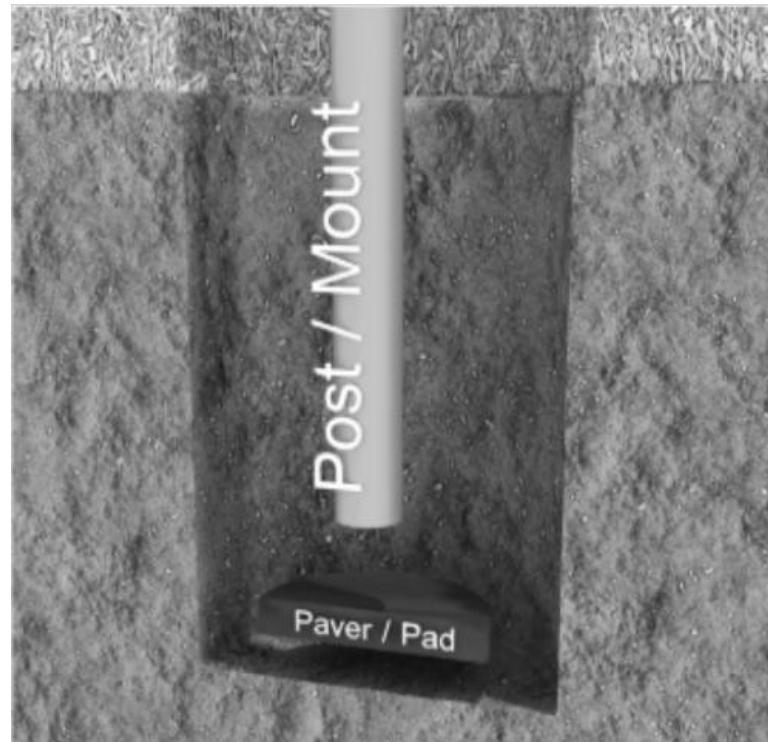


Square Deck Installation - (3.5" Post)

Item Name	ID	Quantity
Square Deck	Cmpnt	1
M10*35 Bolt	1	4
M10 Washer	2	8
M10 Lock Nut	3	4

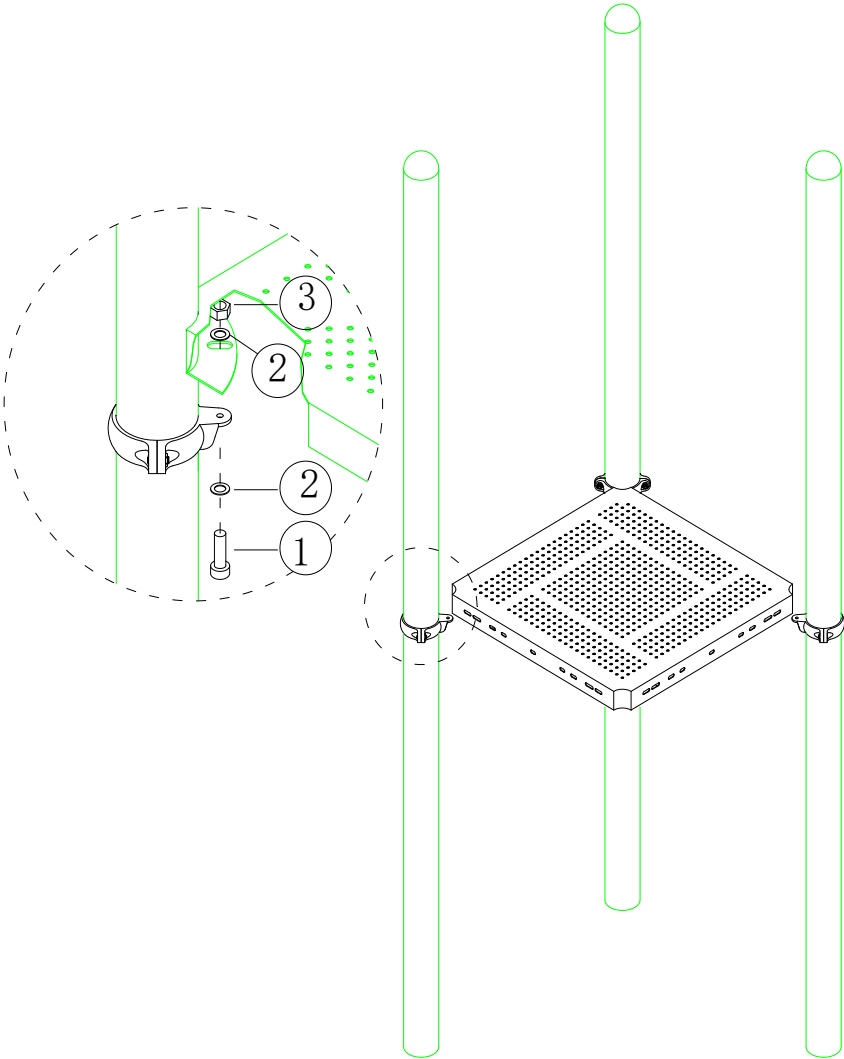


Transfer Stair Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Stair	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

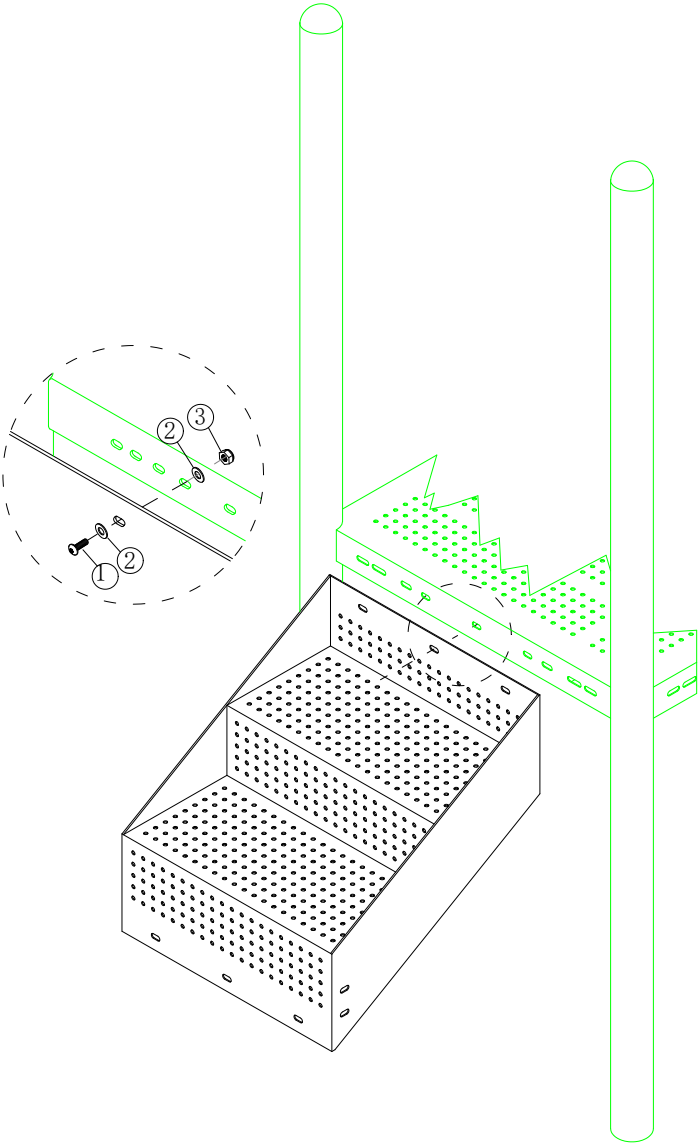


Transfer Stair Rail Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Stair Rail	Cmpnt	1
Tube Clamp	1	2
M8*25 Bolt	2	2
M10*30 Bolt	3	6
M10 Washer	4	12
M10 Lock Nut	5	6

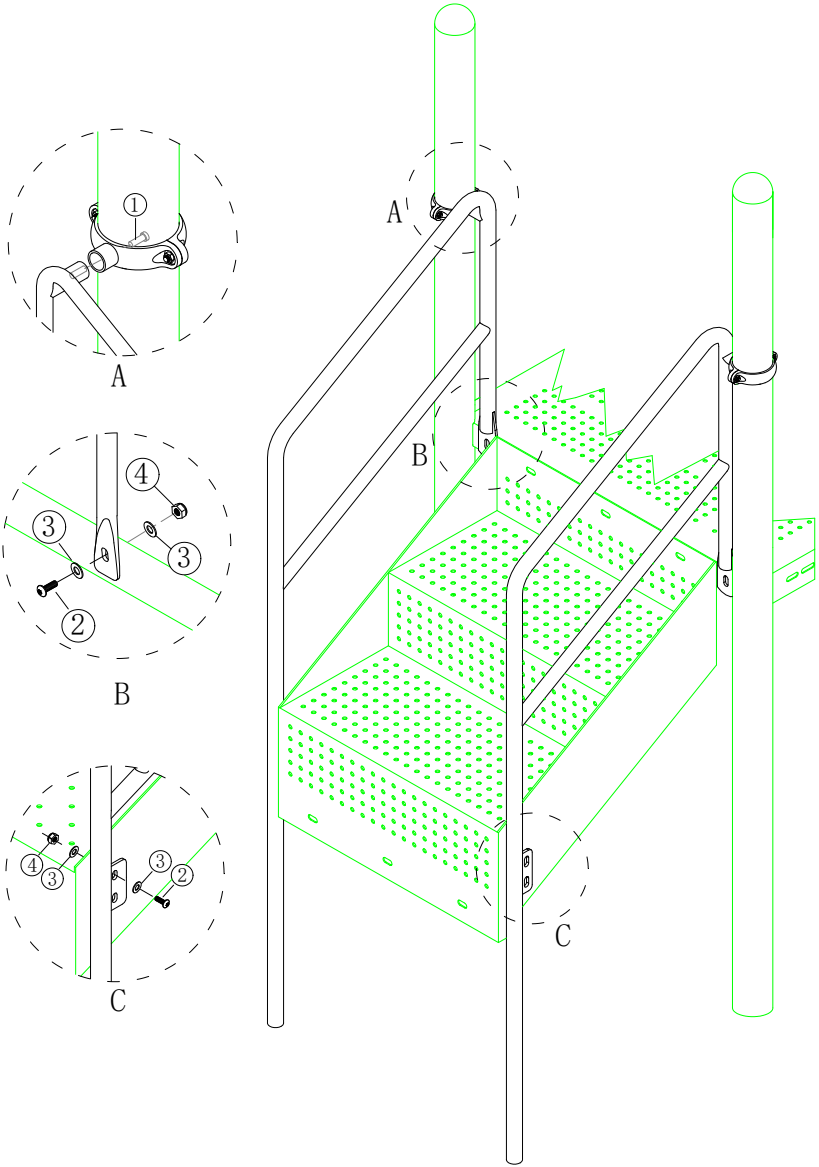


Transfer Deck Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Deck	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

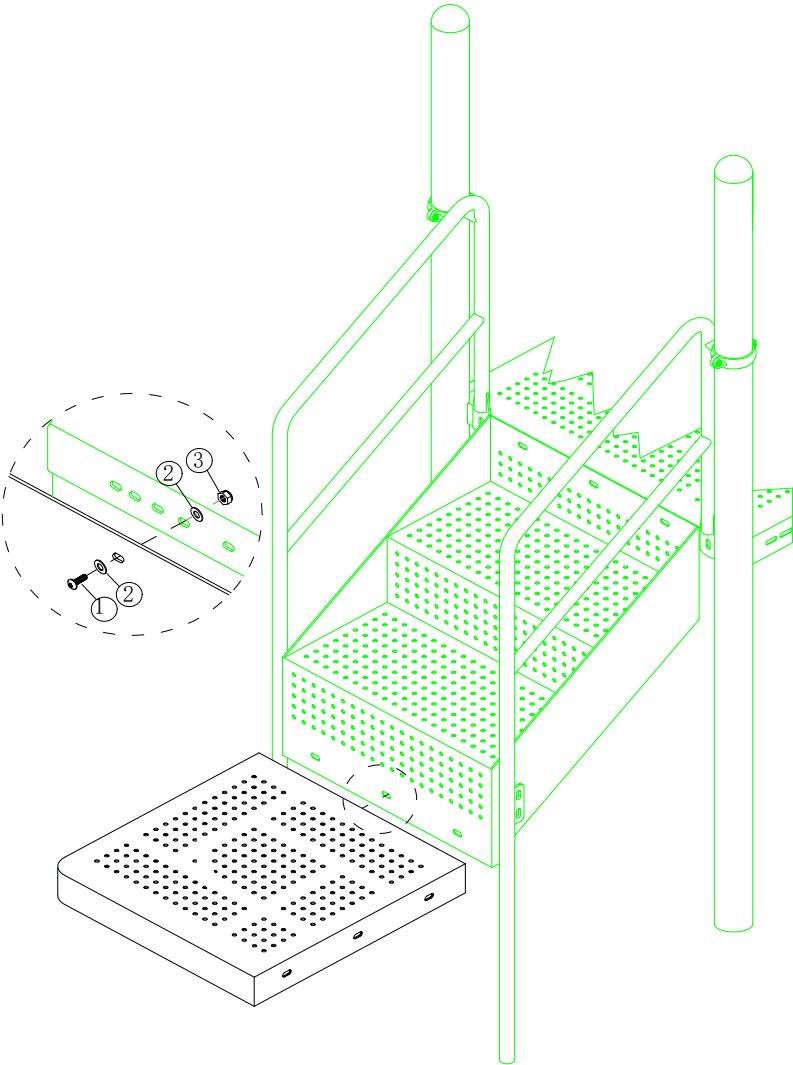


Transfer Deck Rail Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Deck Rail	Cmpnt	1
M10*70 Bolt	1	2
M10*25 Bolt	2	2
M10 Washer	3	6
M10 Lock Nut	4	4

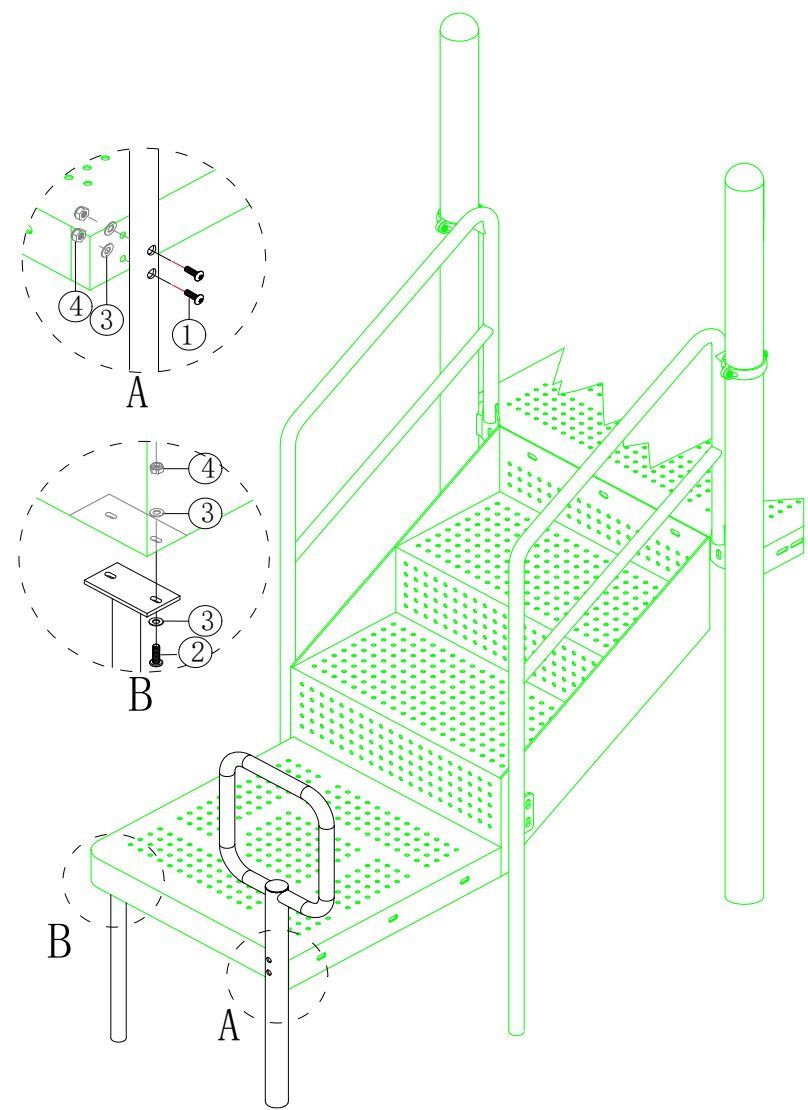


Transfer Step Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Step	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

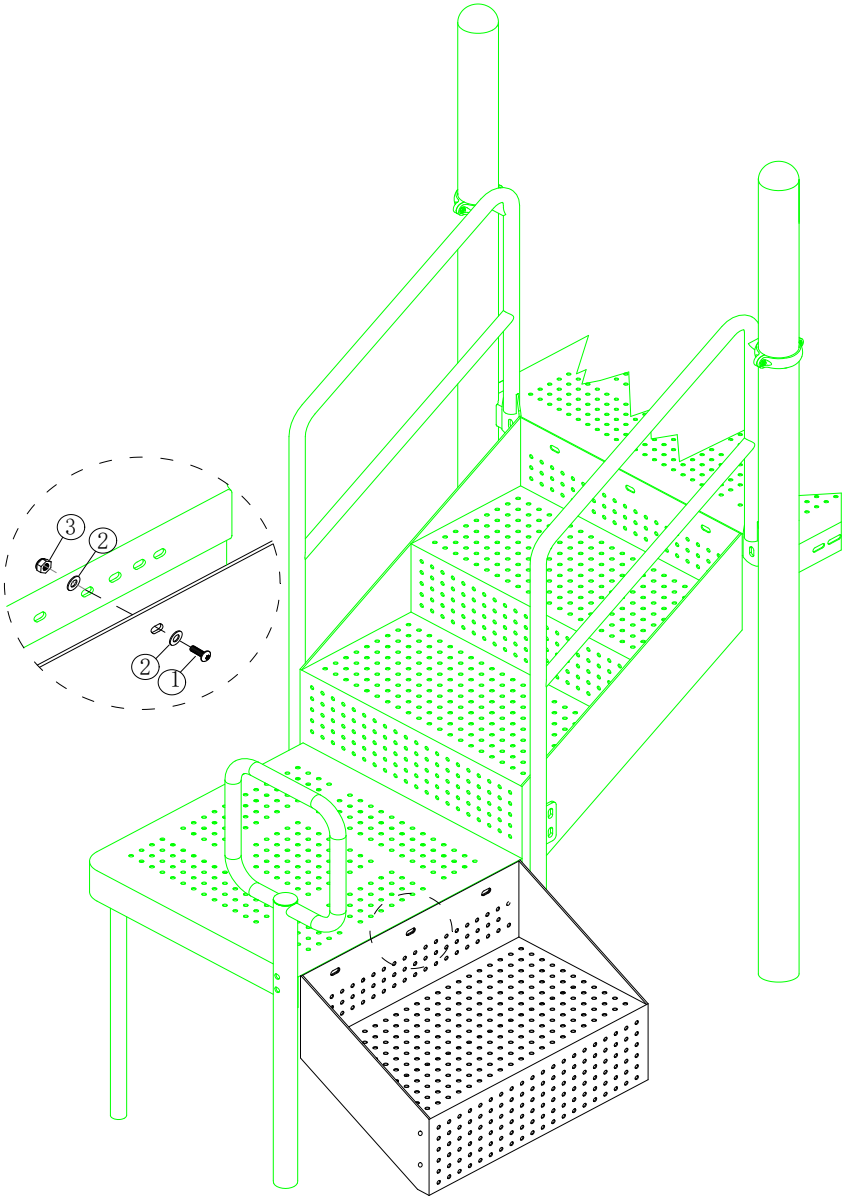


Transfer Step Infoot Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Step Infoot	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

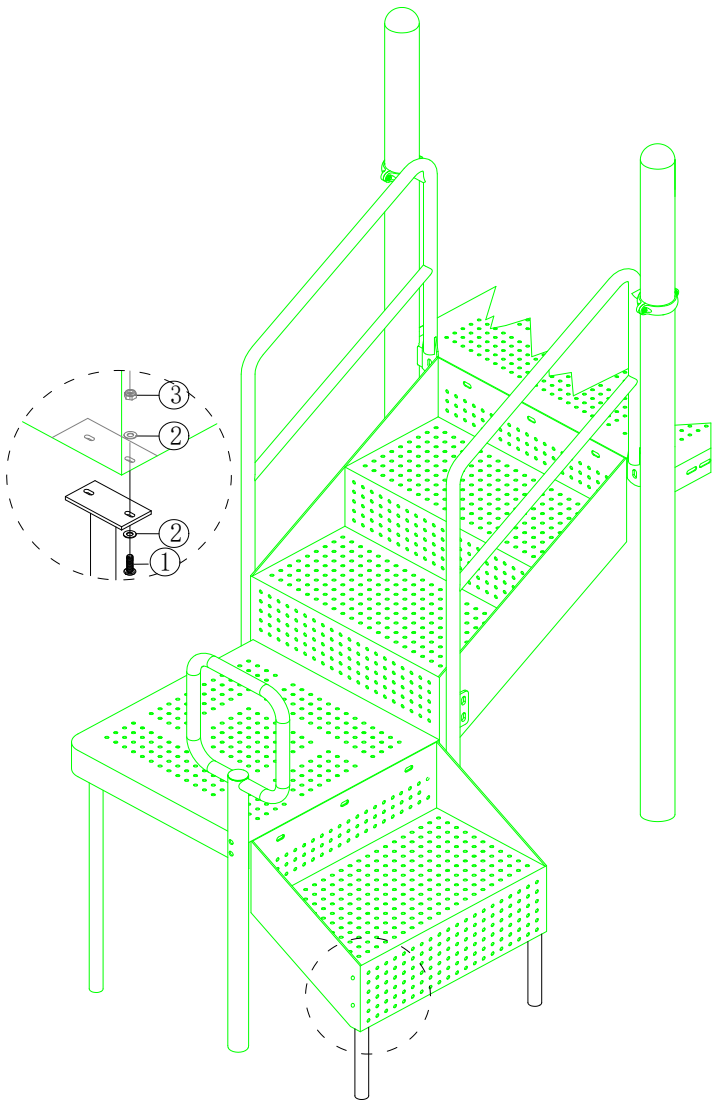


37cm Step Installation - (3.5" Post)

Item Name	ID	Quantity
37cm Step	Cmpnt	1
M10*25 Bolt	1	8
M10 Washer	2	16
M10 Lock Nut	3	8

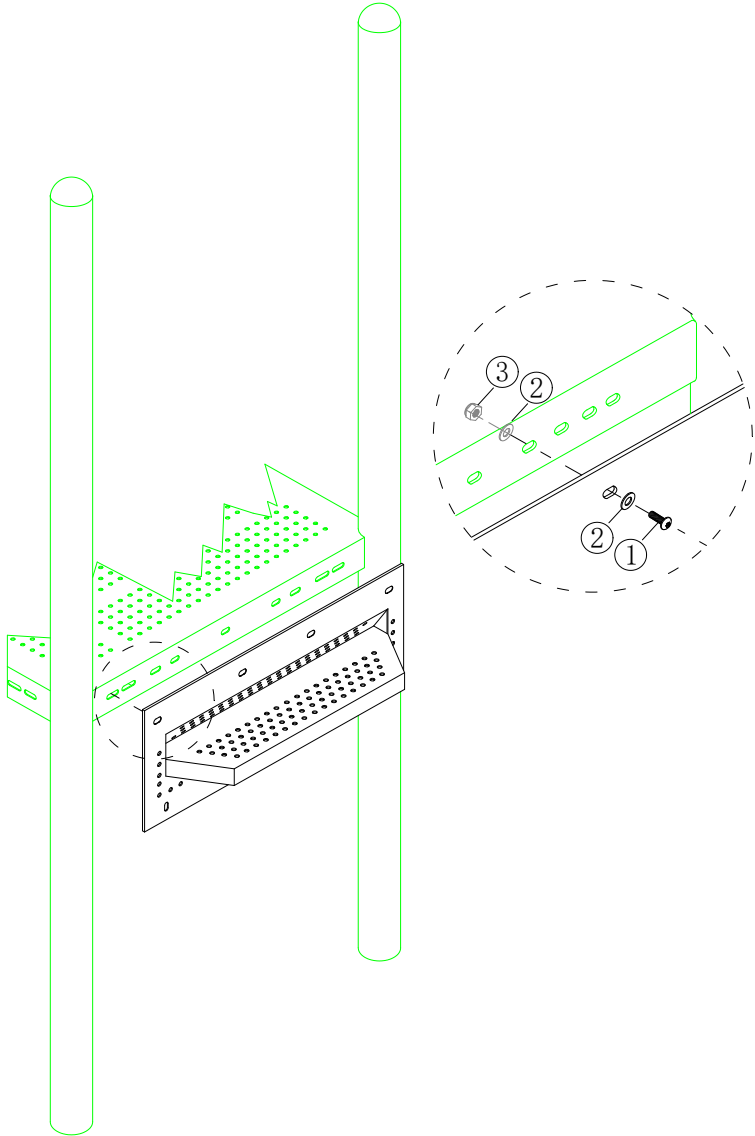


Middle Stair Installation - (3.5" Post)

Item Name	ID	Quantity
Middle Stair	Cmpnt	1
M10*25 Bolt	1	6
M10 Washer	2	12
M10 Lock Nut	3	6

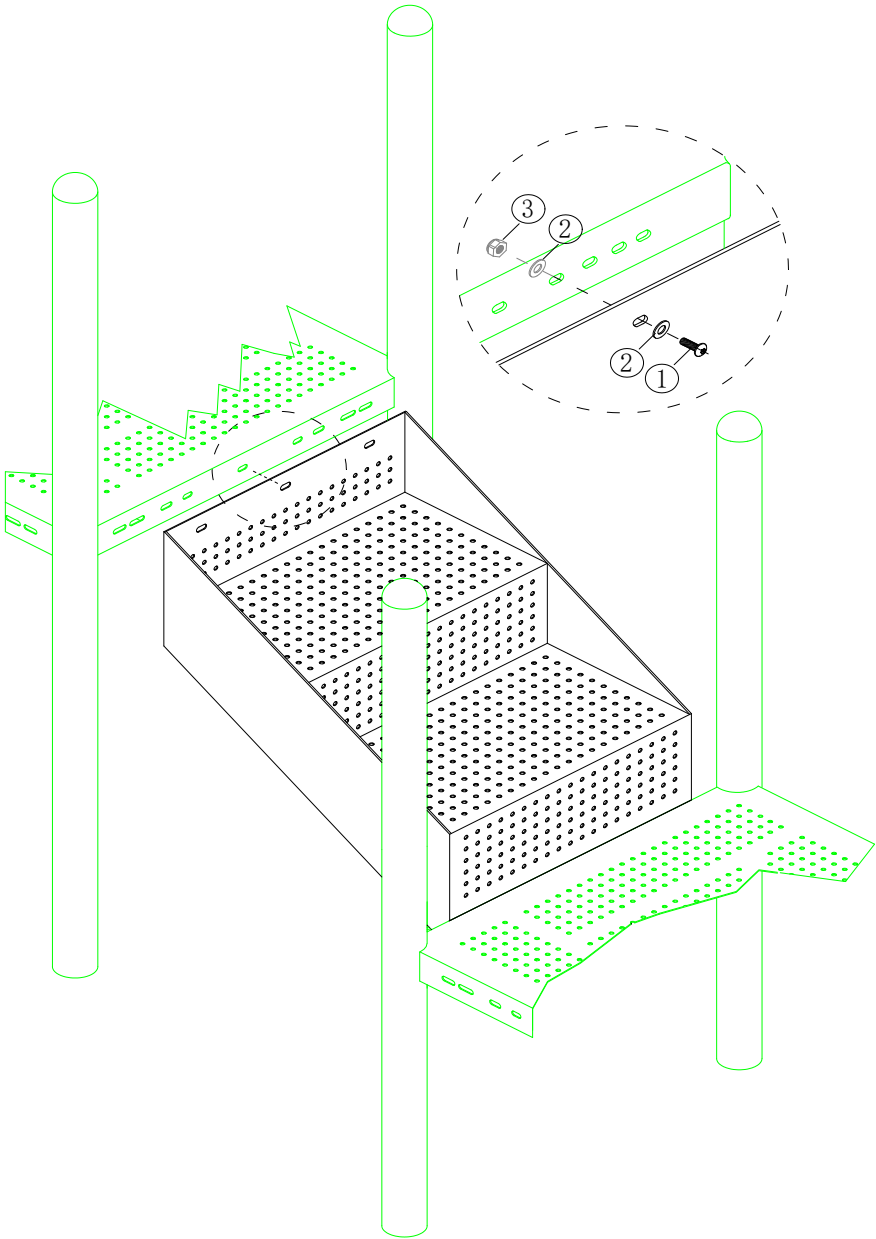


Middle Stair Rail Installation - (3.5" Post)

Item Name	ID	Quantity
Middle Stair Rail	Cmpnt	1
Tube Clamp	1	4
M8*25 Bolt	2	4
M10*25 Bolt	3	4
M10 Washer	4	8
M10 Lock Nut	5	4

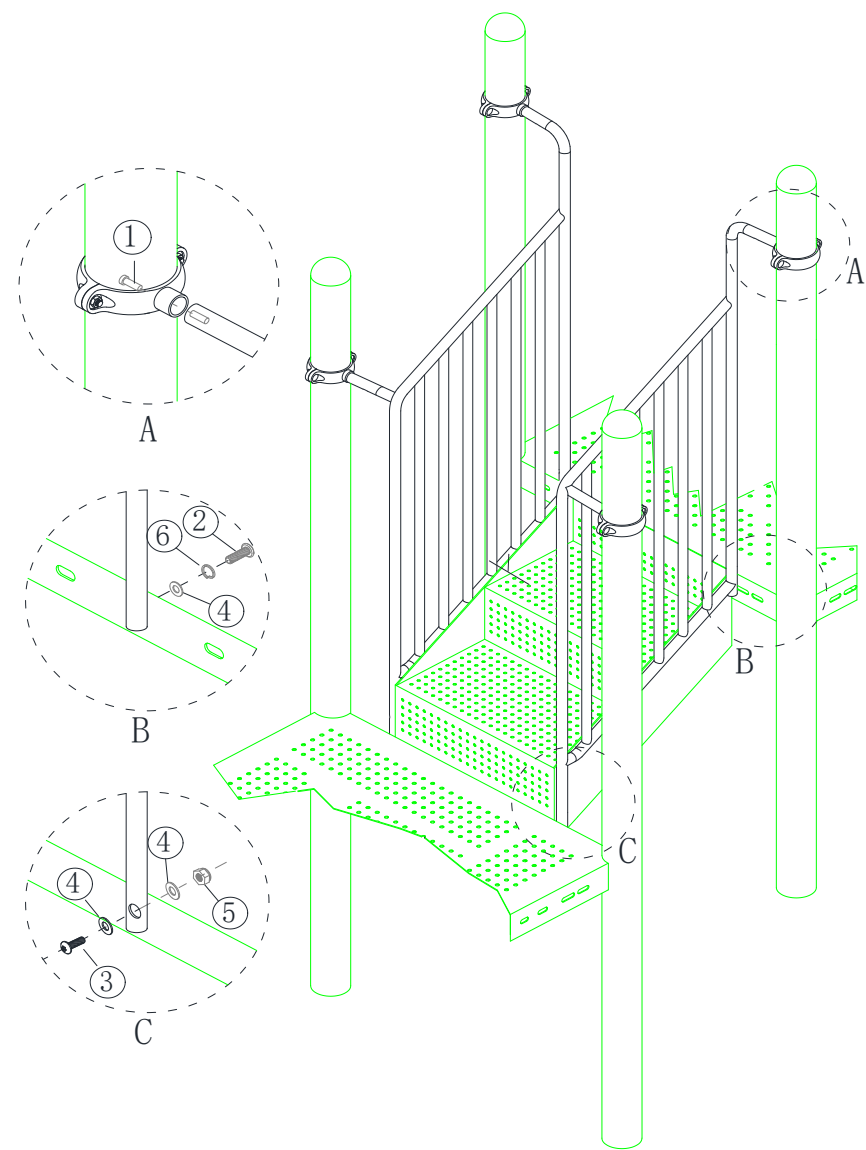


Pod Climber Installation - (3.5" Post)

Item Name	ID	Quantity
Pod Climber	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

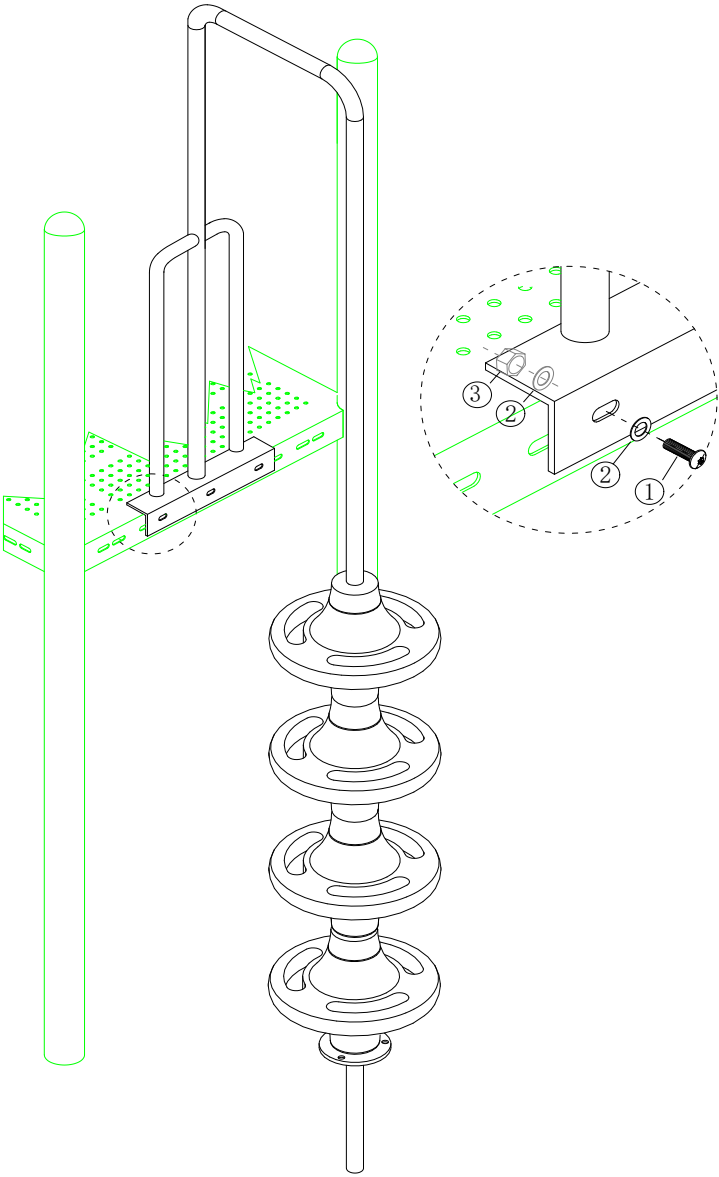


Rings Overhead Climber Installation - (3.5" Post)

Item Name	ID	Quantity
Rings Overhead Climber	Cmpnt	1
Tube Clamp	1	4
M8*25 Bolt	2	4
M4*50 Self-tapping Bolt	3	4
M8 Washer	4	4
M8 Plastic Cap	5	4

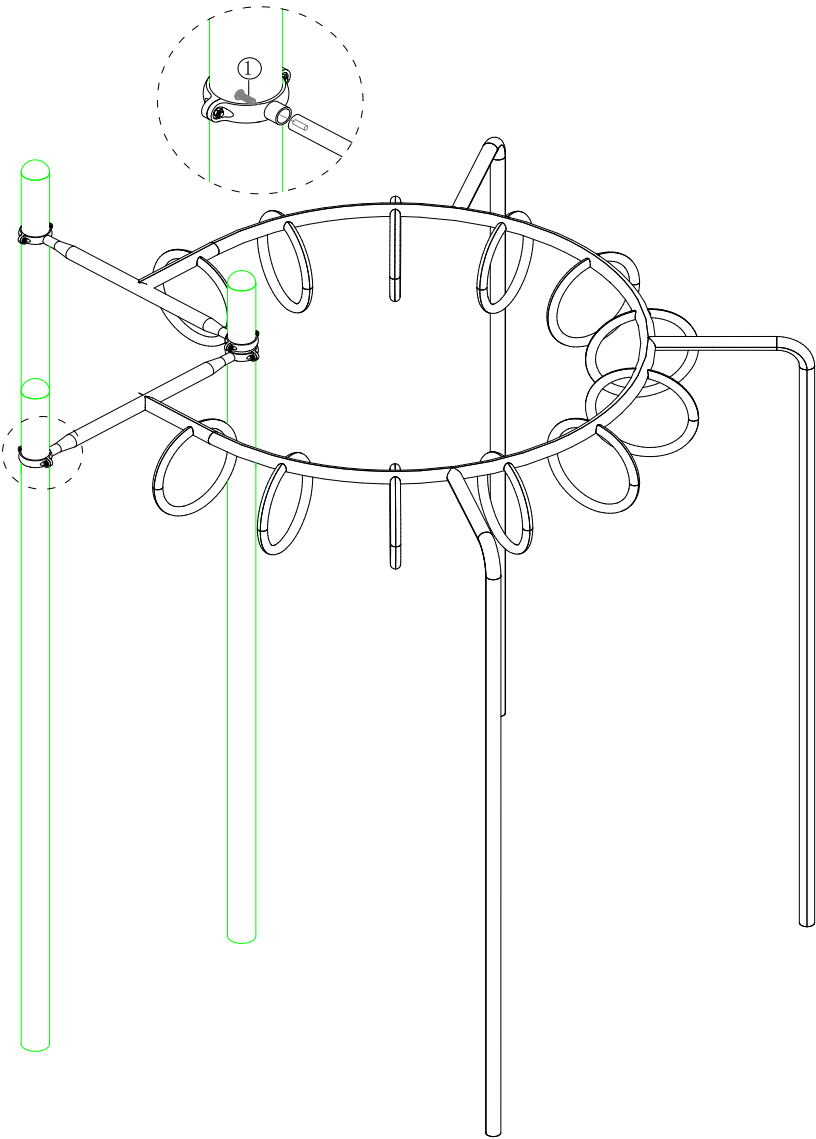


Rings Overhead Climber Support Installation - (3.5" Post)

Item Name	ID	Quantity
Rings Overhead Climber Support	Cmpnt	1
M10*50 Bolt	1	3
M10 Lock Nut	2	3

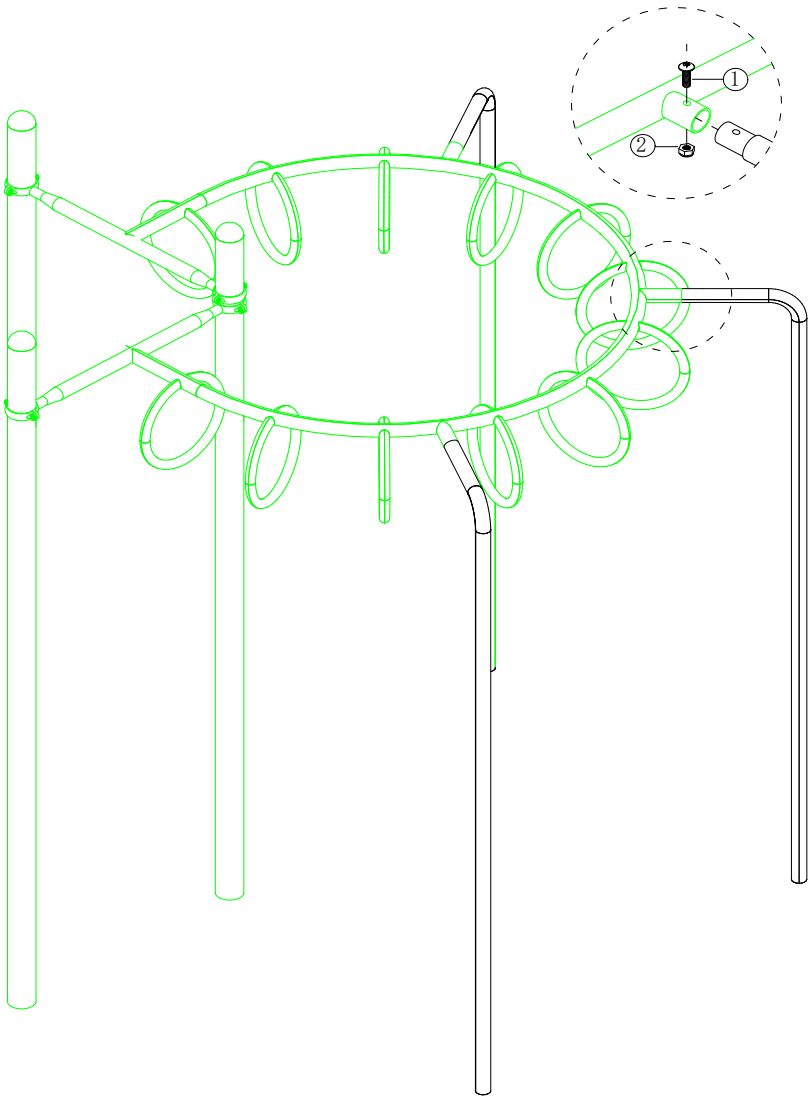


Single Slide Hood Installation - (3.5" Post)

Item Name	ID	Quantity
Single Slide Hood	Cmpnt	1
Flat Clamp	1	2
M8*40 Bolt	2	2
M8 Washer	3	2
M8 Lock Nut	4	2

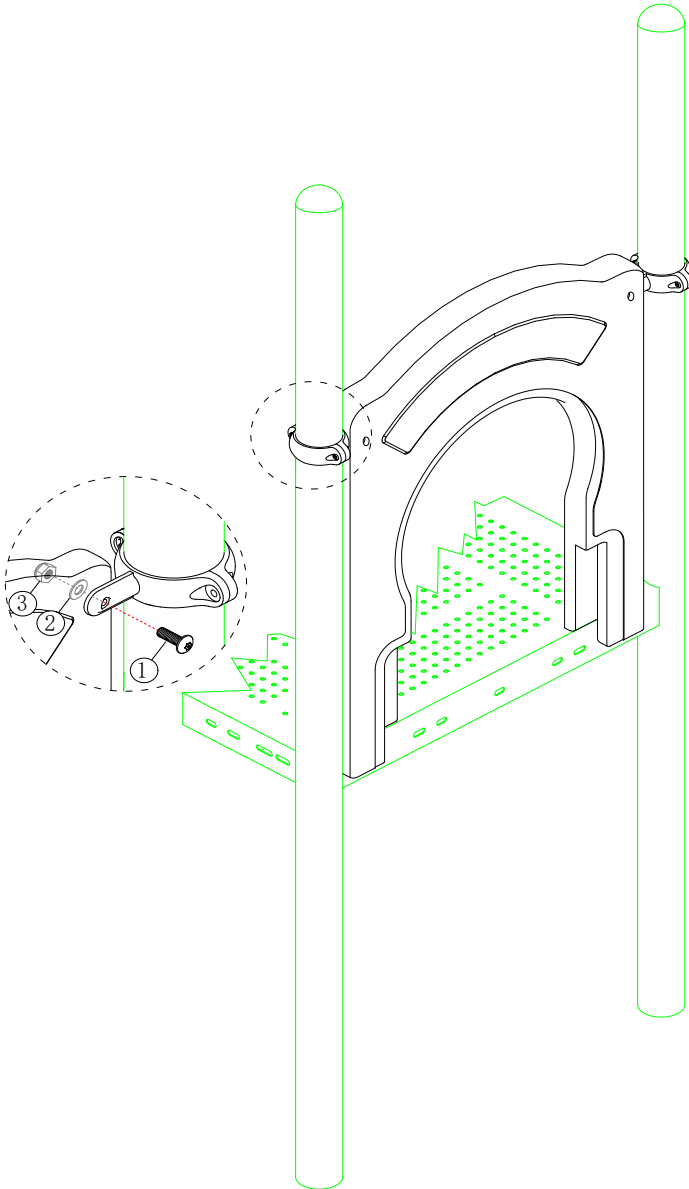


Single Wave Slide Installation - (3.5" Post)

Item Name	ID	Quantity
Single Wave Slide	Cmpnt	1
M10*45 Bolt	1	2
M10 Washer	2	4
M10 Lock Nut	3	2
M8*45 Bolt	7	2
M8 Washer	8	2
M12 Washer	9	2
M12 Barrel Nut	10	2

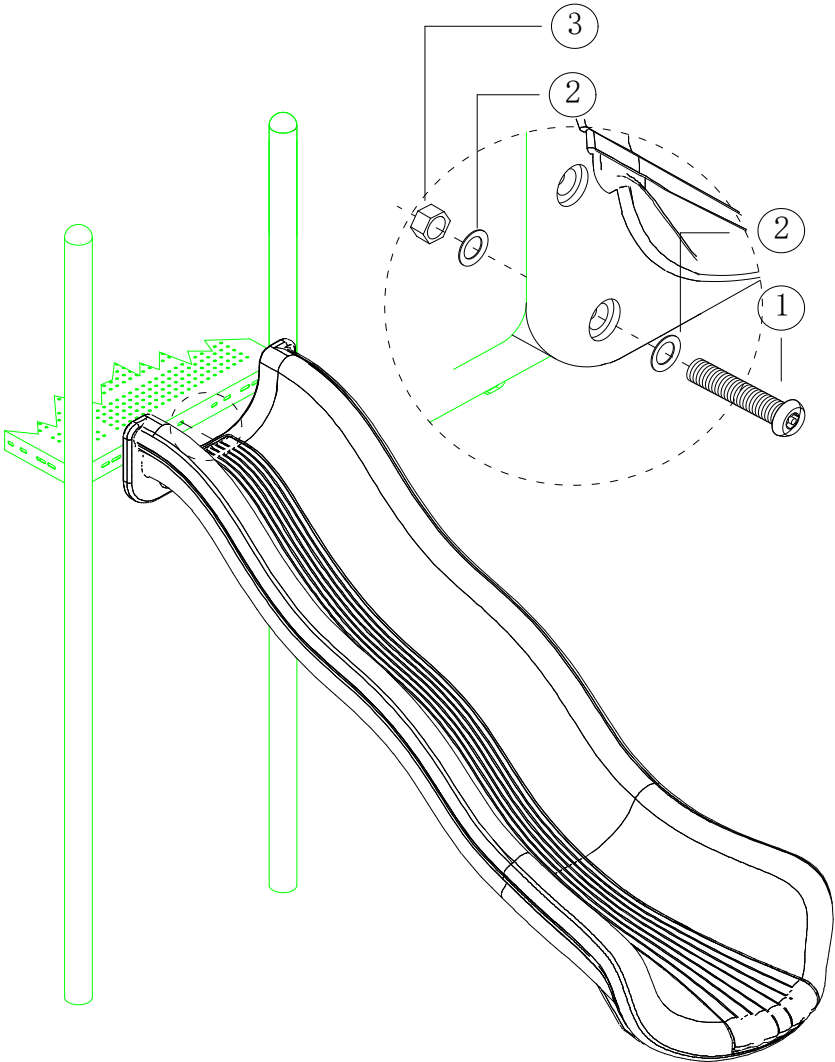


Single Wave Slide Support Installation - (3.5" Post)

Item Name	ID	Quantity
Single Slide support	Cmpnt	1
M8*20 Bolt	1	2
M8 Spring Washer	2	2
M8 Washer	3	2

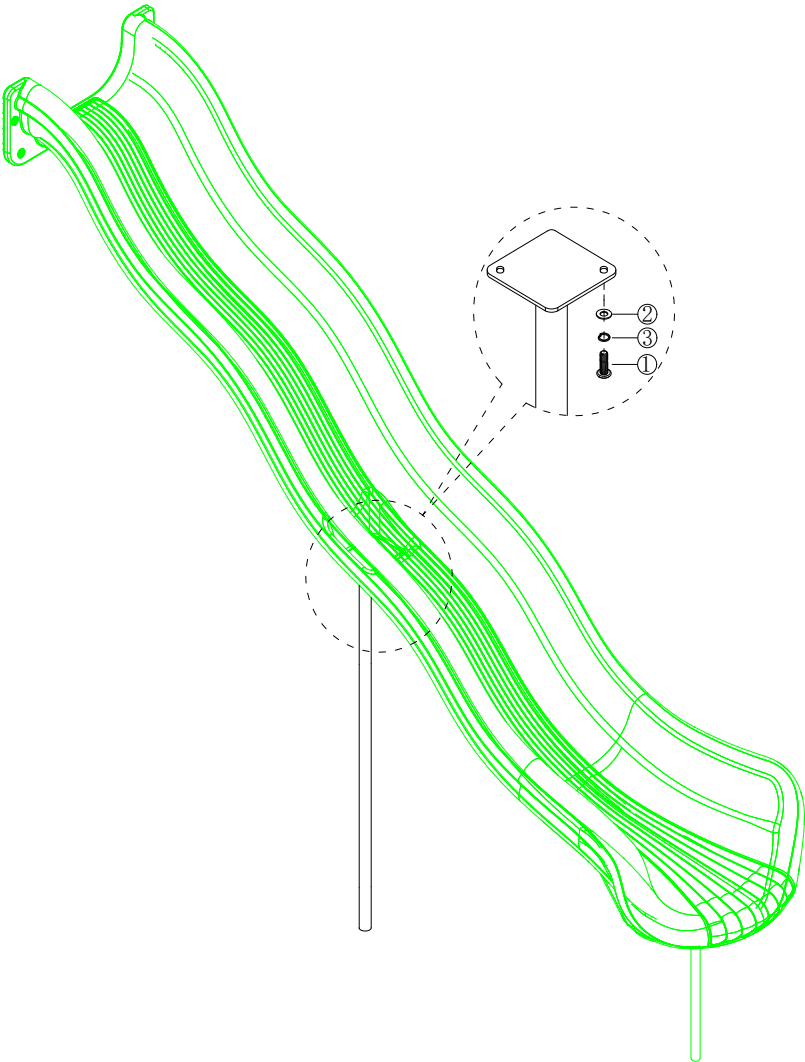


Single Slide Infoot Installation - (3.5" Post)

Item Name	ID	Quantity
Single Slide Infoot	Cmpnt	1
M8*20 Bolt	1	2
M8 Spring Washer	2	2
M8 Washer	3	2

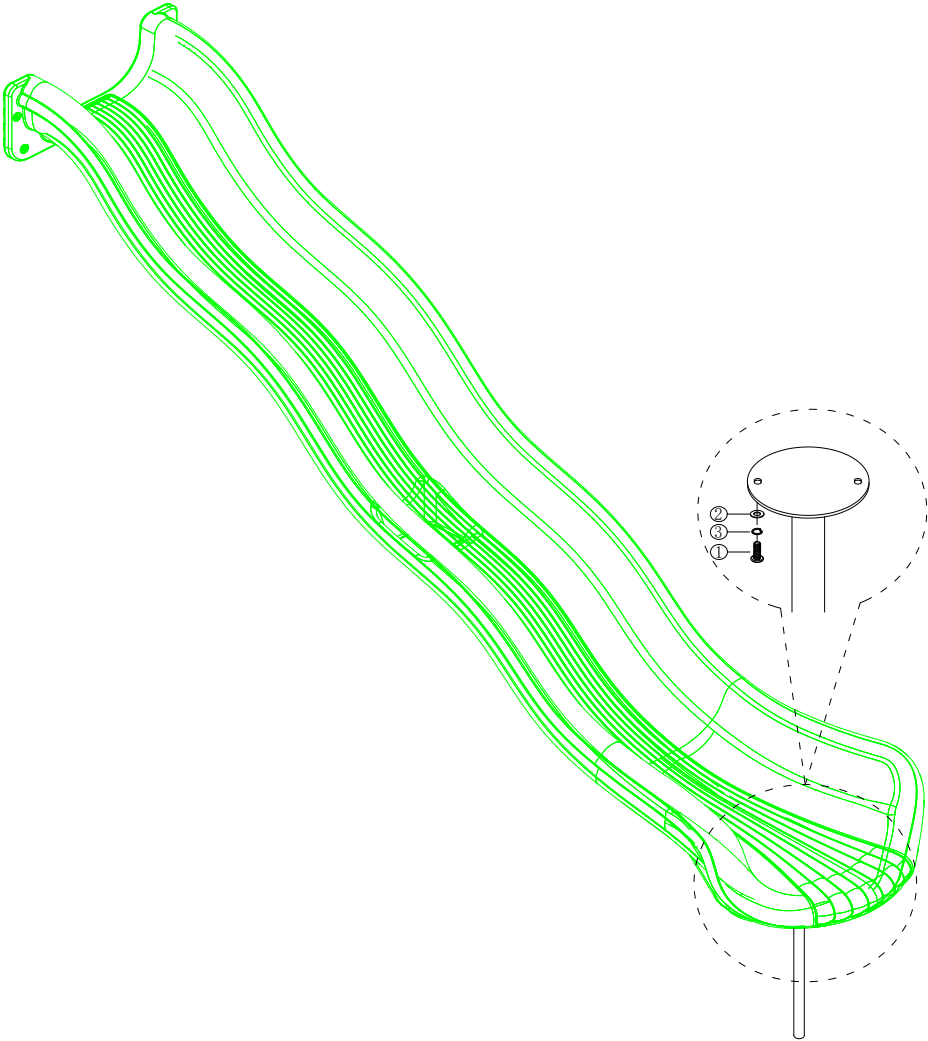


Hole Panel Installation - (3.5" Post)

Item Name	ID	Quantity
Hole Panel	Cmpnt	1
Flat Clamp	1	2
M8*40 Bolt	2	2
M8 Washer	3	2
M8 Lock Nut	4	2
M10*50 Bolt	2	2
M10 Washer	3	4
M10 Lock Nut	4	2

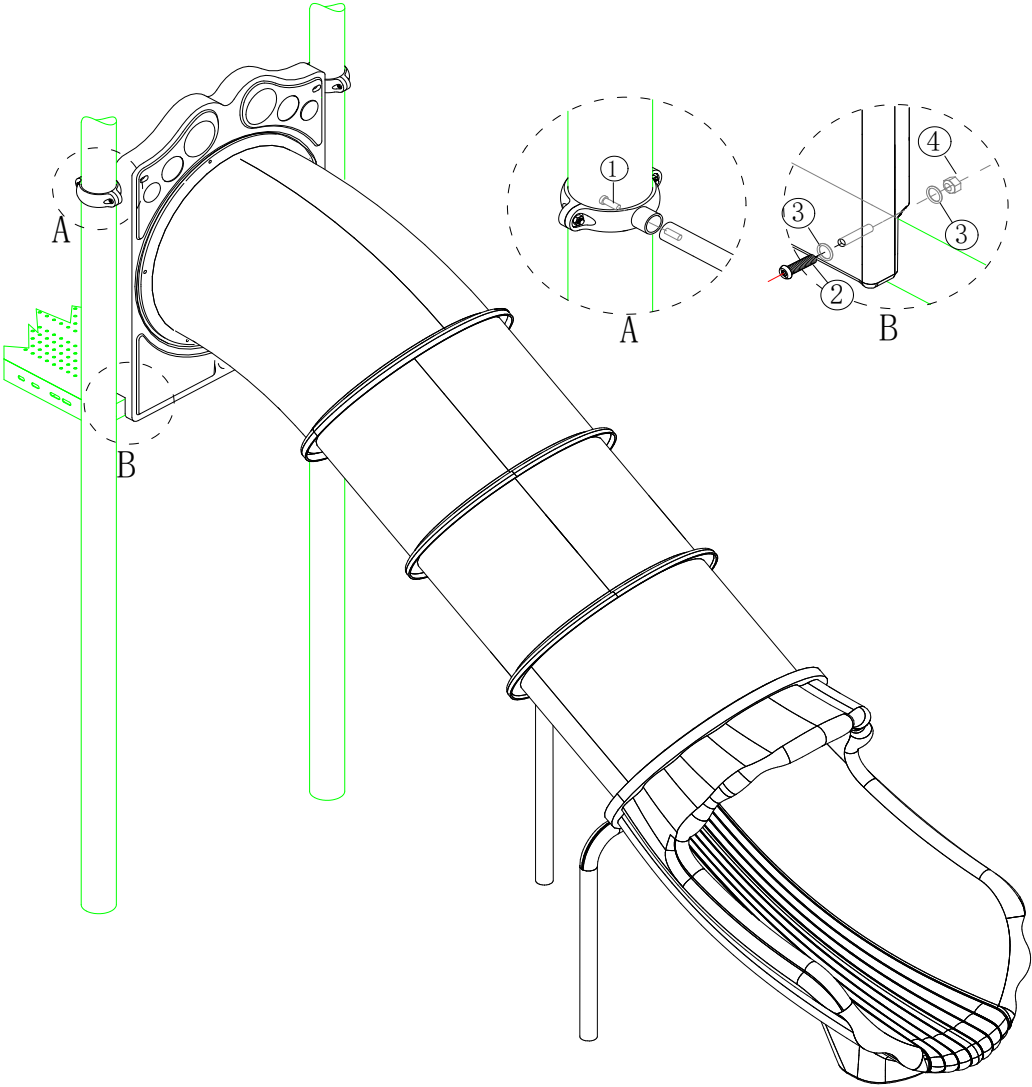


Tube Slide Installation - (3.5" Post)

Item Name	ID	Quantity
Tube Slide	Cmpnt	1
M8*30 Bolt	1	8
M8 Washer	2	16
M8 Lock Nut	3	8

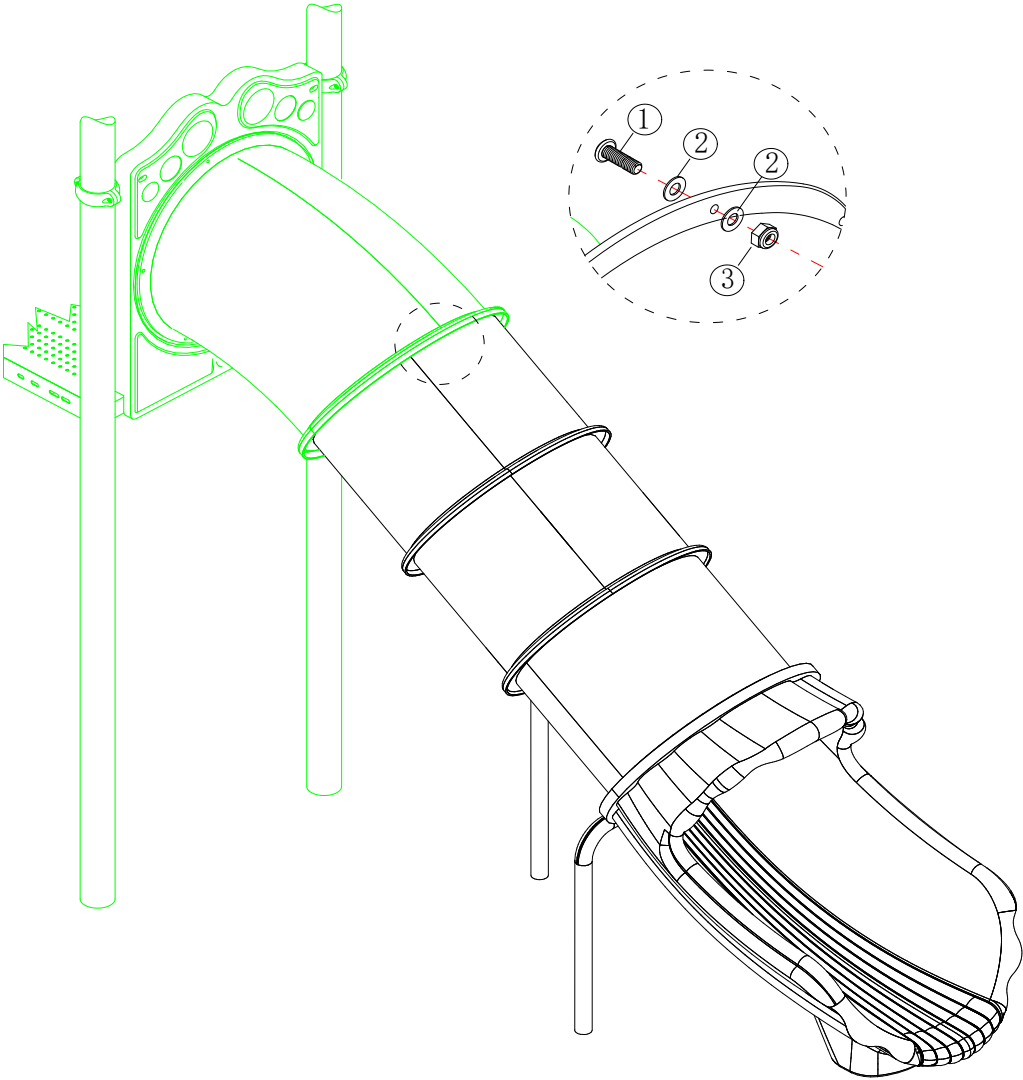


Tube Slide Support Installation - (3.5" Post)

Item Name	ID	Quantity
Tube Slide Support	Cmpnt	1
M8*37 Bolt	1	4
M8 Washer	2	8
M8 Lock Nut	3	4

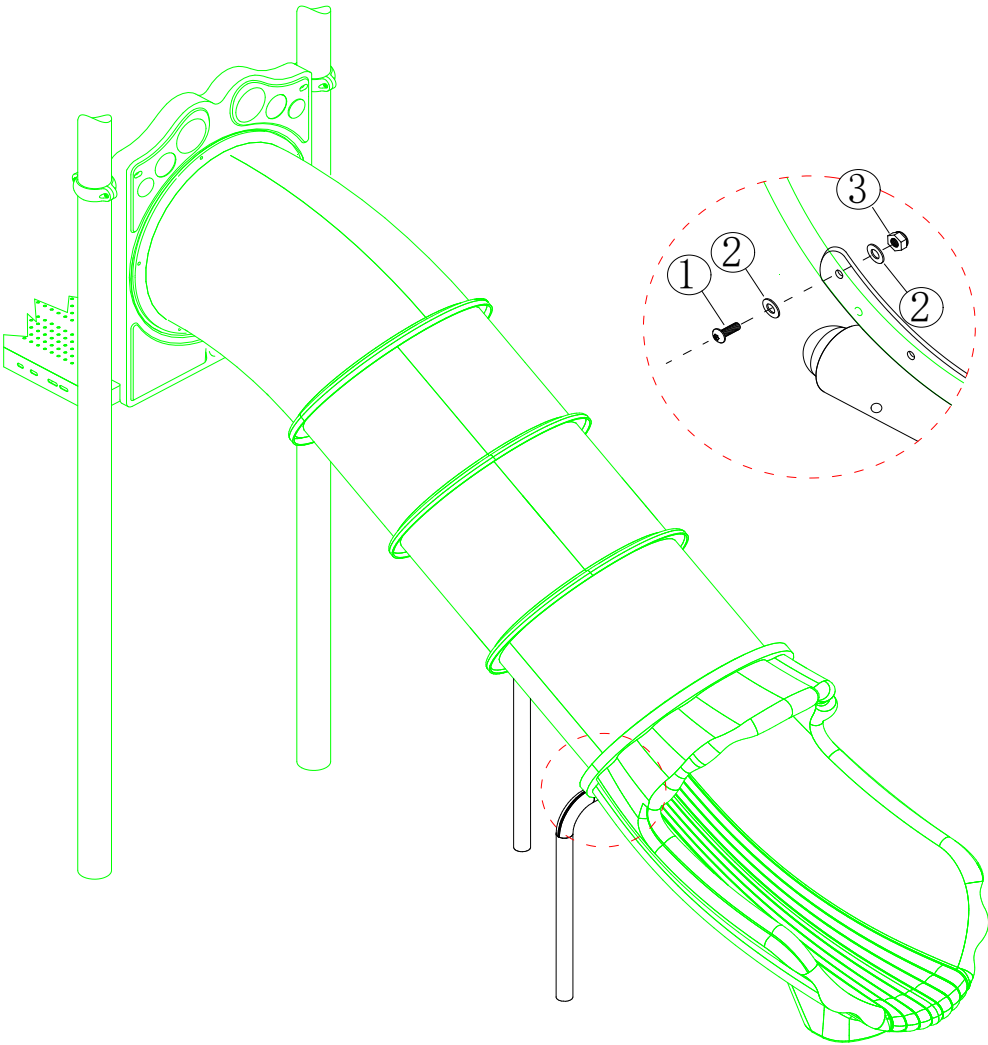


Tube Slide Infoot Installation - (3.5" Post)

Item Name	ID	Quantity
Tube Slide Infoot	Cmpnt	1
M8*20 Bolt	1	2
M8 Spring Washer	2	2
M8 Washer	3	2

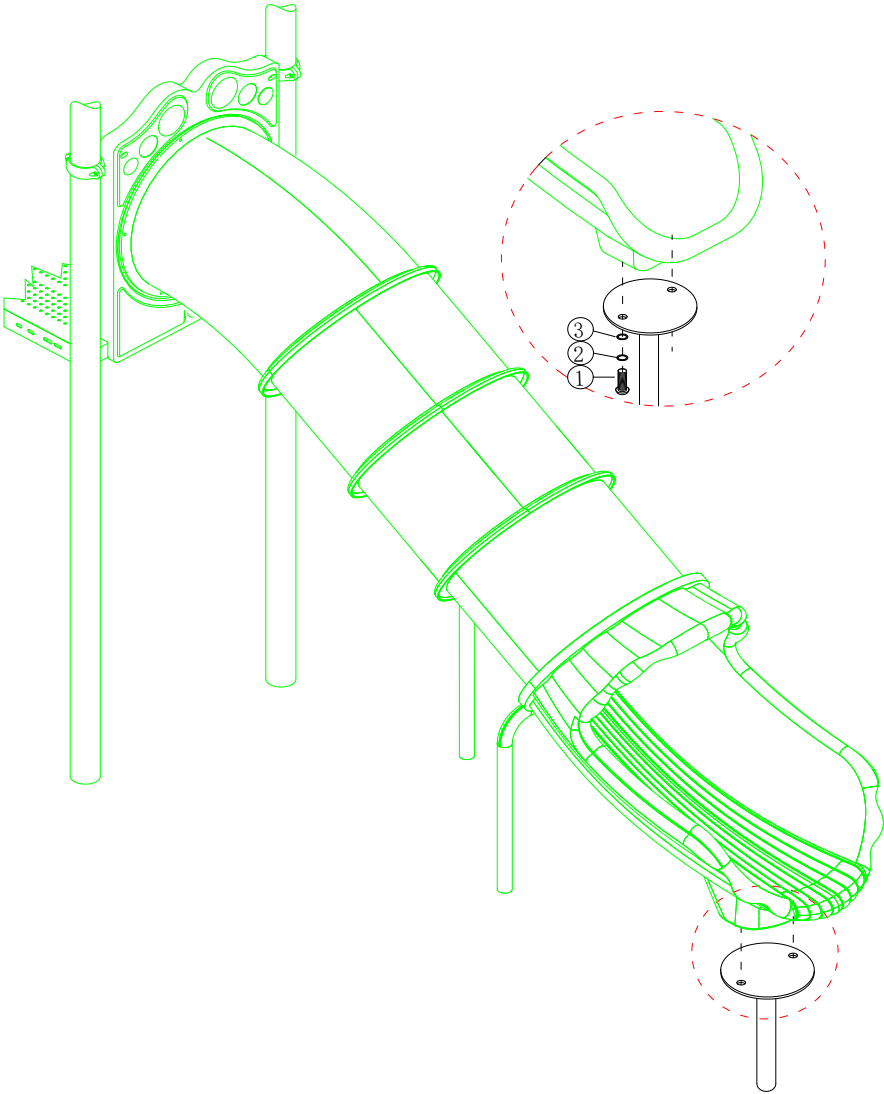


Line Panel Installation - (3.5" Post)

Item Name	ID	Quantity
Line Panel	Cmpnt	1
Flat Clamp	1	2
M8*40 Bolt	2	2
M8 Washer	3	2
M8 Lock Nut	4	2
M10*50 Bolt	2	2
M10 Washer	3	4
M10 Lock Nut	4	2

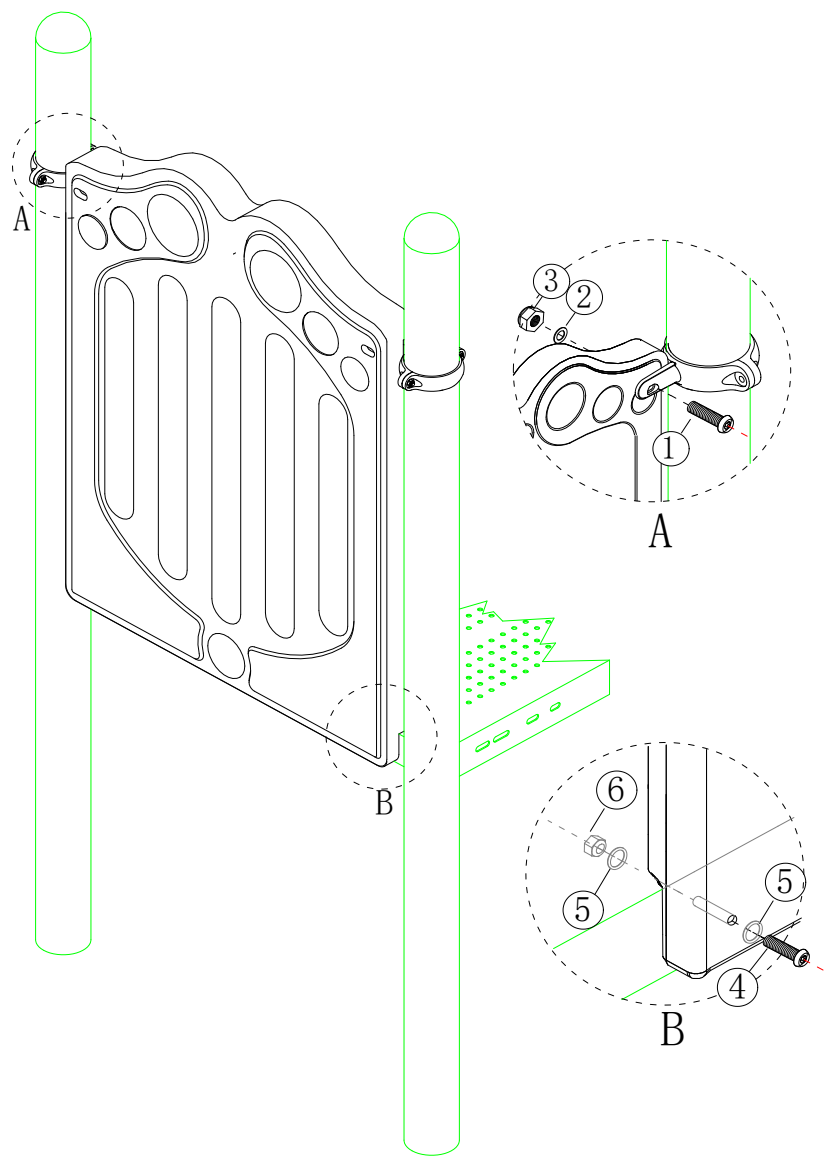


Bench Panel Installation - (3.5" Post)

Item Name	ID	Quantity
Bench Panel	Cmpnt	1
Flat Clamp	1	4
M8*25 Bolt	2	4

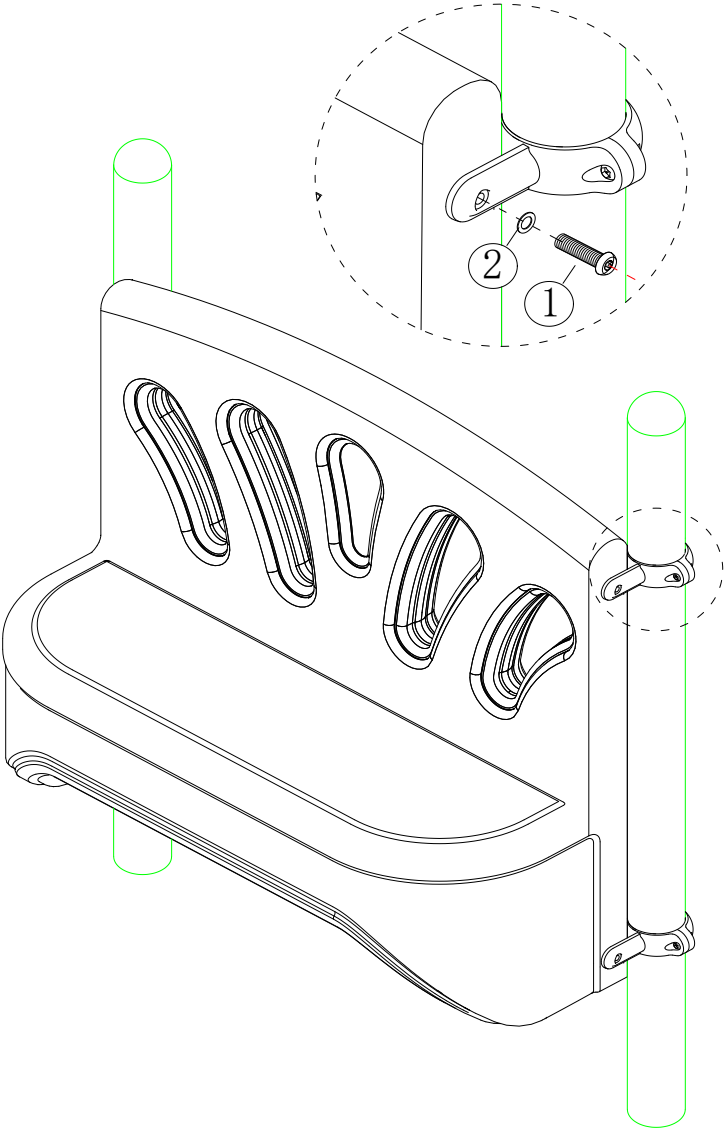


Bench Panel Infoot Installation - (3.5" Post)

Item Name	ID	Quantity
Bench Panel Infoot	Cmpnt	1
M10*20 Bolt	1	2
M10 Spring Washer	2	2
M10 Washer	3	2

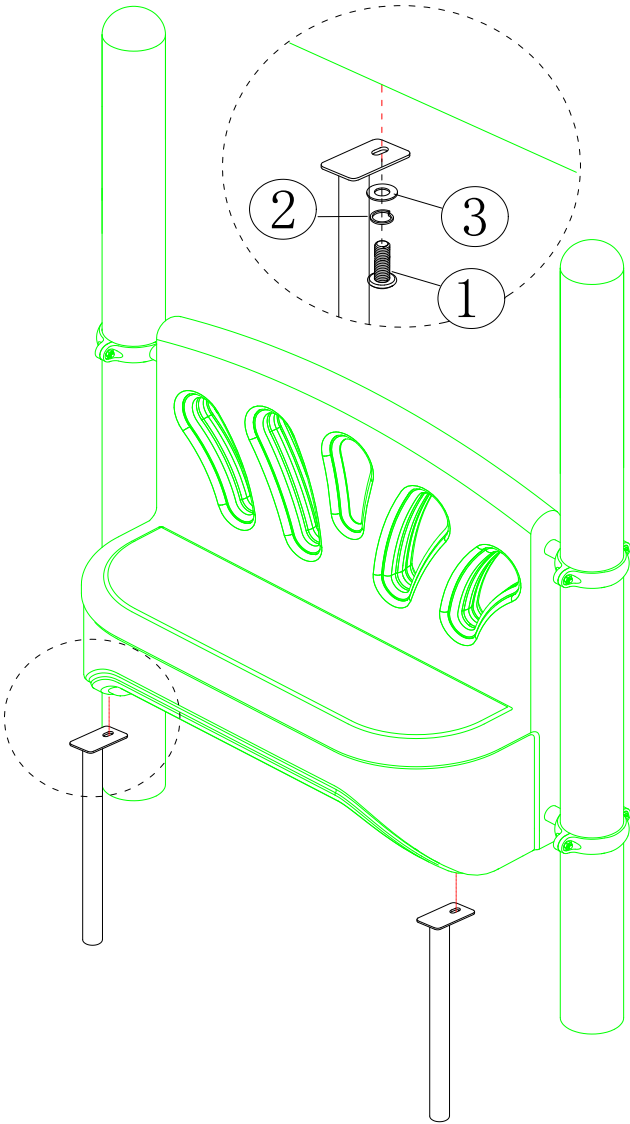

Rain Wheel Installation - (3.5" Post)

Item Name	ID	Quantity
Rain Wheel	Cmpnt	1
Wheel Clamp	1	1

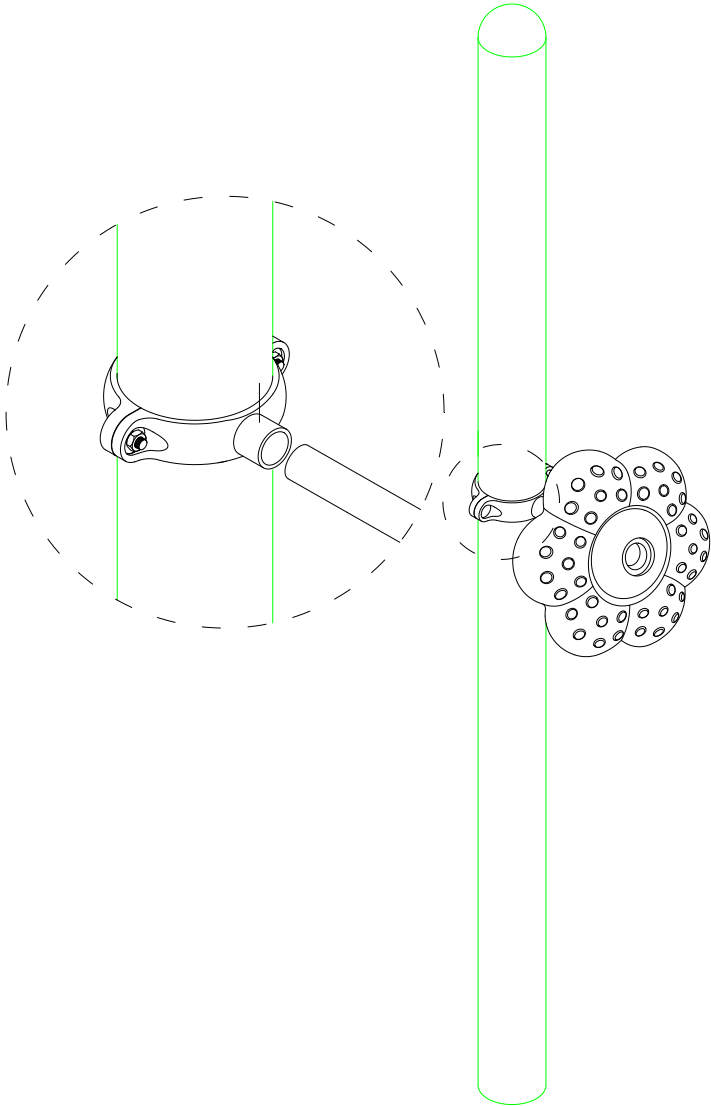

Line Roof Installation - (3.5" Post)

Item Name	ID	Quantity
Line Roof	Cmpnt	1
M4*75 Bolt	1	4
M8 Washer	2	4
M8 Plastic Cap	3	4

