

Sugar Land

Installation Guide

PKP328P / PKP328N | Quick Ship

Manufacturer model reference: 260908-GB-3-CR001

Product-specific technical document

Before installation

This guide is provided for information and planning purposes. Product designs and installation requirements may change over time. Before beginning installation, please review the instructions included with your product and confirm that you are using the most current product-specific instructions. If there is any difference, follow the current instructions supplied with the product.

White-label edition prepared September 12, 2026.


Source technical instructions and source dates retained on the following pages.

Inground Post/Mount Installation

STEP:1


**DO NOT CEMENT POSTS/MOUNTS
INTO PLACE UNTIL THE ENTIRE
STRUCTURE IS ASSEMBLED.**

Refer to the General Installation
guide footing size installation and
digging proper holes for the
support posts/mounts.

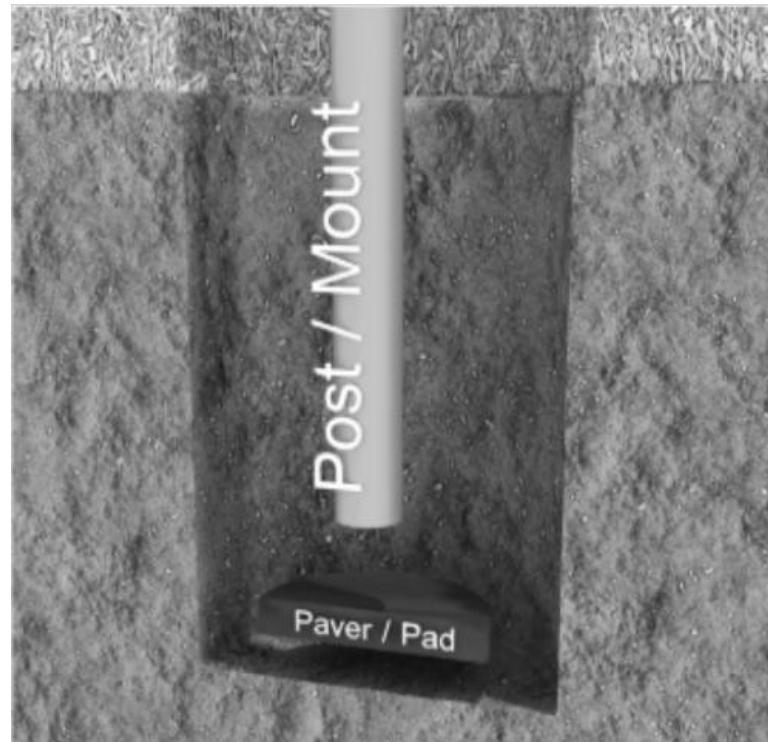


Square Deck Installation - (3.5" Post)

Item Name	ID	Quantity
Square Deck	Cmpnt	1
M10*35 Bolt	1	4
M10 Washer	2	8
M10 Lock Nut	3	4

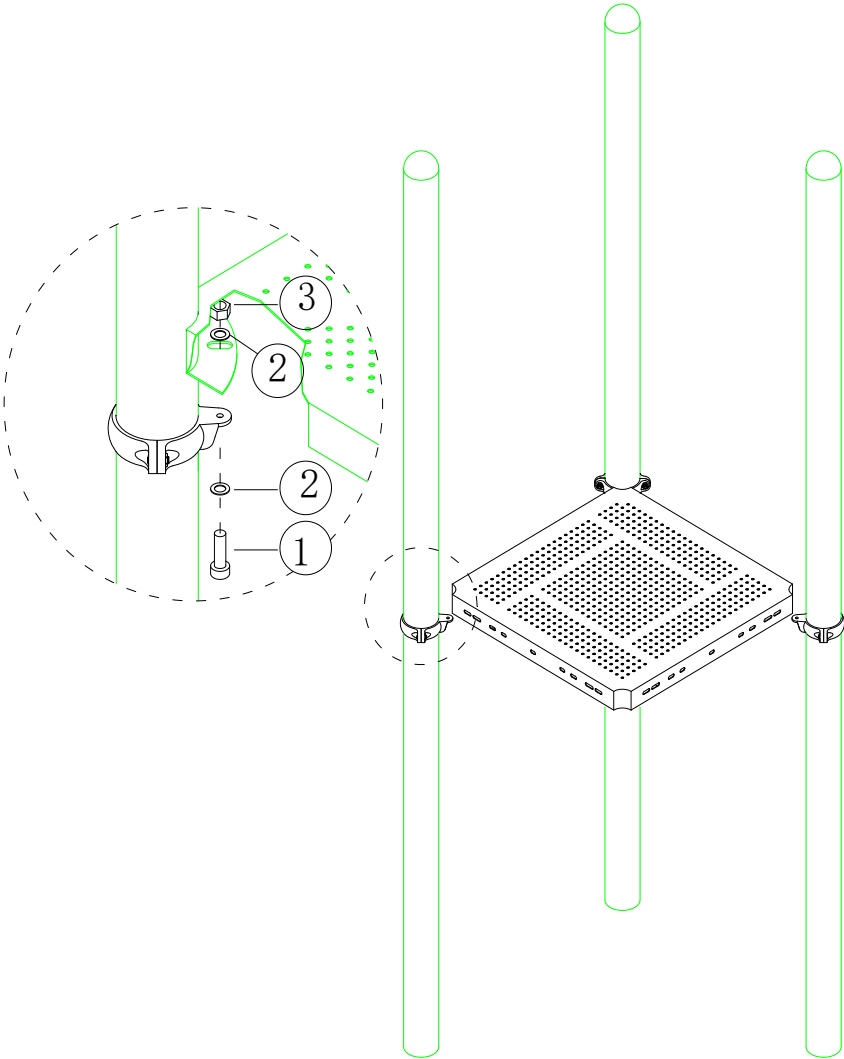


Transfer Stair Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Stair	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

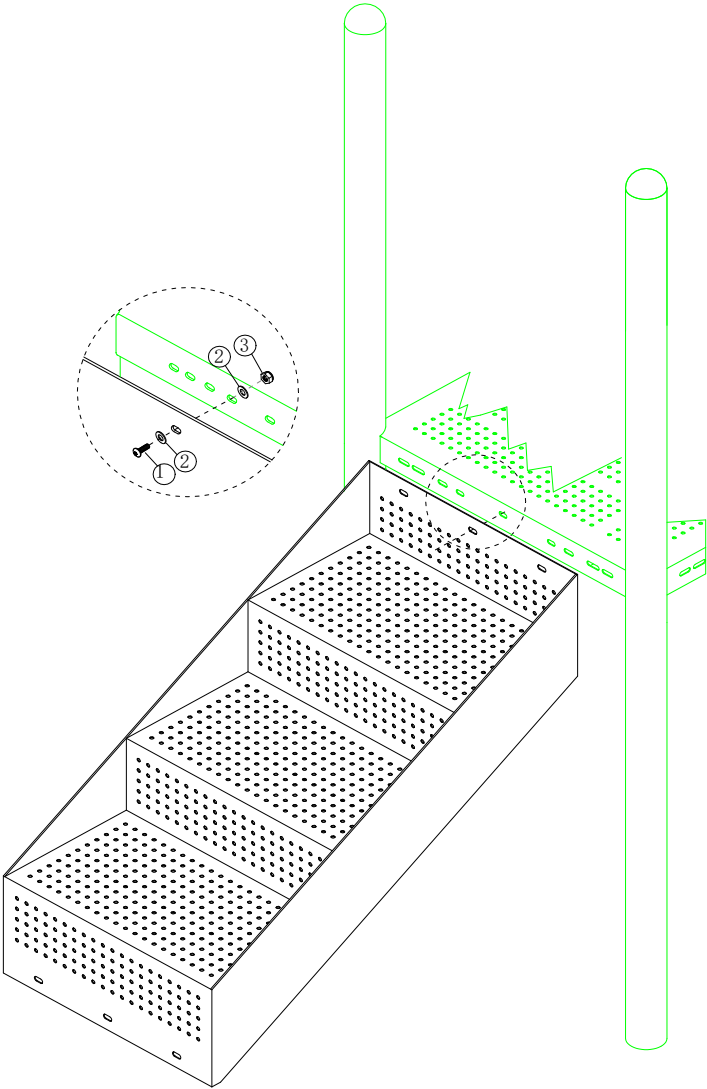


Transfer Stair Rail Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Stair Rail	Cmpnt	1
Tube Clamp	1	4
M8*25 Bolt	2	4
M10*30 Bolt	3	4
M10 Washer	4	8
M10 Lock Nut	5	4

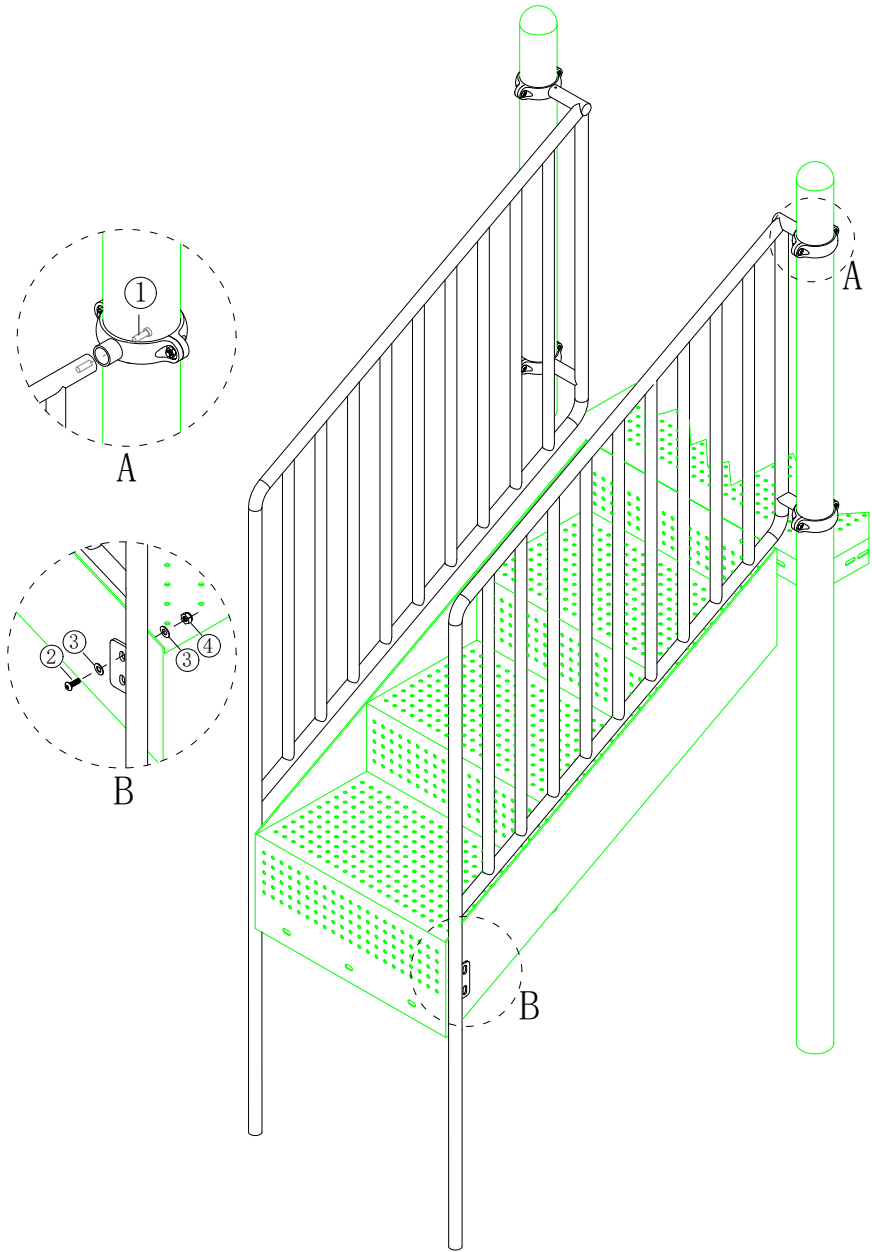


Transfer Deck Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Deck	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

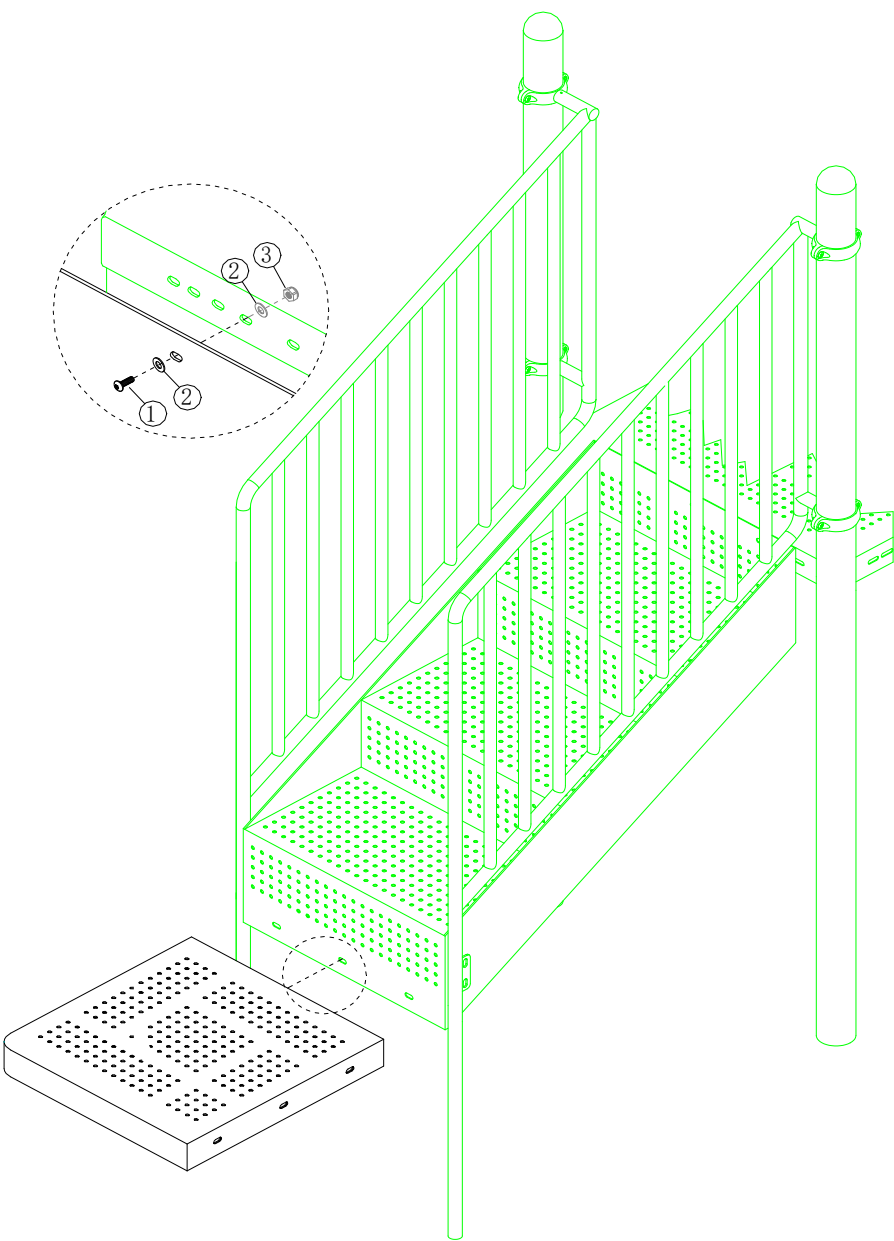


Transfer Deck Rail Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Deck Rail	Cmpnt	1
M10*70 Bolt	1	2
M10*25 Bolt	2	2
M10 Washer	3	6
M10 Lock Nut	4	4

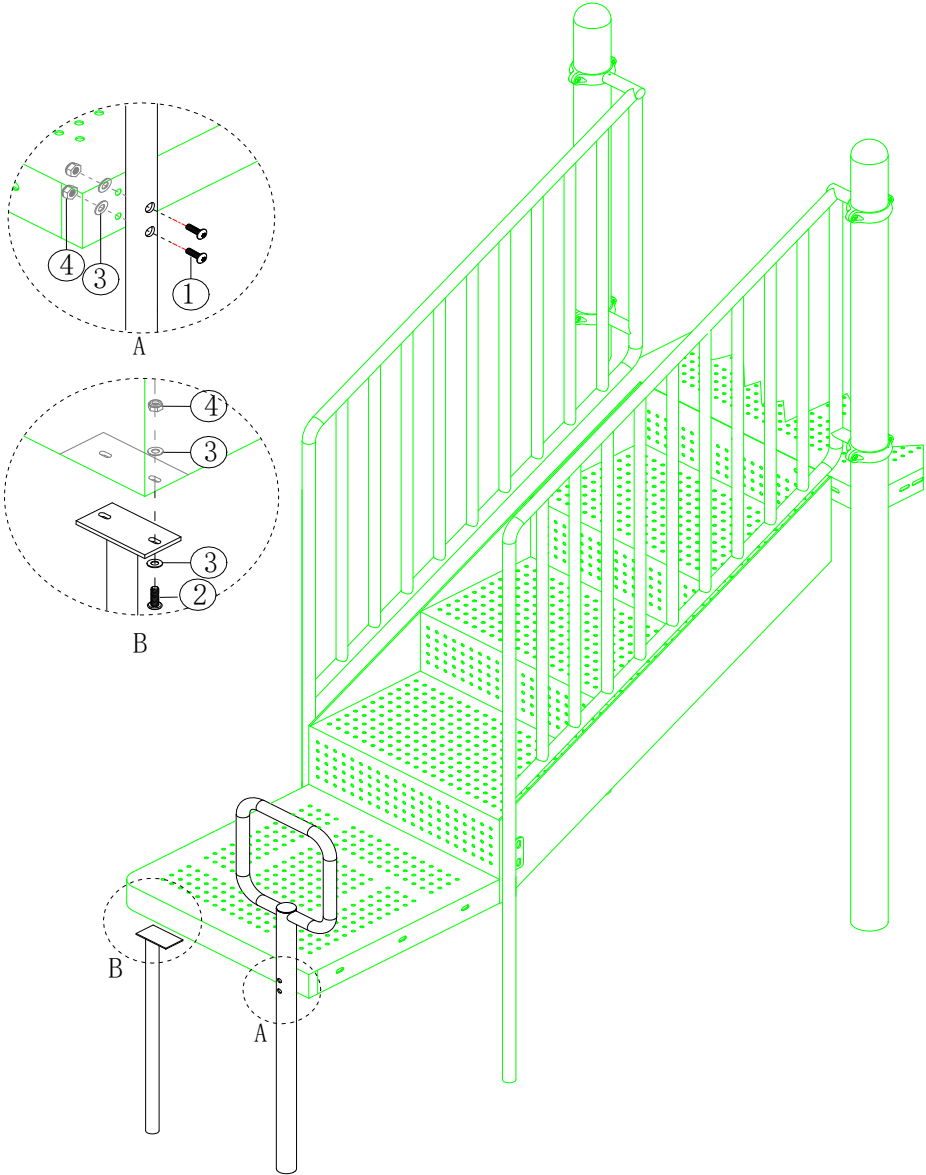


Transfer Step Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Step	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

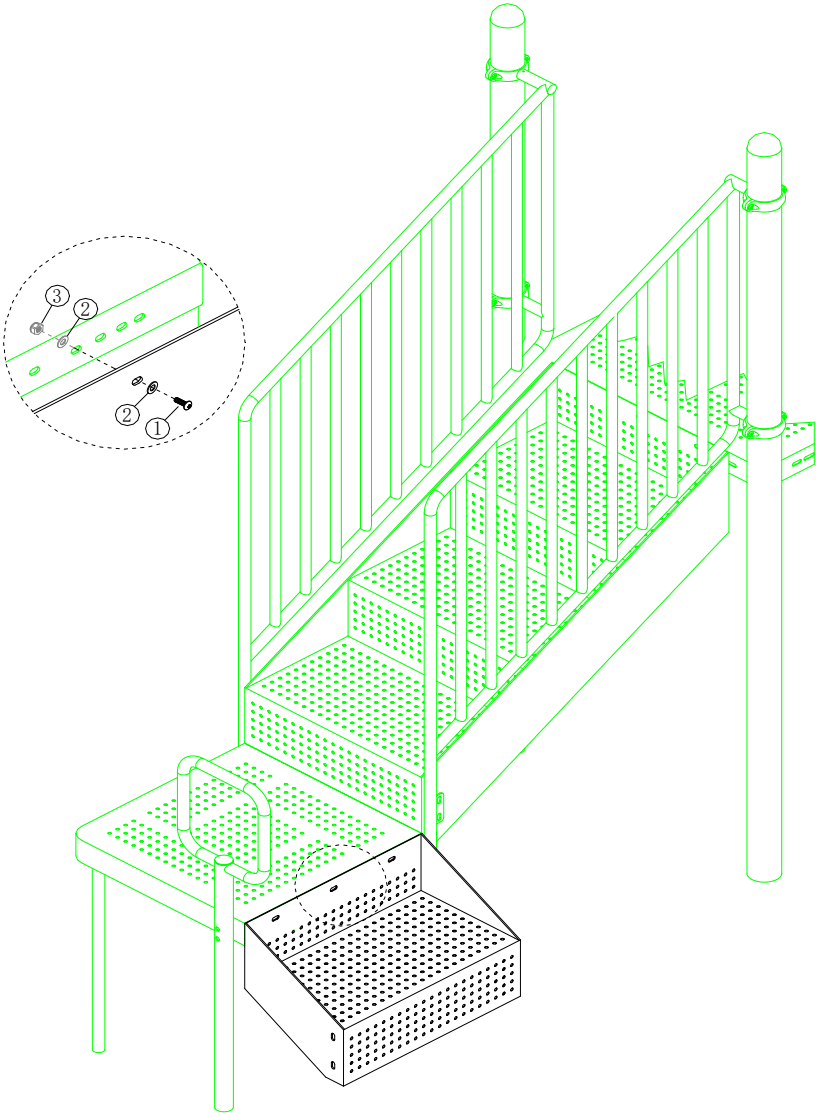


Transfer Step Infoot Installation - (3.5" Post)

Item Name	ID	Quantity
Transfer Step Infoot	Cmpnt	1
M10*25 Bolt	1	3
M10 Washer	2	6
M10 Lock Nut	3	3

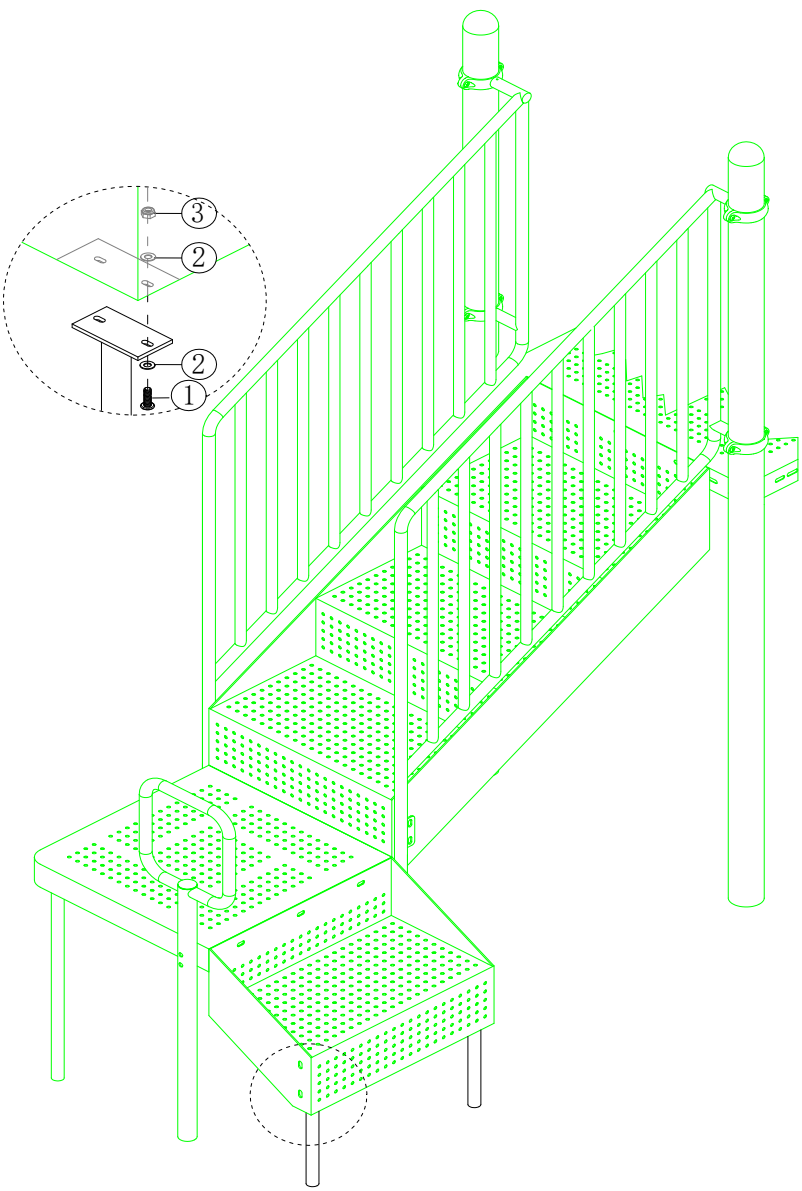


Arch Entry Rail Installation - (3.5" Post)

Item Name	ID	Quantity
Arch Entry Rail	Cmpnt	1
Tube Clamp	1	2
M8*25 Bolt	2	2
M10*25 Bolt	3	2
M10 Washer	4	4
M10 Lock Nut	5	2

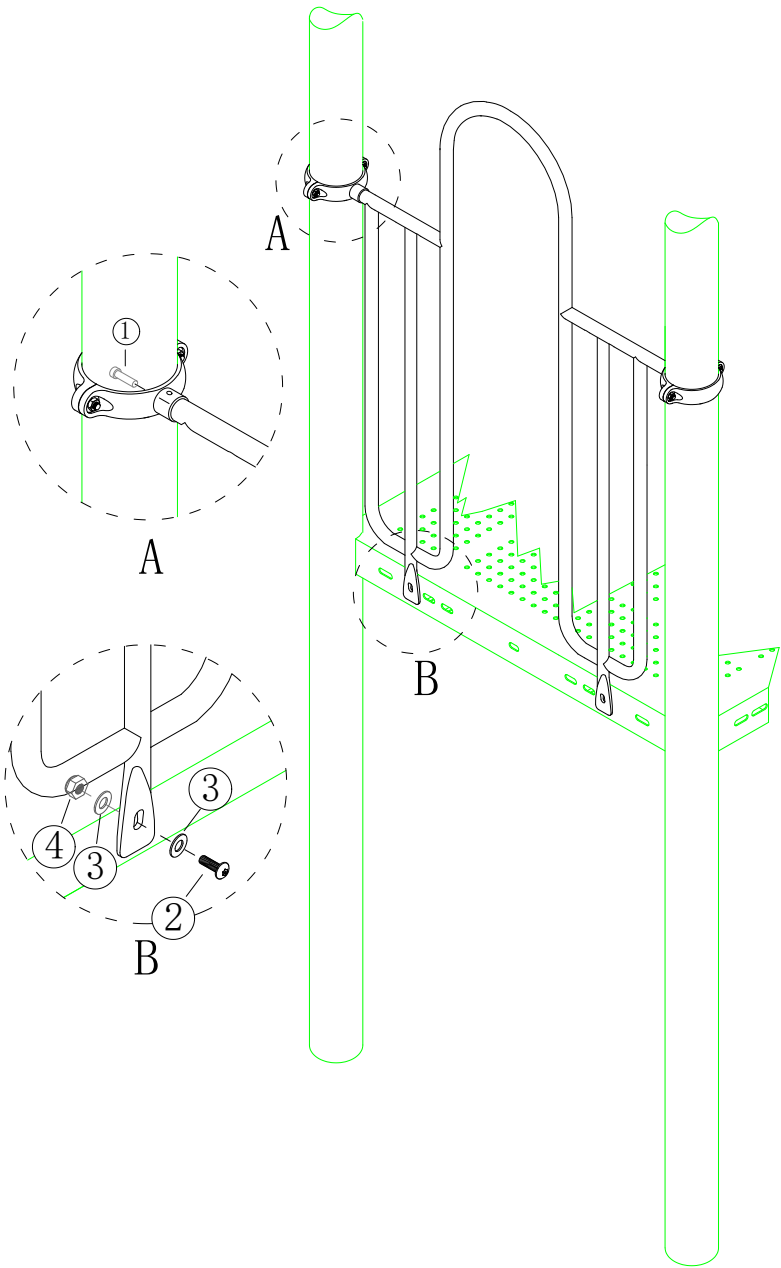


Lotus Climber Installation - (3.5" Post)

Item Name	ID	Quantity
Lotus Climber	Cmpnt	1
M10*25 Bolt	1	2
M10 Washer	2	4
M10 Lock Nut	3	2

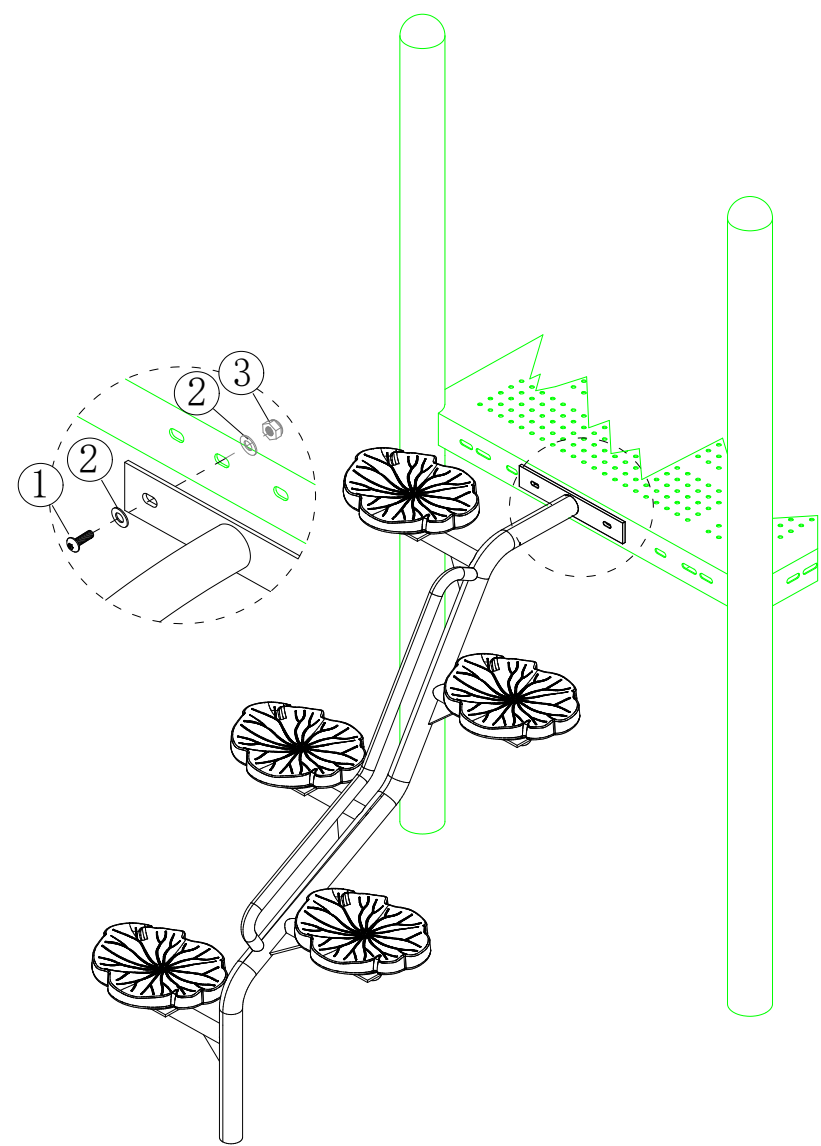


Arch Entry Rail Installation - (3.5" Post)

Item Name	ID	Quantity
Arch Entry Rail	Cmpnt	1
Tube Clamp	1	4
M8*25 Bolt	2	4

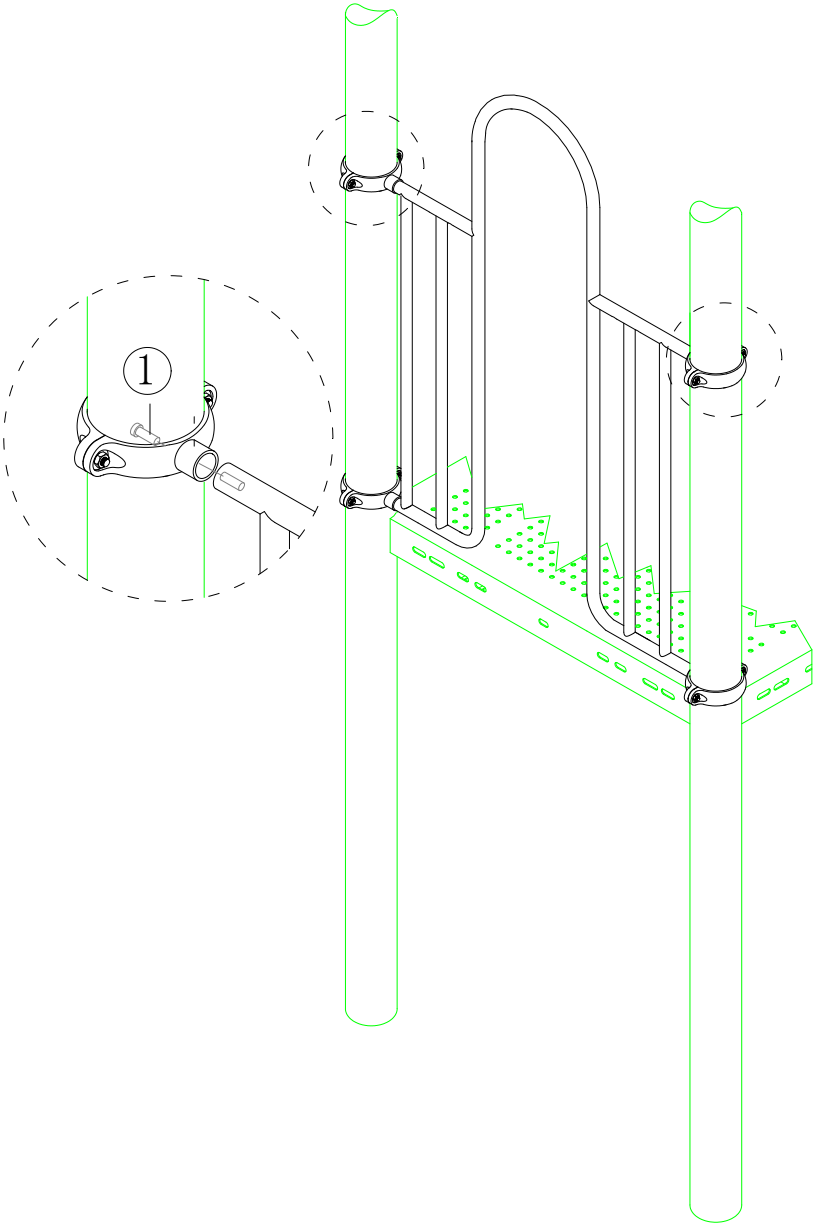


Pixel Climber Installation - (3.5" Post)

Item Name	ID	Quantity
Pixel Climber	Cmpnt	1
M10*25 Bolt	1	4
M10 Washer	2	8
M10 Lock Nut	3	4
M10*70 Bolt	4	4
M10 Washer	5	8
M10 Lock Nut	6	4

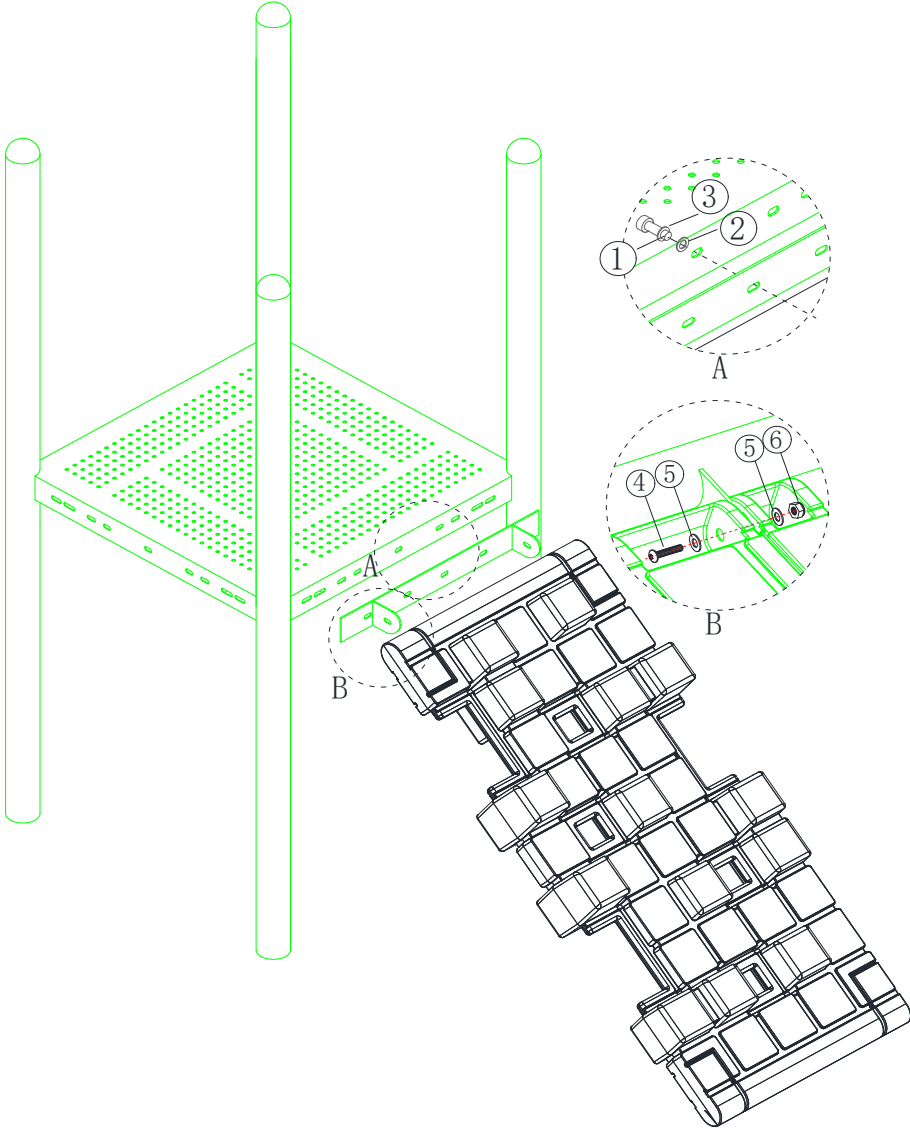


Pixel Climber Infoot Installation - (3.5" Post)

Item Name	ID	Quantity
Pixel Climber Infoot	Cmpnt	1
M10*30 Bolt	1	4
M10 Washer	2	8
M10 Lock Nut	3	4

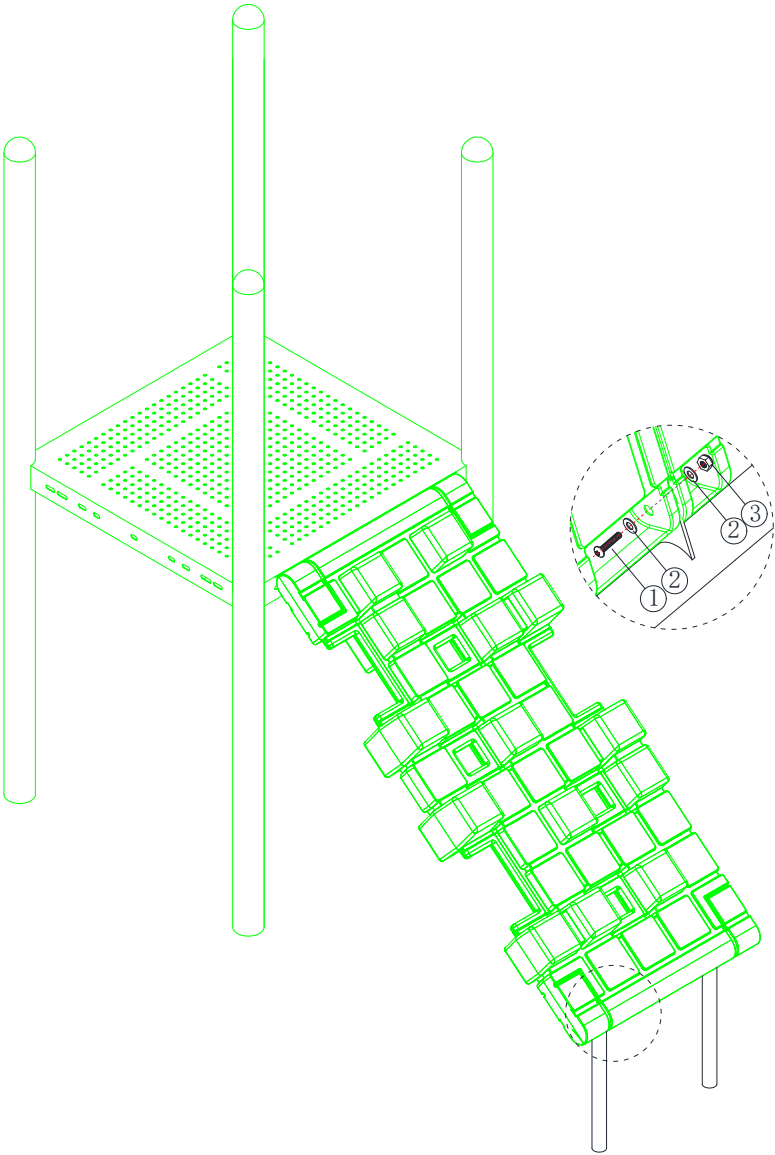


Tube Bridge Installation - (3.5" Post)

Item Name	ID	Quantity
Tube Bridge	Cmpnt	1
Tube Clamp	1	2
M8*45 Bolt	2	2
M8 Washer	3	2
M8 Lock Nut	4	2
M10*50 Bolt	5	2
M10 Washer	6	4
M10 Lock Nut	7	2

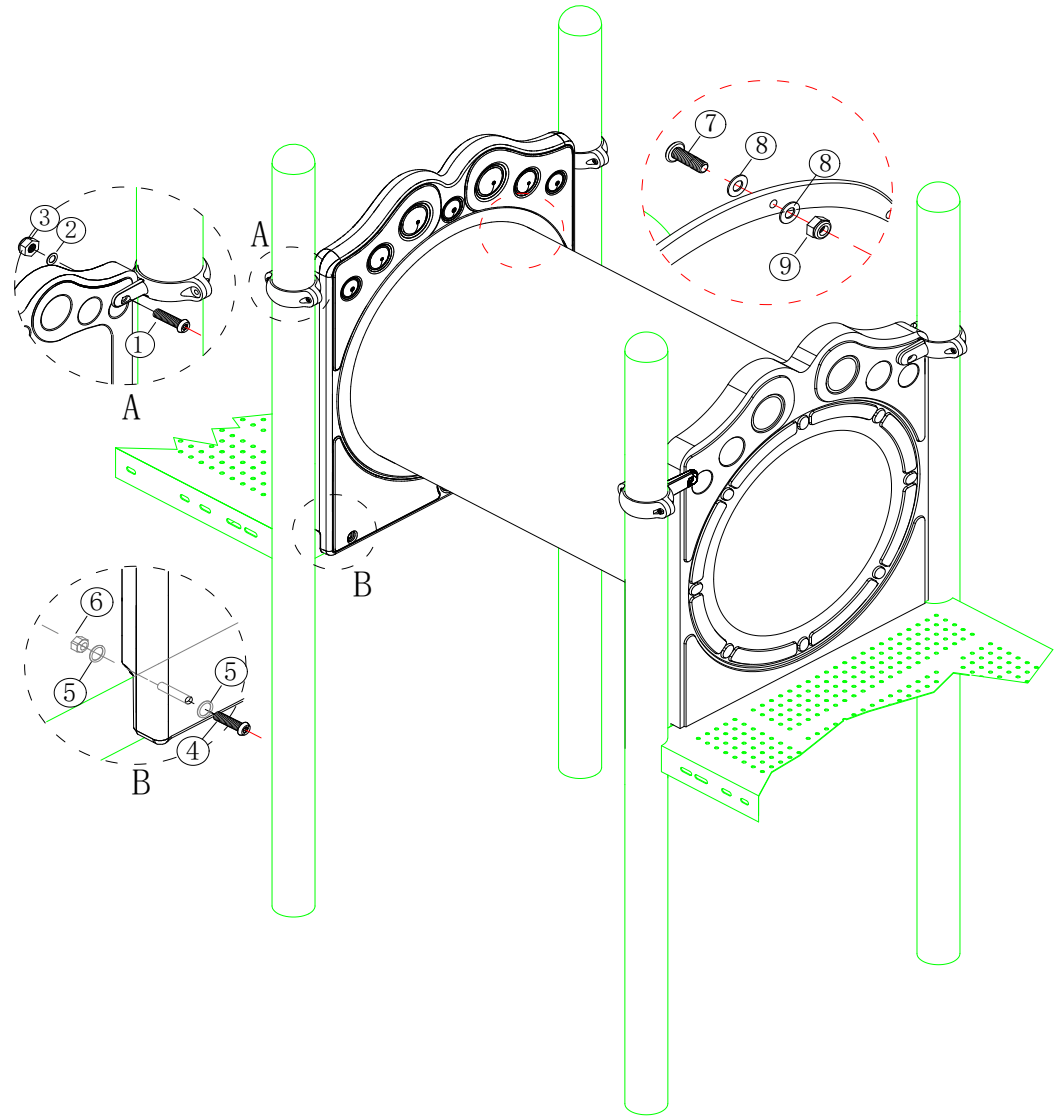


Single Slide Hood Installation - (3.5" Post)

Item Name	ID	Quantity
Single Slide Hood	Cmpnt	1
Flat Clamp	1	2
M8*40 Bolt	2	2
M8 Washer	3	2
M8 Lock Nut	4	2

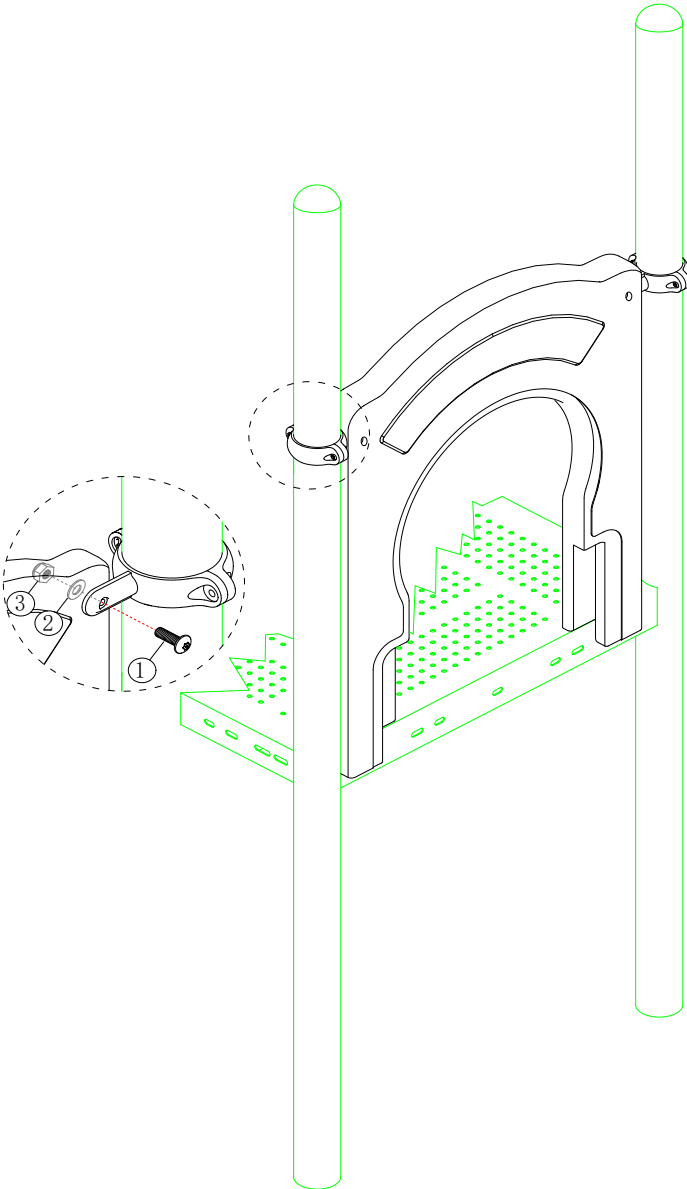


Single Straight Slide Installation - (3.5" Post)

Item Name	ID	Quantity
Single Straight Slide	Cmpnt	1
M10*45 Bolt	1	2
M10 Washer	2	4
M10 Lock Nut	3	2
M8*45 Bolt	4	2
M8 Washer	5	2
M12 Washer	6	2
M12 Barrel Nut	7	2

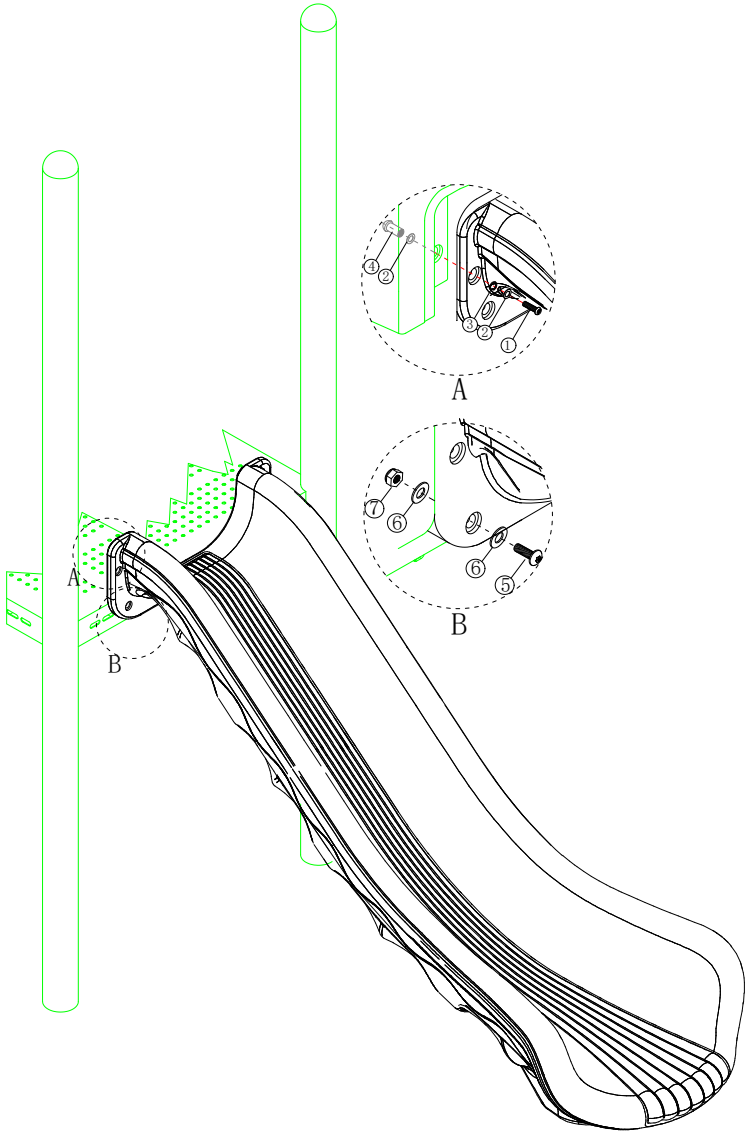


Single Straight Slide Infoot Installation - (3.5" Post)

Item Name	ID	Quantity
Single Straight Slide Infoot	Cmpnt	1
M8*20 Bolt	1	2
M8 Spring Washer	2	2
M8 Washer	3	2

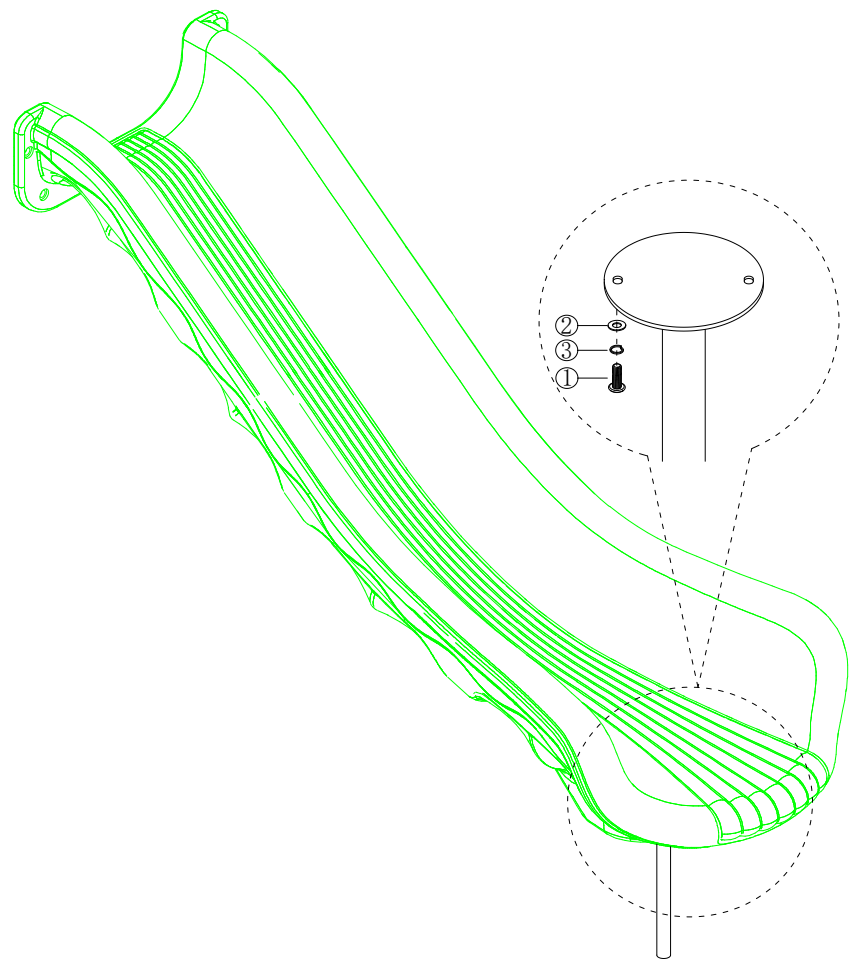


Line Panel Installation - (3.5" Post)

Item Name	ID	Quantity
Line Panel	Cmpnt	1
Flat Clamp	1	2
M8*40 Bolt	2	2
M8 Washer	3	2
M8 Lock Nut	4	2
M10*50 Bolt	2	2
M10 Washer	3	4
M10 Lock Nut	4	2

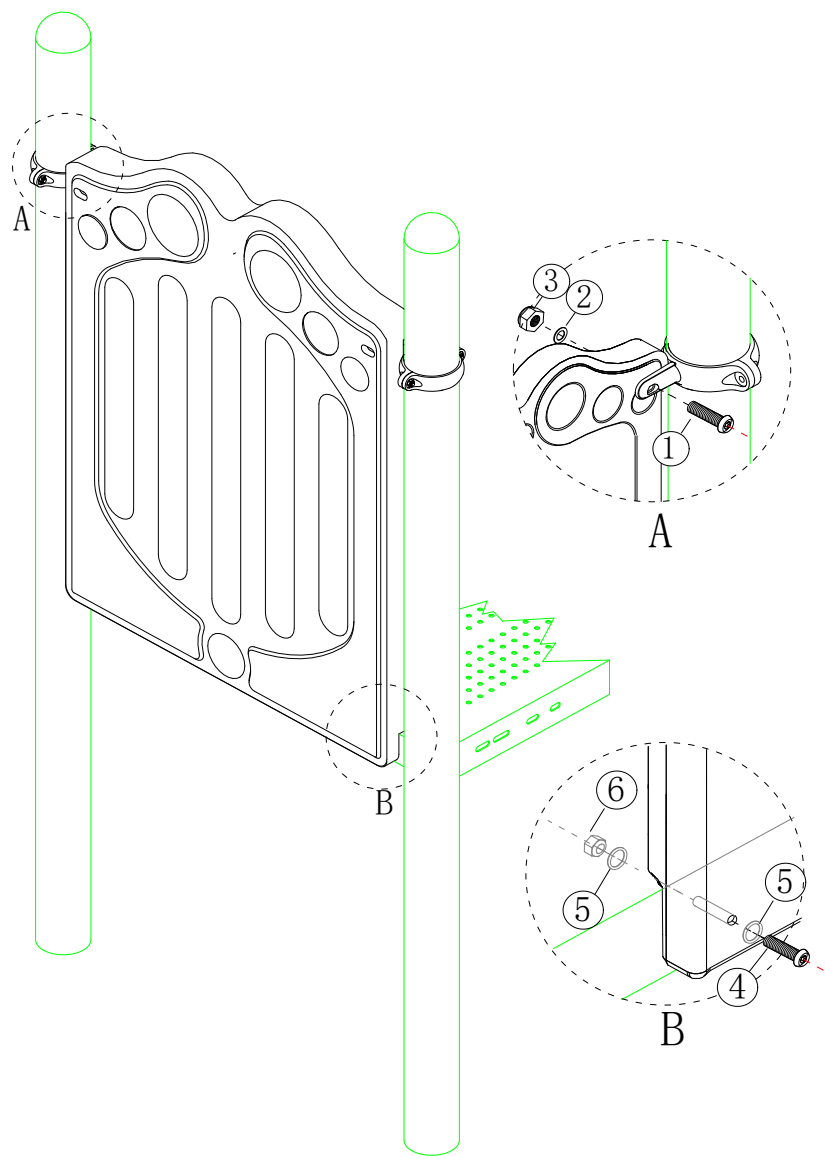


Store Panel Installation - (3.5" Post)

Item Name	ID	Quantity
Store Panel	Cmpnt	1
Flat Clamp	1	4
M8*25 Bolt	2	4

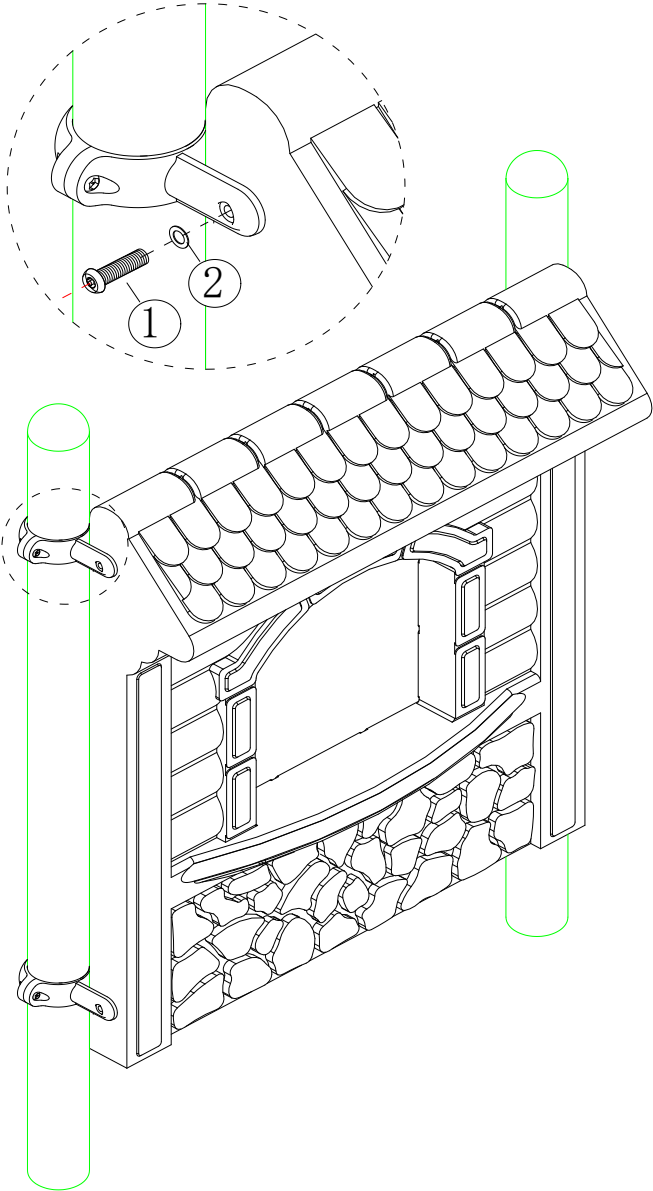

Ship Wheel Installation - (3.5" Post)

Item Name	ID	Quantity
Ship Wheel	Cmpnt	1
Wheel Clamp	1	1

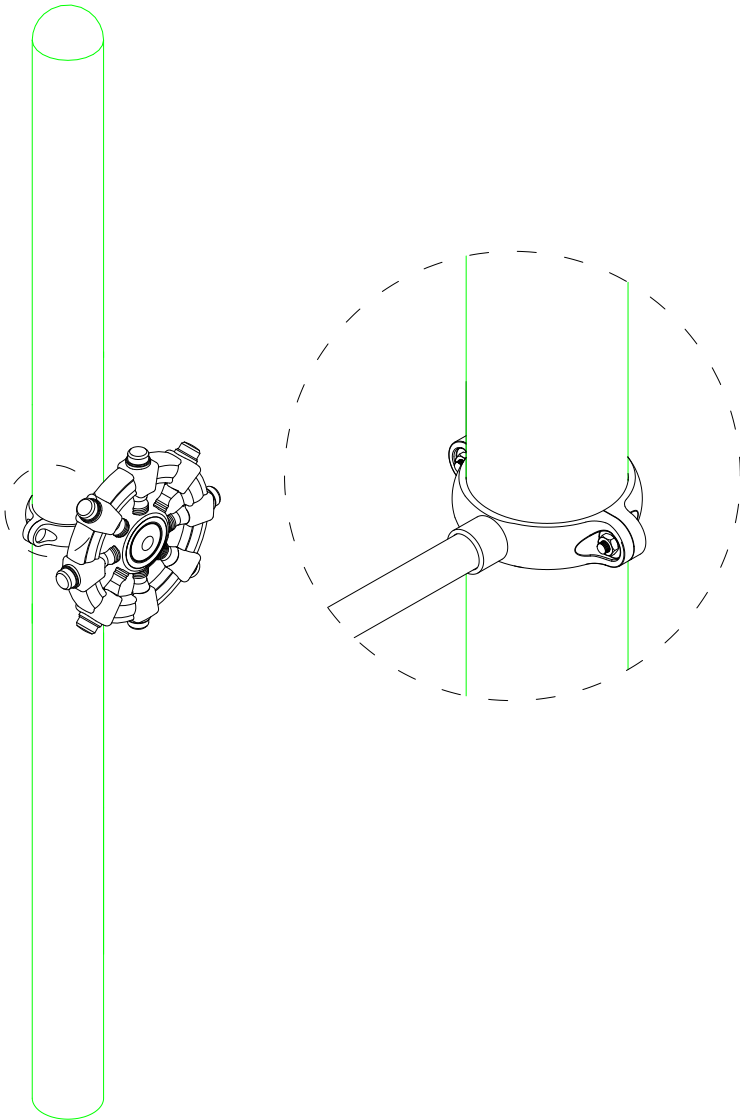

Line Roof Installation - (3.5" Post)

Item Name	ID	Quantity
Line Roof	Cmpnt	1
M4*75 Bolt	1	4
M8 Washer	2	4
M8 Plastic Cap	3	4

