RubberMulchOutlet.com
COMMERCIAL PLAYGROUNDS
SURFACING • SITE SOLUTIONS

MODEL-SPECIFIC

INSTALLATION INSTRUCTIONS

Installation Manual

Product-Specific Installation Reference

MODEL NUMBER	GUIDE LEVEL	DOCUMENT STATUS
PMC002N; PMC002P	Model-Specific	Customer Reference Copy

Helpful Installation Note

This guide is provided for information and planning purposes. Product designs and installation requirements may change over time. Before beginning installation, please review the instructions included with your product and confirm that you are using the most current product-specific instructions. If there is any difference, follow the current instructions supplied with the product.

Need help confirming the correct guide? Contact Rubber Mulch Outlet.

Metallophone Installation

STEP: 1

Using eight (8) M8 set screws connect Glockenspiel top to post.	

STEP: 2

Attach mallets to post using V-bracket supplied and two (2) M6 set screws for each bracket.	

Date Modified: 12/01/2020

Metallophone Installation

STEP: 3

Drill four (4) holes into the concrete 1/2 inch deeper than the anchor will penetrate. Make sure that the minimum embedment requirements are met. Clean out the holes.	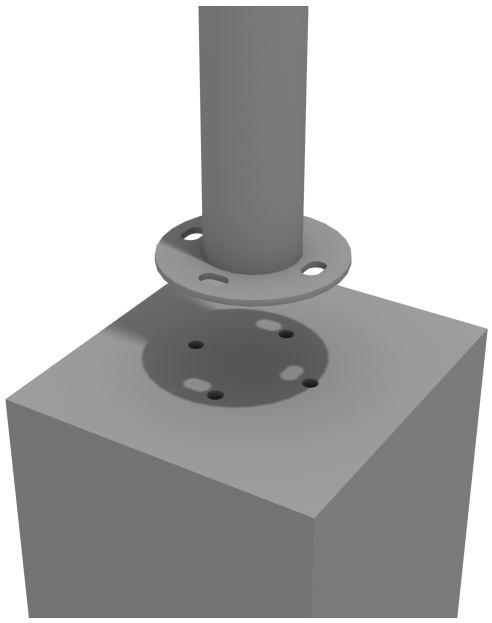

STEP: 4

Hammer the bottom of the wedge anchor into the concrete. Make sure this is a tight fit.	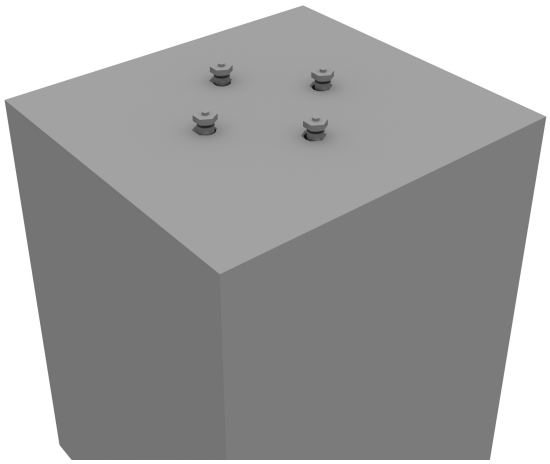

Date Modified: 12/01/2020

Metallophone Installation

STEP: 5

Using four (4) lock nuts and four (4) washers, tighten the nuts into the previously hammered in anchors.	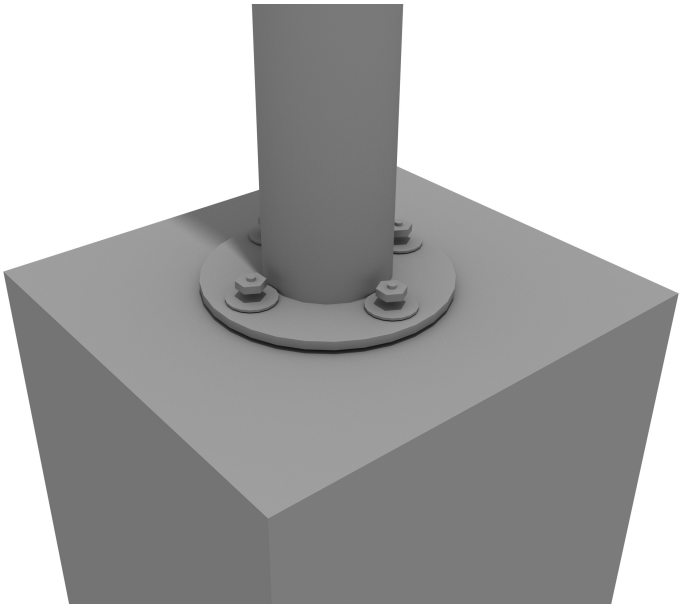

Date Modified: 12/01/2020