RubberMulchOutlet.com
COMMERCIAL PLAYGROUNDS
SURFACING • SITE SOLUTIONS

MODEL-SPECIFIC

INSTALLATION INSTRUCTIONS

Installation Manual

Product-Specific Installation Reference

MODEL NUMBER	GUIDE LEVEL	DOCUMENT STATUS
PFS059	Model-Specific	Customer Reference Copy

Helpful Installation Note

This guide is provided for information and planning purposes. Product designs and installation requirements may change over time. Before beginning installation, please review the instructions included with your product and confirm that you are using the most current product-specific instructions. If there is any difference, follow the current instructions supplied with the product.

Need help confirming the correct guide? Contact Rubber Mulch Outlet.

PFS059-Radical Rotator Install

STEP: 1

Attach the in-ground mount support to center spinner mount using four (4) M10*35 bolts, four (8) M10 washers and four (4) M10 Lock Nuts. Repeat for remaining connection points.	

STEP: 2

Attach spinner handlebars to base of spinner using three (3) M8*25 bolts, six (6) M8 washers and three (3) M8 Lock Nuts. Repeat for remaining connection points.	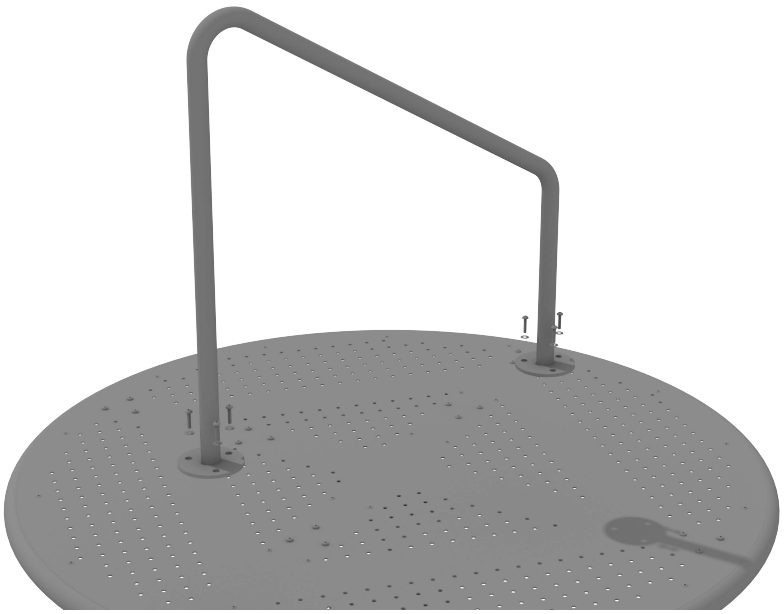

Date Modified: 09/12/19

PFS059-Radical Rotator Install

STEP: 3

Radical Rotator requires a 18” Wide x 18” Deep footing for each mount. The mounts are designed for use with 12" of safety surfacing, if less surfacing is being used footers should be dug deeper to accommodate the difference. The distance from the safety surface to the platform should be either greater than 9" OR less than 3.5"	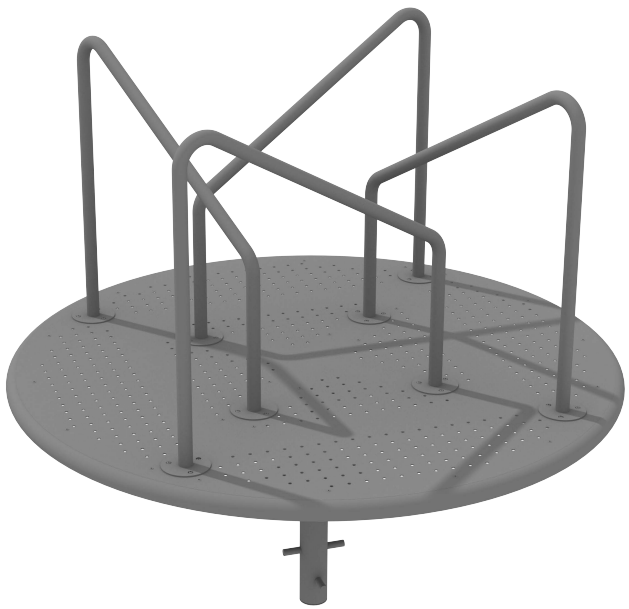

Date Modified: 09/12/19